


Please read the following manual carefully to ensure you get the most out of your desk clock.

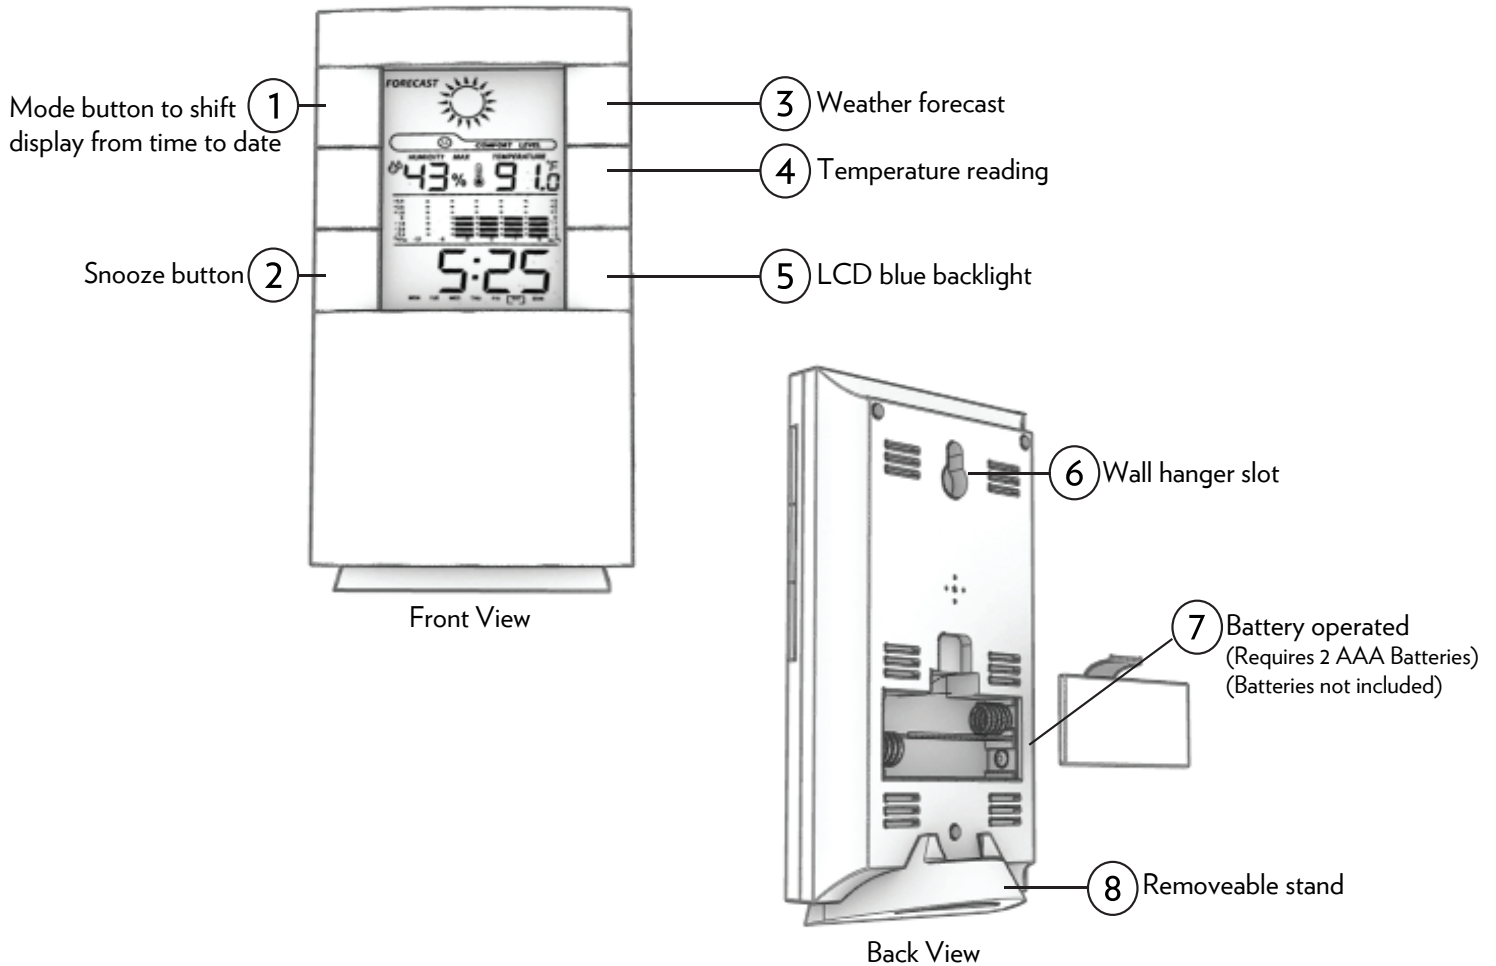

### About the Desk Clock

- Displays day, time, and date
- Displays indoor temperature and humidity
- Includes alarm clock with snooze feature
- Displays weather forecast
- Great desk accessory for home or office

### WARNINGS!

- Do not expose this item to water or fire
- Do not store device in high temperature conditions, such as a car.

## Setting the Time

1. Press the “MODE” button for 4 seconds. The digital clock will begin to flash.
2. Use the “UP” or “DOWN” buttons to set the hour.
3. After the hour is selected, press the “MODE” button again to set the minutes.
4. Use the “UP” or “DOWN” buttons to set the minutes.
5. Press the “MODE” button when done.

## Setting the Calendar

1. Press the “MODE” button once to set calendar.
2. Press and hold the “MODE” button for 4 seconds
3. The digital year will flash. Press the “UP” or “DOWN” button to set the year. After the year is selected, press the “MODE” button.
4. The digital month will flash. Press the “UP” or “DOWN” button to set the month. After the month is selected, press the “MODE” button.
5. The digital day will flash. Press the “UP” or “DOWN” button to set the day. After the day is selected, press the “MODE” button.

## Setting the Alarm

1. Press the “MODE” button twice to set alarm.
2. Press and hold the “MODE” button for 3 seconds.
3. The digital clock will begin to flash.
4. Use the “UP” or “DOWN” buttons to set the hour of the alarm.
5. After the hour is selected, press the “MODE” button again to set the minutes.
6. Use the “UP” or “DOWN” buttons to set the minutes of the alarm.
7. Press the “MODE” button when done.
8. To snooze the alarm: Press the “SNZ” button.
9. To turn off the alarm: Press the “UP” button.  
(You can also use the “UP” button to turn ON the alarm.)

## Max/Min Temperature and Humidity

By pressing the “MAX/MIN” button you can check the maximum and minimum temperature and humidity.

## Blue Back-light

Press “LIGHT” or “SNZ” to turn on the blue back-light.

## Weather Forecast

There are 4 weather symbols: Sunny, Semi-Sunny, Cloudy, Rainy

## Change 12/24 Hour Format

In the time mode, press the “UP” button for 3 seconds to switch the 12/24 hour format.

## Change from Celsius to Fahrenheit

In the time mode, press the “DOWN” button for 3 seconds.

## Battery Replacement

When LCD digital display is unclear, it's usually a sign that the batteries need to be replaced.

If the alarm sound is too low, it's a sign that the batteries need to be replaced.

The desk clock requires 2 (AAA) batteries.

**Questions/Comments? Email us at [support@keyscaper.com](mailto:support@keyscaper.com)**