
# Weather Station/Desk Clock Product Manual

Please read the following manual carefully to ensure you get the most out of your desk clock.

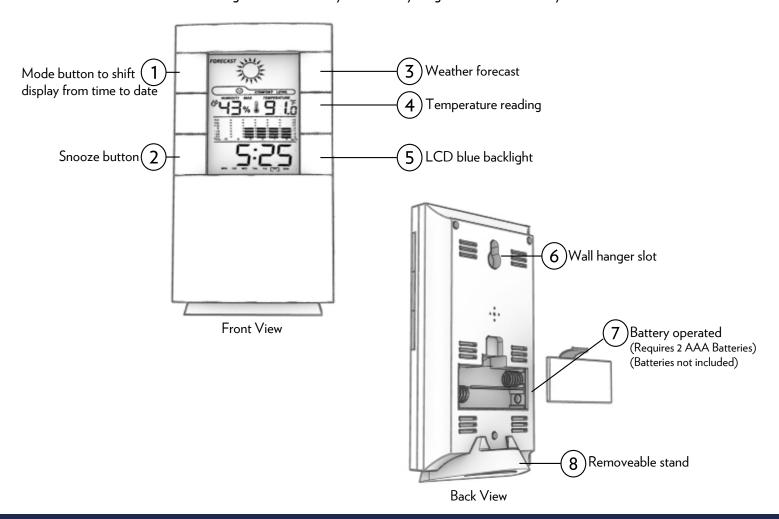

#### About the Desk Clock

- Displays day, time, and date
- Displays indoor temperature and humidity
- Includes alarm clock with snooze feature
- Displays weather forecast
- Great desk accessory for home or office

#### **WARNINGS!**

- Do not expose this item to water or fire
- Do not store device in high temperature conditions, such as a car.

## Setting the Time

- 1. Press the "MODE" button for 4 seconds. The digital clock will begin to flash.
- 2. Use the "UP" or "DOWN" buttons to set the hour.
- 3. After the hour is selected, press the "MODE" button again to set the minutes.
- 4. Use the "UP" or "DOWN" buttons to set the minutes.
- 5. Press the "MODE" button when done.

- Setting the Calendar

  1. Press the "MODE" button once to set calendar.
- 2. Press and hold the "MODE" button for 4 seconds
- 3. The digital year will flash. Press the "UP" or "DOWN" button to set the year. After the year is selected, press the "MODE" button.
- 4. The digital month will flash. Press the "UP" or "DOWN" button to set the month. After the month is selected, press the "MODE" button.
- 5. The digital day will flash. Press the "UP" or "DOWN" button to set the day. After the day is selected, press the "MODE" button.

#### Setting the Alarm

- 1. Press the "MODE" button twice to set alarm.
- 2. Press and hold the "MODE" button for 3 seconds.
- 3. The digital clock will begin to flash.
- 4. Use the "UP" or "DOWN" buttons to set the hour of the alarm.
- 5. After the hour is selected, press the "MODE" button again to set the minutes.
- 6. Use the "UP" or "DOWN" buttons to set the minutes of the alarm.
- 7. Press the "MODE" button when done.
- 8. To snooze the alarm: Press the "SNZ" button.
- 9. To turn off the alarm: Press the "UP" button.

( You can also use the "UP" button to turn ON the alarm.)

# Max/Min Temperature and Humidity

By pressing the "MAX/MIN" button you can check the maximum and minimum temperature and humidity.

## Blue Back-light

Press "LIGHT" or "SNZ" to turn on the blue back-light.

#### Weather Forecast

There are 4 weather symbols: Sunny, Semi-Sunny, Cloudy, Rainy

# Change 12/24 Hour Format

In the time mode, press the "UP" button for 3 seconds to switch the 12/24 hour format.

#### Change from Celsius to Fahrenheit

In the time mode, press the "DOWN" button for 3 seconds.

## Battery Replacement

When LCD digital display is unclear, it's usually a sign that the batteries need to be replaced.

If the alarm sound is too low, it's a sign that the batteries need to be replaced.

The desk clock requires 2 (AAA) batteries.