 


keyscaper[®]

6000 mAh Powerbank with Fan

Product Manual

Please read the following manual carefully to ensure you get the most out of your Powerbank + Fan.

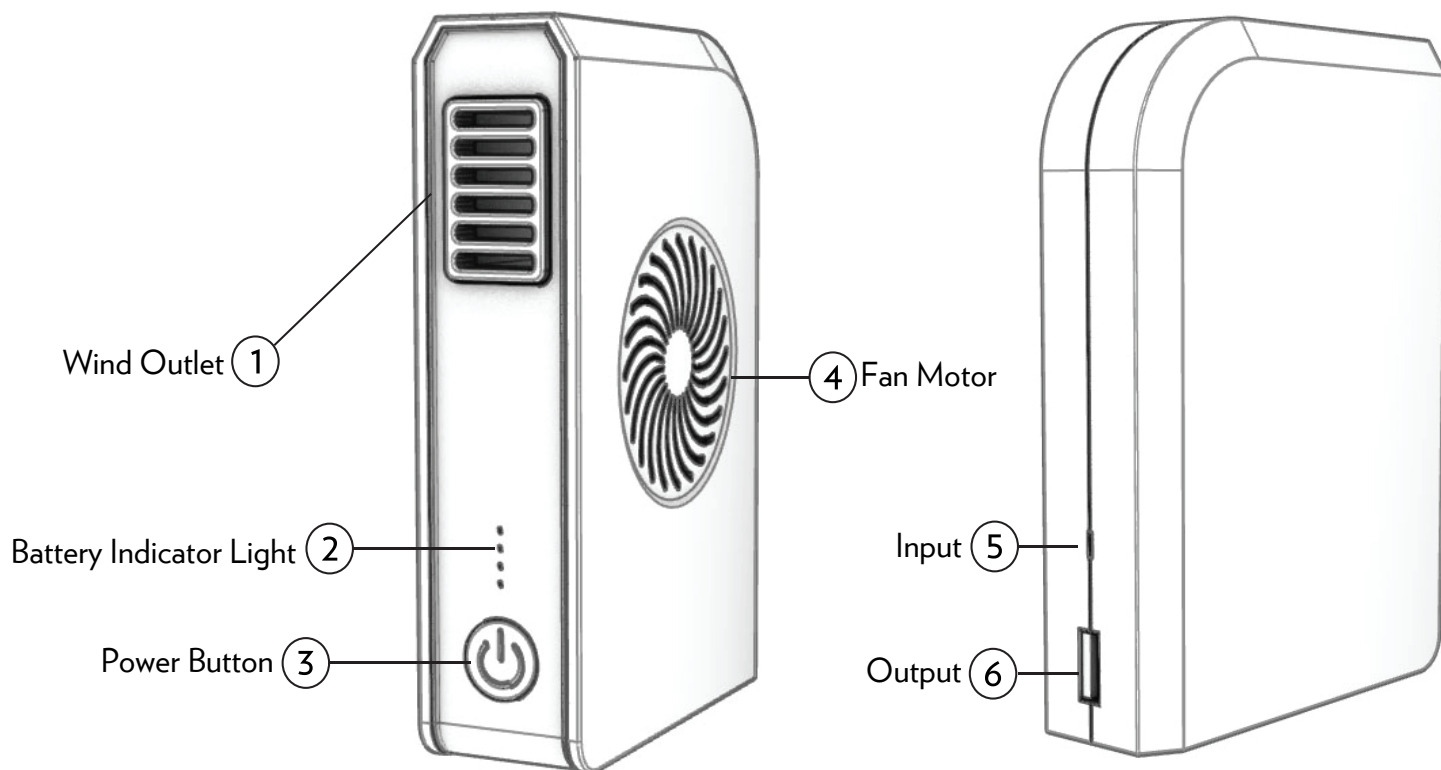

About the Powerbank + Fan

- 6000 mAh battery is powerful enough to charge multiple cell phones and tablets.
- The fan has 3 speeds: Max / Medium / Low
- The angle of the Wind Outlet (1) can be adjusted.
- The fan can be operated while charging your device.
- Fan operating time usage can range from 7-12 hours


WARNINGS!

- Do not expose this product to water or fire.
- Do not insert anything into the air outlet.
- Do not store device in high temperature conditions, such as a car.
- Keep away from children, this is not a toy.

How To Use:

Charging the Battery

1. Using the provided cable, connect the Micro USB end to the Input (5) insert of the Powerbank.
2. Connect the USB end to any charging port.

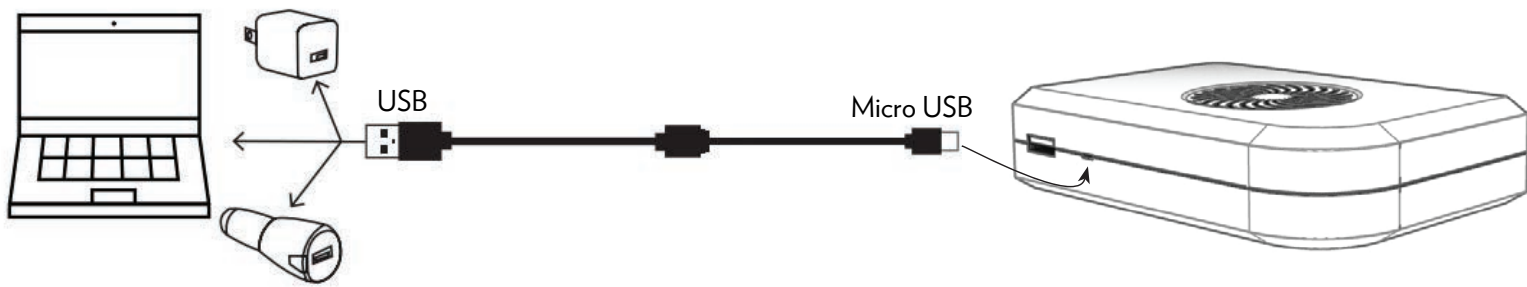


3. Charging of the Powerbank + Fan will start automatically.
4. The Battery Indicator Light (2) on the Powerbank will show the level of charge as it progresses.

How To Use:

Charging your device

1. Using the provided cable, connect the USB end to the Output (6) insert of the Powerbank.
2. Connect the Micro USB end to your device.

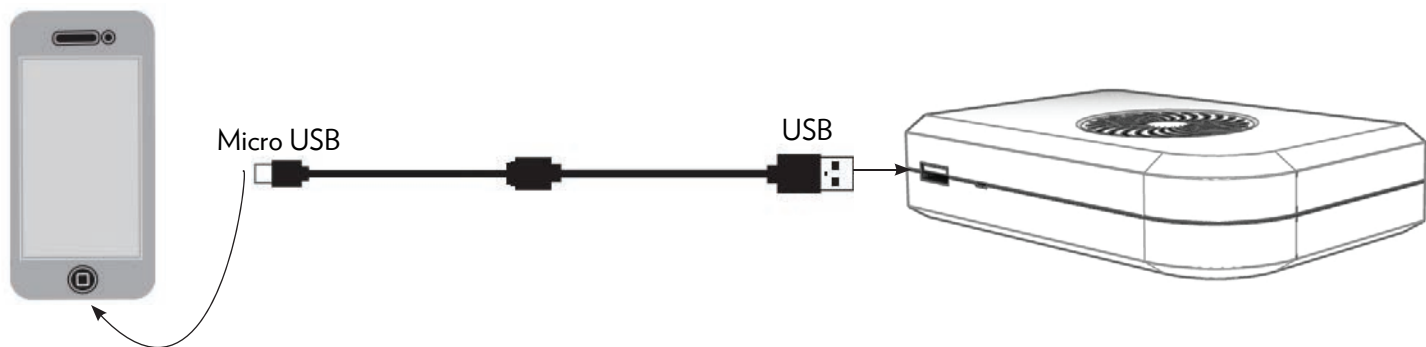

3. Charging of your device will start automatically.

Please note: iPhone users will require their own cable to charge the device, but the same process (Steps 1-3) can be used.

How To Use:

Operating the fan

1. To turn the fan on, click the Power Button (3) twice. The fan will automatically start on max speed.
2. To decrease fan from max to medium speed, click on the Power Button (3) once.
3. To decrease fan speed from medium speed to low speed, click on the Power Button (3) once.
4. To turn off the fan, hold the Power Button (3) for 3 seconds.

