

Switch Plates

Please read the following manual carefully to ensure you get the most out of your switch plate.
These instructions apply to single/double rocker and single/double toggle style switch plates.

To start, separate the front plate from the back plate and install the back plate onto the switch-box with the included screws and mini-screwdriver.



Then, simply snap the front cover in to place, starting with the top edge.
You can easily remove it again if you need to by gently prying up from the bottom to release the clips.

