



Sport Shield Instruction Manual



OVERVIEW:

Thank you for purchasing this AquaTech Sport Shield. Each Sports Shield is designed to protect your camera equipment from elements produced by harsh weather environments. Such as rain, dust, dirt and sand.

The AquaTech sports shield is made with durable “Antartech” 3 ply waterproof breathable fabric that is designed to keep your camera and lens dry, clean and safe from the elements.

The Sports shield comes in five sizes to insure that you have a proper fit for the best protection.

Each Sport shield requires the use an AquaTech eyepiece (sold separately) to seal the Sport Shield around the camera eyepiece.

EYEPiece INSTRUCTIONS:

Remove the original eyepiece on the camera and install the appropriate AquaTech eyepiece.

CEP-1, CEP-1x, CEP-7, AND NEP-80

After the original Eyepiece is removed, line up the AquaTech eyepiece directly above the viewfinder. Ensure that the AquaTech Eyepiece slides into the groove on the camera's viewfinder then push down firmly.

NEP-1

Close the eyepiece shutter curtain, then remove your Nikon camera's eyepiece by unscrewing from the viewfinder in a counter clockwise direction.

Line the AquaTech Eyepiece threads with that of the camera's viewfinder. Install the AquaTech Eyepiece by screwing it down in a clockwise direction until it locks into place. You can then attach your Nikon eyepiece by screwing it into the AquaTech Eyepiece

SPORTSHIELD INSTRUCTIONS:

Attach the lens to the camera body, then unzip the Sport Shield and drape it over the camera and lens.

Pull the Neoprene material over the plastic AquaTech eyepiece to ensure that there is a tight seal around the eyepiece area.

After the Sport Shield is attached to the eyepiece and properly oriented on the camera and lens, fully zip both zippers and pull the neoprene on the end of the lens tightly around the end of the lens and fasten with the hook and loop fastener.