



## Strike Flash Housing Instruction Manual

### FEATURES:

**Flash Housing-** Clear casing that suits your professional flash.

**Flash Bolts-** Included are four M6x18 bolts. Three are used for sealing the Flash Sport Housing and there is one extra included for back up.

**Grey Sealing O-Ring-** This o-ring seals between the Backplate and Flash Sport Housing.

**Flash Mount-** Bolts to the top of your Sport Housing using two M5x10 bolts.

**Flash Bulkhead-** The (black) dry connector located on the side of your Flash Sport Housing. The flash bulkhead is only waterproof if the cap is on or if the sync cord is connected.

**Sync Cord-** The 16 inch (400mm) cable that connects between your Flash Sport Housing and Camera Sport Housing. This cord is only waterproof if caps are screwed on or if it is connected to your Flash Sport Housing and Camera Sport Housing.

**Camera Hot Shoe-** This piece connects to the hot shoe of your camera then to the Flash Bulkhead wires on the inside of your housing. **This piece is fragile so handle with care.**

**6mm Hex Key-** This tool is used for tightening down the Flash Sport Housing to the mount.

**5mm Hex Key-** This tool is used to bolt down the Backplate.

**4mm Hex Key-** This tool is used to bolt down the Flash Mount.

### **Instructions:**

Place the flash inside the Flash Housing, lock into place using the flash hot shoe lock on your flash. Ensure the main O-Ring is in place and clear from any dirt or grit. Tighten the back plate onto the Flash Housing with the M6x18 Bolts, take care to evenly tighten and DO NOT over tighten. You should see an even amount of pressure on the O-Ring completely around the seal.

Attach the Flash Mount to the centre of your Sport Housing using the two supplied bolts and the 4mm Hex key. Place the Flash Housing into the mount and lock into place using the bolt located in the base of the Flash Housing.

Remove the flash Sync bulk head caps from both the flash housing and the Sport Housing. Please ensure there is small O-Ring sitting in the groove of these flash sync Bulk heads. Connect the Sync Cord to the flash Sync bulk

head on both the Sport Housing and Flash Housing. Applied downward pressure to lock into place and tighten via screwing the sync lead cap into place. Please Take care not to over tighten as this may split the O-Ring.

Connect the Camera Hot Shoe connector into the internal flash connection of the Sport Housing. These are Male / Female pin configuration and should be connected with care as parts are very fragile.

Before placing your camera inside the Sport Housing, slide the Hot Shoe connector onto the Hot Shoe of your camera. Carefully slide your camera into place and test the flash before entering the water.

### **IMPORTANT:**

-Do not over tighten the Backplate when sealing. Doing so can damage the Flash Sport Housing.