

## REQUIRED TOOLS

### CEILING INSTALLATION

Lillagunga Curl Hooks  
(or similar)

Power drill and a drill bit  
Pencil, and a measuring tape

Ladders, a tall chair or similar to  
reach the ceiling

### TREE/BEAM INSTALLATION

Lillagunga Disco Kit  
(or similar)

Ladders, a tall chair or similar to  
reach the tree branch or beam

**WARNING:** Do not place the swing near an open fire or other sources of strong heat, such as electric


**WARNING:** Avoid placing the swing over hard floor/ ground materials such as asphalt, concrete or glazed tile. A shock-absorbing padding under the swing is recommended.

## INSTALLATION

1. Ensure there is enough space in front and behind, and reserve at least 50 cm on both sides of the swing seat.
2. Use the ladders to reach the ceiling, wooden beam or tree branch. Make sure that the ladders are stable and stand firmly, working vertically may distract your balance.
3. **Tree branch or beam:** adjust the length of the strap that comes with the Disco Kit, and connect the carabiner hook with the swivel.  
**Ceiling:** assemble the curl hook by following the instructions that comes with your Disco Kit.
4. Ensure that the swing height is adjusted right, the swing seat should be at least 45 cm from the ground.
5. Make sure that all parts are tightly in place.
6. Always test before use.

## ADJUSTING HEIGHT

1. Loosen the knot of the UPPER Rope lock by pulling up the rope (fig. 1). Do NOT adjust the lower rope lock.
2. Slide the rope block up and down to adjust (fig. 2)
  - a. To raise the swing: move the rope lock DOWN by sliding the looped rope (B)
  - b. To lower the swing: move the rope lock UP by sliding the looped rope (B)
3. Pass the loose end (A) back under the loop, and secure the knot by pulling the rope (B) from opposite directions (fig. 3).
4. On our web page ([www.lillagunga.com/pages/guides](http://www.lillagunga.com/pages/guides)) you can find a video that shows how to adjust the height of the ropes.

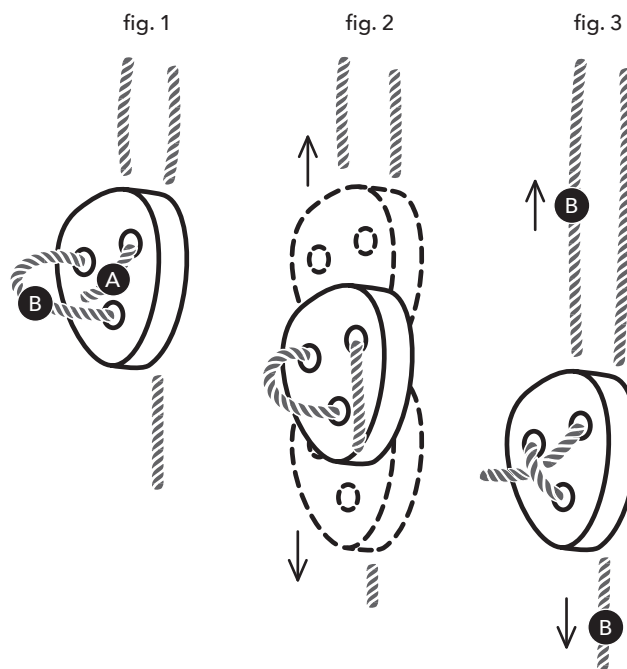

**NOTE** If you are doing a tree installation, the primary height adjustment shall be done with the strap included in the Disco Kit.

## SAFETY IN MIND

**Safety shall always be taken very seriously.**

1. Do a routine check of the swing before use. See: "Maintenance"
2. Avoid jumping of the swing in high speeds.
3. Do not swing with a child in your arms.
4. Teach and train your children, particularly younger.

**NOTE** Proper use and maintenance of the swing will extend the lifetime of your product, and prevent possible accidents.


**WARNING:** NEVER leave a child unattended. A parent should always have visibility to the swing, and be within reachable distance from the swing.

## MAINTENANCE

**The swing shall be inspected once a month.**

- Frequently inspect all parts of the swing. In particular the rope lock, swivel, and curl hook shall be held under inspection as they may become safety risks if damaged or worn out.
- If a fracture clearly visible to the eye is identified in a rope lock, remove and replace it.
- Inspect the ropes by sliding your palm gently over the rope. If the rope is damaged or torn, the braid may loosen up, and thus it becomes a safety risk.
- If a part gets worn out or damaged stop using the product immediately and replace it to a new original Lillagunga part.

**NOTE** Replacement parts and services are sold on our website.

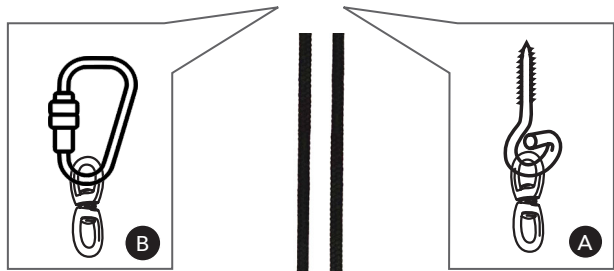


**Swivel (1 pcs)**  
For ceilings the swivel is attached onto a curl hook (A)

For a tree branch or wooden beam the swivel is attached onto the carabiner hook (B)

**Rope lock (1 pcs)**  
Used for adjusting height

**Rope (1 pcs)**  
Rope length varies between 3 - 5 meters depending on product variant

**Swing seat (1 pcs)**  
Material: Walnut  
Size: 335mm x 250mm x 17mm  
Weight: ~780g

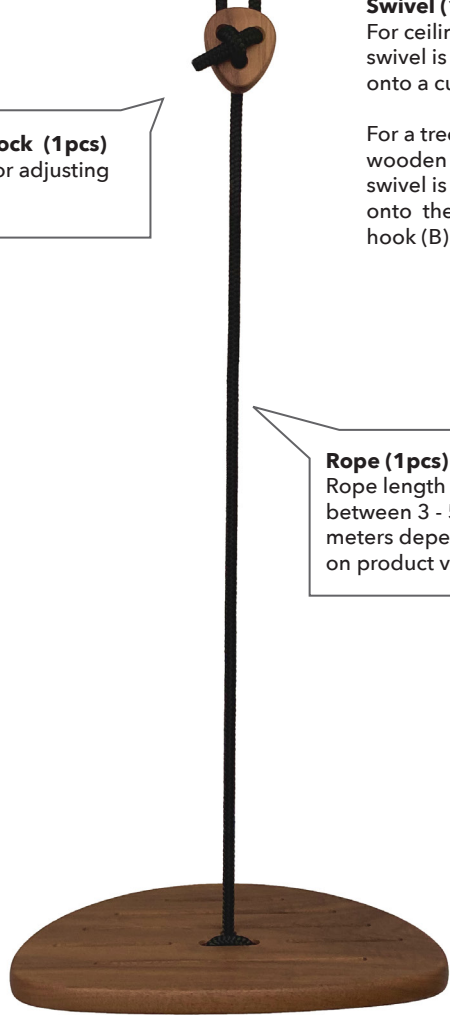

#### OUTDOOR USE

Sun and rain will eventually cause changes in materials. These may appear as fading colors, and possibly minor fractures or slight change in shape. Therefore we recommend to take the swing indoor if not in use for longer periods of time. Wooden parts that have aged may be refurbished with sandpapering the surface and then applying transparent oil for wood.

Contact us for further details.

#### TECHNICAL DATA

Package weight: ~1150g

Package size: 364mm x 255mm x 85mm

Materials: walnut, polypropylene, stainless steel

Seat dimensions: 335mm x 250mm x 17mm

Rope diameter: 10mm

Rope length: 3-5m depending on product variant

#### SUPPORT

We are happy to assist you in all matters related to Lillagunga.

We do our best to respond to all incoming emails within 24 hours at: [info@lillagunga.com](mailto:info@lillagunga.com). Please also refer to our website for additional support such as product returns or claims.

#### WARRANTY

3 years on all wooden and metal parts, 2 years on ropes. All related to material or workmanship defects. All related to material or workmanship defects. Our warranty does not apply to defects from normal wear and tear, product misuse, after market product alterations, or failure to follow instructions supplied with the product.

# lillagunga

## DISCO

### AN OUTDOOR SERIES PRODUCT

#### USER MANUAL

ver. 1.0

READ THIS MANUAL CAREFULLY BEFORE  
INSTALLING AND USING YOUR LILLAGUNGA PRODUCT

<b>NOTE</b>	This manual guides you through the installation and use of your Lillagunga Disco to a ceiling, wooden beam or tree branch.
<b>NOTE</b>	Lillagunga Disco Kit is not included in this package unless separately purchased.
<b>NOTE</b>	This product is intended for home use. The product shall be used by one (1) person at a time.
<b>NOTE</b>	This product is NOT intended for children under the age of 3 years.
<b>NOTE</b>	The maximum permitted weight is 60 kg.
<b>WARNING!</b>	We do not take ANY responsibility for possible accidents or damage caused by failure or neglect to follow, or misunderstanding this manual.