

lillagunga

TODDLER

USER MANUAL

ver. 1.3 / JAN 2020

READ THIS MANUAL CAREFULLY BEFORE
INSTALLING AND USING YOUR LILLAGUNGA

NOTE This manual guides you through the installation and use of a Lillagunga Toddler swing to a ceiling.

NOTE This product is primarily intended for indoor use. Please refer to "outdoor use" for more information.

NOTE This package does NOT include curl hooks.

NOTE This product is intended for home use. The swing shall be used by one (1) person at a

NOTE This product is intended for children in the age between 6 months to 3 years.

NOTE The maximum permitted weight is 15 kg, and the maximum length of the child is 92 cm.

WARNING! We do not take ANY responsibility for possible accidents or damage caused by failure or neglect to follow, or misunderstanding this manual.

REQUIRED TOOLS

Power drill and a drill bit

(type and size dependent on hook model and ceiling material)

Pencil

Ladders, a tall chair or similar to reach the ceiling

Measuring tape


WARNING! Do not place the swing near an open fire or other sources of strong heat, such as electric bar fires, gas fires etc due to the risk of fire.

WARNING! Avoid placing the swing over hard floor ground materials such as asphalt, concrete or glazed tile. Use softening materials to reduce impact in case of an accident.

INSTALLATION

1. Reserve at least two (2) meters in front/behind, and at least fifty (50) cm on both sides of the swing seat.
2. Use the ladders to reach the ceiling. Make sure that the ladders are stable and stand firmly, drilling vertically may distract your balance.
3. Use a measuring tape and mark two points at 40 cm apart from each other. Drill two holes, and screw the hooks into the ceiling.
4. Rotate the ends of the curl hooks pointing to the side, linear with the swing seat.
5. Make sure that both hooks are tightly in place.
6. Test before use.

WARNING! Ensure that the hooks will be attached to a bearing part of a ceiling. Consult an expert in uncertainty.

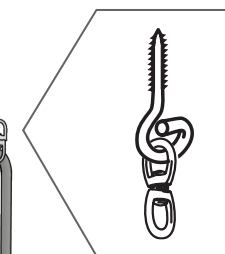

Swivels (2pcs)

Shall be attached onto the curl hooks

Ropelocks (4pcs)

The two higher ropelocks are used for adjusting height

Ropes (2pcs)

Rope length varies between 3,2 - 5,2 meters

Weight for whole product:


2200-2300 g

Seat (1pcs)

A seat made of leather or textile in two-parts

Swing (1pcs)

Ends can be detached by opening the screws (6 pcs.)
Material: Birch or oak
Size: 265x305x235 mm

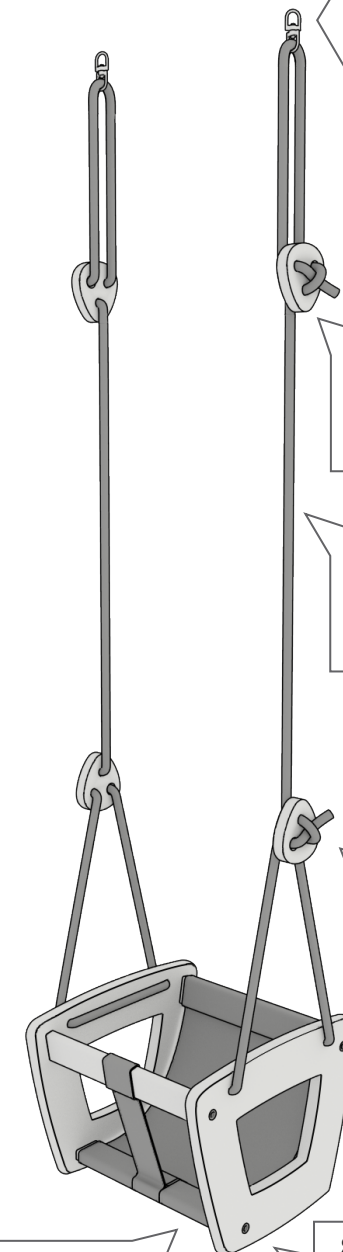


ADJUSTING HEIGHT

1. Loosen the knot of the **UPPER ROPE LOCK** by pulling up the rope (A) end (fig. 1). Do NOT use the lower rope locks for height adjustment.
2. Slide the rope lock up and down to adjust (fig. 2)
 - a. To raise the swing: move the rope lock down by sliding the looped rope (B)
 - b. To lower the swing: move the rope lock up by sliding the looped rope from
3. Once the height is adjusted pass the loose end (A) back under the loop, and tighten the knot by pulling the rope (B) in opposite directions (fig. 3).

WARNING!

The lowest point of the swing shall not be more than 60 cm from the ground.

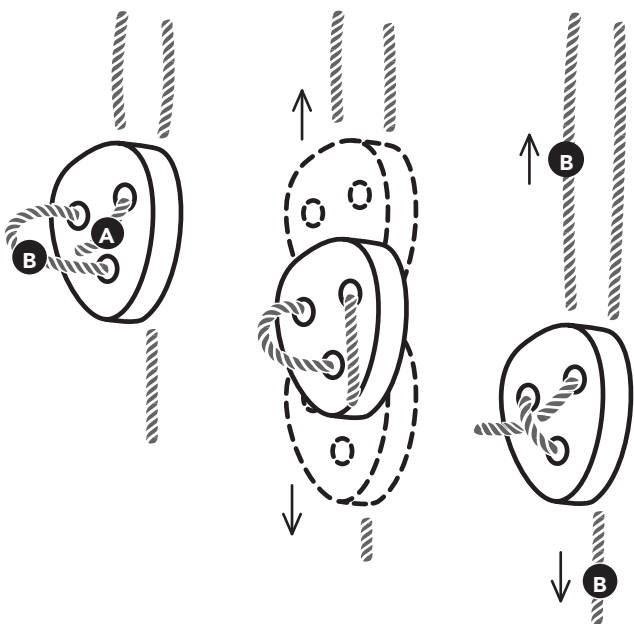

SAFETY IN MIND

Safety shall always be taken very seriously.

1. Do a routine check of the swing before use. See: "Maintenance"
2. Ensure that the swing height is adjusted right, and that the swing is in symmetric balance.
3. Always use the safety belt when swinging. The safety belt must be tighten properly around the waist to prevent the child from standing/sitting up.
4. Avoid hard speeds and sideway swinging.

NOTE

A careful use and maintenance of the swing according to this manual will extend the lifetime of the Lillagunga swing, and prevent possible accidents.

WARNING!

NEVER leave a child unattended. A parent should always have visibility to the swing, and be within reachable distance from the swing.

OUTDOOR USE

This product is primarily intended for indoor use. Outdoor use is at own responsibility with the following guidance:

- The swing must always be placed under shelter, properly protected from rain.
- Sun and moisture will eventually cause changes in materials. These may appear as color changes, fractures or slight change in shape (particularly the wooden parts).
- Outdoor use weakens all parts and thus shortens the lifetime of the swing. As outdoor conditions are very varying our warranty applies only for indoor use.
- Always take the swing indoors when not in use.

NOTE

This package does not include components or parts that enables the attachment of the swing to a tree or to branches.

MAINTENANCE AND SAFETY

The swing must be inspected once a month.

- All parts shall be inspected on a regular basis as they may become safety risks if damaged or worn out.
- Check the side screws, and tighten if necessary.
- If a fracture (clearly visible to the eye) is identified in a rope lock, remove and replace it.
- Inspect the ropes by sliding your palm gently over the ropes. If the rope is damaged or torn, the braid may loosen up. Remove and replace.
- The leather and textile seat is made of parts that are sewn together. If a seam is starting to loosen up the seat must be replaced.

CONTACT

We are happy to assist you in all matters related to Lillagunga. We do our best to respond to all incoming emails within 24 hours at:

info@lillagunga.com

WARRANTY

INDOOR USE: 3 years on all wooden and metal parts, 2 years on ropes and leather parts. All related to material or workmanship defects.

This warranty does not apply to defects from normal wear and tear, product misuse, after market product alterations, or failure to follow instructions supplied with the product.

Uniq Works Ltd
www.lillagunga.com

