

+1 (877) 209-8179 Fax: +1 (813) 783-2407


ELECTRIC AIR PRESSURE GAUGE

- A Units type: Pressure Per Square Inch (PSI)
- B. Air pressure gauge display: digital type 0 ~ 200 psi; analog led 0 ~ 200 psi
- C. If pressure exceeds the display range, digital display will show psi of 200 psi
- D. If air pressure PSI is higher than 200 psi for 3 sec or more, the digital number will flash for warning
- E. LED analog indicator (there are 20 pcs of led light around the side)

0~100 psi	101~150 psi	151~200 psi
Red led x 10 pcs	Yellow led x 5 pcs	Green color x 5 pcs

Function:

- Turn on and turn off the engine: red, yellow, and green led will scan once.
- Display voltage of battery fuction: Turn ignition key to run, display battery voltage for 60 sec.
- Display fucton: Display air pressure value, number and led color will correspond.

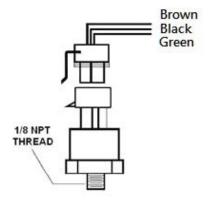

Air Pressure Sensor


Installation instructions:

Black - air press sensor ground wire (black)

Green - air press sensor wire (green)

Brown - air press sensor wire (brown)

Do not over tighten sensor (12-14 ft/lbs)

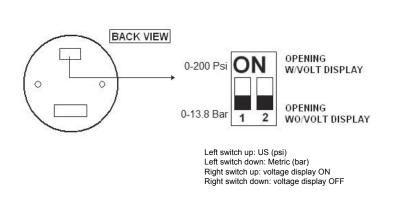

Air Pressure Gauge

Installation instructions:

Red - Connect to 12V Ingition Positive (Keyed Power On)

Yellow - Connect to Battery Positive (+)

Black - Connect to Ground (-) (Splits into two separate leads, ground both to the same point)

Green - Connect to air pressure sensor green wire

Brown - Connect to air pressure sensor brown wire