


Tech support: 877-209-8179




Remove spare tire Remove heatshield Remove spare tire crank assembly



Cut down half circle as far as you can Using a sawzall or cutoff wheel.

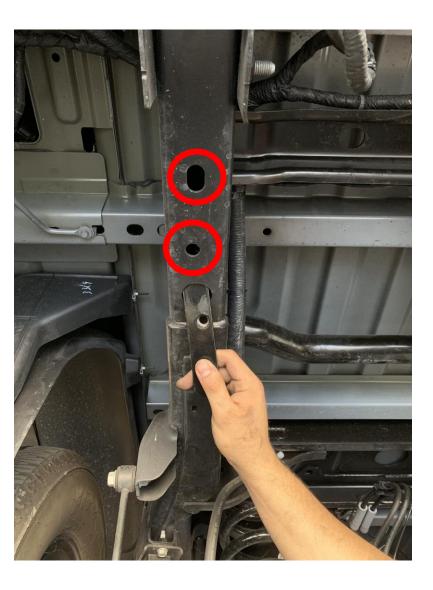



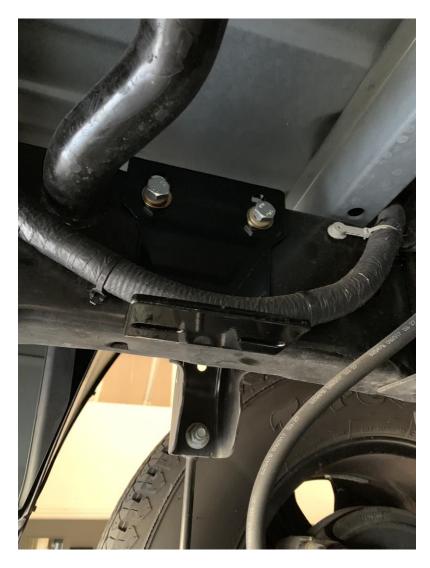

Attach bracket to factory threaded holes using provided hardware. If you have a factory 5<sup>th</sup> wheel, this bracket will not be used.





