


ELECTRIC AIR PRESSURE GAUGE

- A Units type: Pressure Per Square Inch (PSI)
- B. Air pressure gauge display: digital type 0 ~ 200 psi ; analog led 0 ~ 200 psi
- C. If pressure exceeds the display range, digital display will show psi of 200 psi
- D. If air pressure PSI is higher than 200 psi for 3 sec or more, the digital number will flash for warning
- E. LED analog indicator (there are 20 pcs of led light around the side)

0~100 psi	101~150 psi	151~200 psi
Red led x 10 pcs	Yellow led x 5 pcs	Green color x 5 pcs

Function:


- Turn on and turn off the engine: red, yellow, and green led will scan once.
- Display voltage of battery fuction: Turn ignition key to run, display battery voltage for 60 sec.
- Display fucton: Display air pressure value, number and led color will correspond.

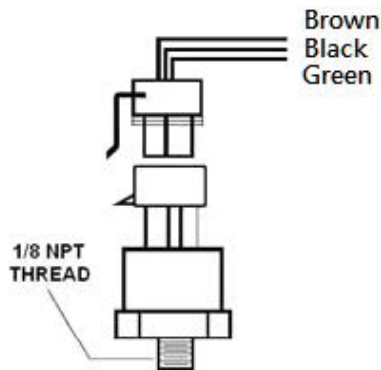

Air Pressure Sensor

Installation instructions:

- Black - air press sensor wire (black)
- Green - air press sensor wire (green)
- Brown - air press sensor wire (brown)
- Do not over tighten sensor (12-14 ft/lbs)

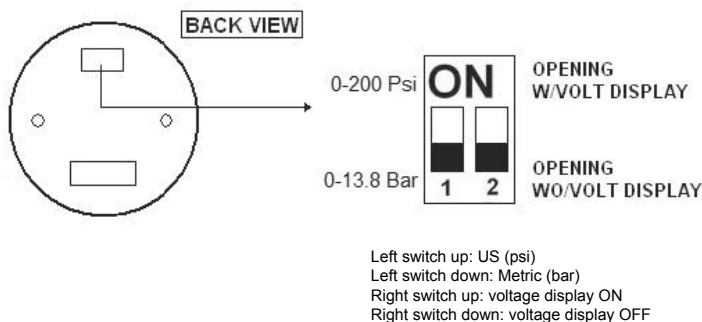

Air Pressure Gauge

Installation instructions:

- Red - Connect to 12V Ingition Positive (Keyed Power On)
- Yellow - Connect to Battery Positive (+)
- Black - Connect to Ground (-) (Splits into two separate leads, ground both to the same point)
- Green - Connect to air pressure sensor green wire
- Brown - Connect to air pressure sensor brown wire