



www.designerfirebox.com

USER MANUAL

Table of Contents

Technical Data	2
Safety	2
Operating	3
Assembly	4
Free Standing Option	
Wall Mounting	
Built in Construction	5
Operating Instructions	6
Main Power Button	
Control Panel Operation	
Remote Control Operation	
Cleaning and Care	7
Maintenance	
Storage	
Hints on Disposal	8
Declaration of Conformity	8

Dear Customer,

Thank you for purchasing a Wärme Firebox. Please read this user manual carefully and take care of the following hints to avoid damages. Any failure caused by ignoring the items and cautions mentioned in this user manual are not covered by our warranty.

Technical Data


Item number	WF-20P
Power supply	230 V ~ 50 Hz
Power consumption	1 kw & 2kw settings








Safety Instructions

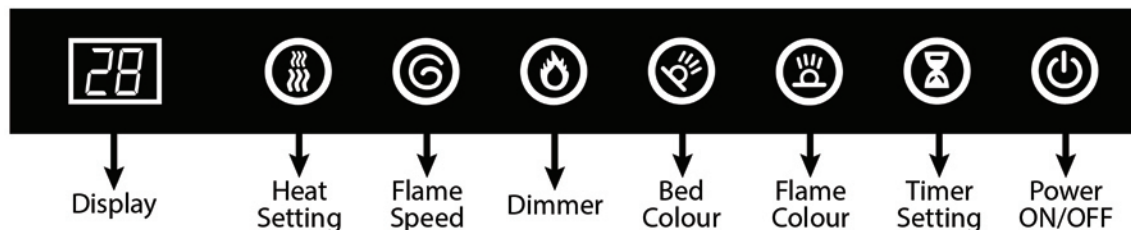- Read all instructions carefully before use.
- Make sure the voltage is the same as that indicated on the rating plate of the appliance.
- Do not operate this appliance if the cable or plug becomes damaged.
- Keep the appliance and cable away from sources of heat, sharp objects or anything that may cause damage.
- If the power cord is damaged it must be replaced by the manufacturer, a service agent or a similarly qualified person in order to avoid a hazard.
- Ensure the appliance is switched off before connecting to the mains power supply.
- Switch off the power supply and disconnect from the main supply when not in use, before cleaning or during any maintenance.
- To disconnect the appliance, switch it "OFF", and then remove the plug from the outlet. Do not pull the cord to disconnect the plug.
- Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.
- Indoor use only. In order to avoid overheating, do not cover the heater.
- To prevent a possible fire, do not block or cover air intakes or exhaust.
- Do not touch the hot surfaces.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
- Always ensure that hands are dry before operating or adjusting any switch on the product or touching the plug and socket-outlet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not leave this appliance unattended when it's in use.
- Do not place the cable under carpets. Arrange cord away from traffic areas so that it will not be tripped over.
- Do not use this heater in the immediate surroundings of a bath, shower or a swimming pool.
- Do not store away until the heater cools down. Store the heater in a cool dry location when not in use.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- It is imperative that the control compartments, circulating blower and its vents are kept clean and dust free.
- Do not operate the heater with the glass door removed, cracked or broken.
- Do not strike or slam the glass door.



Operating Panel



POWER		<p>TURN THE APPLIANCE ON/OFF.</p> <p>NOTE : Make sure the main switch on the top of the Firebox is turned on before operating.</p>
DIMMER		<p>CONTROL FLAME BRIGHTNESS. 5 Settings : (L1-L2-L3-L4-L5) Flame dims from L1 to L5. L5 is the brightest setting.</p> <p>NOTE : To turn all the lights off and just use the heater, hold down this button for 6 seconds until it beeps. If you hold this button down for another 6 seconds until it beeps it returns to normal mode.</p>
TIMER		<p>CONTROL THE TIMER. 8 Settings : (1H, 2H, 3H, 4H, 5H, 6H, 7H, 8H) Press the button until you have the desired time delay.</p>
FLAME SPEED		<p>CONTROL FLAME SPEED. 5 Settings : (V1-V2-V3-V4-V5) Flame speed from V1 to V5. V5 is the fastest setting.</p>
HEATER		<p>CONTROL THE HEATER. Press the button to initiate the heater. (OFF) no heater. (-), Heater blows warm air (1000W) (--), Heater blows hot air (2000W) NOTE : Heater functions cycle from (OFF) (-) (--)</p>
FLAME COLOUR		<p>CONTROL THE FLAME COLOUR. 12 Settings : 1- Red, 2 - Yellow, 3 - Blue, 4 - White, 5 - Red & Yellow, 6 - Red & Blue, 7 - Red & White, 8 - Yellow & Blue, 9 - Yellow & White, 10 - Blue & White, 11 - Red & Yellow & Blue, 12 - MultiColour. NOTE : To run through an automatic flame colour sequence, hold down this button for 6 seconds until it beeps.</p>
BED COLOUR		<p>CONTROL THE FLAME BED COLOUR. 12 Settings : 1- Red, 2 - White, 3 - Green, 4 - Blue, 5 - Purple, 6 - Cyan, 7 - Yellow, 8 - Orange, 9 - Saffron, 10 - Golden, 11 - Verdant, 12 - Lavender. NOTE : To run through an automatic bed colour sequence, hold down this button for 6 seconds until it beeps.</p>

Assembly

The Wärme Firebox can be installed with 3 options:

1. Free standing with the provided feet.
2. Wall hanging with the provided mounting bracket.
3. Built in construction (in wall recessed).

Free Standing

Step 1 : Fixing the feet

1. Use the provided screws to fasten the feet to the bottom of each side.

Step 2 : Removing the glass frame

1. Remove the fixed screw in the lower left hand corner (do not discard it).
2. Lift the glass frame 1-2cm vertically. Then the entire glass frame can be removed from the front.
3. Move the glass frame away from the appliance with the help of a second person.

Step 3 : Placing the decorative crystals in the Firebox

1. Carefully place the crystals in to the bottom tray at the front of the Firebox (crystals may have sharp edges; wear safety gloves and glasses when handling).

Step 4 : Hanging the glass frame

1. Gently push on the glass panel by aligning the 4 hooks until it snaps into position (it will sink down 1-2cm).
2. Secure the glass frame with the screw removed in step 2.

Wall Mounting

Step 1 : Removing the glass frame

1. Remove the fixed screw in the lower left hand corner (do not discard it).
2. Lift the glass frame 1-2cm vertically. Then the entire glass frame can be removed from the front.
3. Move the glass frame 10-20cm away from the appliance, pull out the data cable connector with the help of a second person or put the glass panel down safely to complete separation.

Step 2 : Removing the wall bracket

1. Unscrew the two screws with a Philips screwdriver (do not discard them) from both ends, then remove the pre-attached mounting bracket.

Step 3 : Choosing a wall location

1. Find a safe location.
2. Make sure you have 90cm clearance at the front of the heater.
3. Choose a location near a power outlet, so you don't require an extension cord.

Step 4 : Drilling the holes and attaching the mounting bracket

1. Use a level to align the bracket and mark the holes that need to be drilled with a pencil.
2. Drill the required holes (7/25in or 7mm) in the wall.
3. Insert the wall anchors into the holes using a hammer.
4. Attach the mounting bracket to the wall by fastening the anchor screws into the wall anchors.



Step 5 : Hanging the Firebox on the wall bracket

1. Hang the slot on the back of the Firebox on to the hooks at the left and right sides of the bracket (please hold the appliance to avoid dropping before the installation is finished).

Step 6 : Locking the Firebox on the wall bracket

1. Lock the bracket at both ends with a screw to ensure a solid combination of the Firebox and bracket.

Step 7 : Placing the decorative crystals in the Firebox

1. Carefully place the crystals in to the bottom tray at the front of the Firebox (crystals may have sharp edges; wear safety gloves and glasses when handling).

Step 8 : Hanging the glass frame

1. Connect the data cable connector before hanging the glass frame on the front.
2. Gently push on the glass panel by aligning the 4 hooks until it snaps into position (it will sink down 1-2cm).
3. Secure the glass frame with the screw removed in step 1.

Built In Construction

Step 1 : Removing the glass frame

1. Remove the fixed screw in the lower left hand corner (do not discard it).
2. Lift the glass frame 1-2cm vertically. Then the entire glass frame can be removed from the front.
3. Move the glass frame 10-20cm away from the appliance, pull out the data cable connector with the help of a second person or put the glass panel down safely to complete separation.

Step 2 : Removing the wall bracket

1. Unscrew the two screws with a Philips screwdriver (do not discard them) from both ends, then remove the pre-attached mounting bracket.

Step 3 : Fixing the 4 foot pads

1. Fix the 4 foot pads to the bottom of the Firebox with the screws provided.

Step 4 : Marking the screw holes

1. The appropriate cavity needs to be 2cm bigger each side of the Firebox.
2. Put the Firebox in place and mark the holes which need to be drilled with a pencil.
3. Take the Firebox out the cavity again.

Step 5 : Drilling and inserting the wall anchors

1. Drill the holes (7/25in or 7mm) on the prepared marks.
2. Insert the wall anchors in to the holes using a hammer.

Step 6 : Placing the pads and fixing the Firebox in place

1. Screws pass through the holes from the front of the Firebox.
2. Put the bigger pads behind the Firebox and let the screws pass through the pads.
3. Put the Firebox into the prepared cavity.
4. Fasten the Firebox firmly in to the wall with the screws for each side.

Step 7 : Placing the decorative crystals in the Firebox

1. Carefully place the crystals in to the bottom tray at the front of the Firebox (crystals may have sharp edges; wear safety gloves and glasses when handling).


Step 8 : Hanging the glass frame

1. Connect the data cable connector before hanging the glass frame on the front.
2. Gently push on the glass panel by aligning the 4 hooks until it snaps into position (it will sink down 1-2cm).
3. Secure the glass frame with the screw removed in step 1.

Operating Instructions


Main Power Button

- The main power button is located on the top right hand side of the Firebox as illustrated.
- Press the red main power button to turn on and rock to the other side to turn off.
- The main power button must be turned on for the remote control to work.

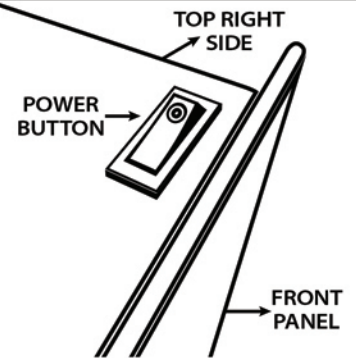

Control Panel Operation

- The touch display panel is shown on the bottom right of your Firebox.

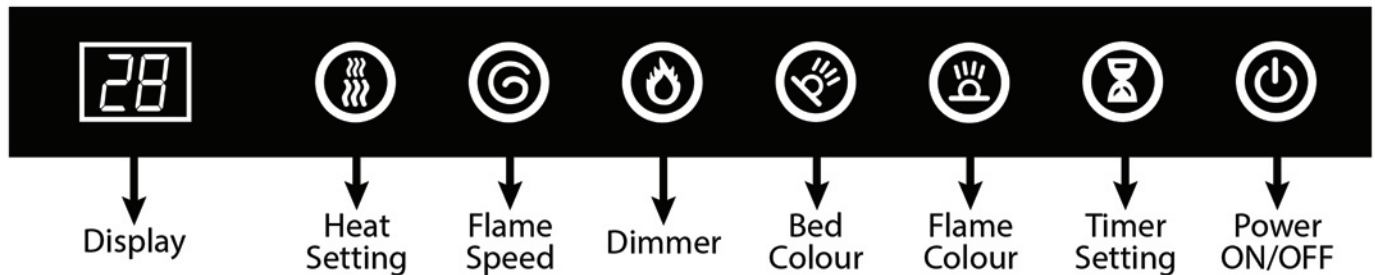

Remote Control Operation

- Move the battery protecting film before use.



REMOTE CONTROL



Cleaning and Care

Maintenance

Always disconnect your Wärme Firebox and let it completely cool before any maintenance. Use a vacuum cleaner to remove dust on the grilles. Clean the outside of the unit with glass cleaner. Never immerse the unit in water nor let water drip into the unit.

Storage

Always disconnect your Wärme Firebox and let it completely cool before storing. If you do not use it for a long period of time store it in the original carton in a dry and ventilated place. Do not place any heavy items on top of your heater as this may cause damage.

Hints on Disposal



According to the European waste regulation 2002/96/EC this symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council or your household waste disposal service.

Declaration of Conformity

Producer: Wärme Limited, Leicestershire, LE7 4UW, UK



This product is conform to the following European Directives:
2004/108/EC (EMC)
2011/65/EU (RoHS)
2006/95/EC (LVD)



www.designerfirebox.com