сна

part no. 9400



Mounting and Use Instructions



Bag down over number plate, making sure to catch number plate top In pocket on back of bag (see Fig. 1.)

- Stretch the elastic band over your odometer or 2. speedometer. Take care that the band does not snag on the reset knob, etc. (see Fig. 1.)
- Separate the quick-release buckles from lower side 3. straps.
- 4. Attach female buckles and webbing loop to fork tube, as shown in Fig. 2 and Fig. 3., or drill through headlight cowl (Fig. 4) and mount with nut, bolt and two large diameter washers (not included.)
- Connect male buckles on bag straps to female 5. buckles on fork tubes and snug bag back towards forks - not too hard, just snug!
- This bag will hold approximately four lbs. of gear, 6. but can become damaged if overloaded. It is intended primarily for a jacket, sweater, or other lightweight but bulky gear.

Cleaning: Open all zippers, remove all inserts and hardware, set machine on light or regular cycle, use cold or warm water and a mild detergent. Hang dry. Do not dry clean or put in dryer. Touch-up cleaning may be done with spray cleaners or detergent and water.

CHASE HARPER USA

3007 Bunsen Ave Unit F, Ventura, CA 93003 · (805) 477-9993



Mounting and Use Instructions



- **Lower Number Plate** 7111 1. Bag down over number plate, making sure to catch number plate top In pocket on back of bag (see Fig. 1.)
- Stretch the elastic band over your odometer or 2. speedometer. Take care that the band does not snag on the reset knob, etc. (see Fig. 1.)
- Separate the quick-release buckles from lower side 3. straps.
- 4. Attach female buckles and webbing loop to fork tube, as shown in Fig. 2 and Fig. 3., or drill through headlight cowl (Fig. 4) and mount with nut, bolt and two large diameter washers (not included.)
- Connect male buckles on bag straps to female 5. buckles on fork tubes and snug bag back towards forks - not too hard, just snug!
- This bag will hold approximately four lbs. of gear, 6. but can become damaged if overloaded. It is intended primarily for a jacket, sweater, or other lightweight but bulky gear.

Cleaning: Open all zippers, remove all inserts and hardware, set machine on light or regular cycle, use cold or warm water and a mild detergent. Hang dry. Do not dry clean or put in dryer. Touch-up cleaning may be done with spray cleaners or detergent and water.

CHASE HARPER USA

3007 Bunsen Ave Unit F, Ventura, CA 93003 · (805) 477-9993

part no. 9400