

Safety (IMPORTANT! Keep for future reference)

Seatylock installation

- Assemble the adaptor and Seatylock on your bike according to instructions.
- Make sure all screws and clamps are well tightened.

Seatylock operation

- Always take special care when connecting the Seatylock to the adaptor.
- Use a 3mm Hex key, on Tightening bolt (G), to adjust tightening level between Adaptor (F) and Lock base (C).
- For a perfect function, keep the Seatylock's components clean.

Warranty


Quality and sustainability of Seatylock products are paramount to us. The same goes for the safety and wellbeing of our customers.

The warranty period applies to all Seatylock products, starting on the date of purchase. In case your product has a manufacturing malfunction, Seatylock team will work together with the retailer to service you in the best way possible.


In case of online purchase please contact us on our website: <http://www.seatylock.com/contact>. Or at info@seatylock.com.

Part description

- A. Saddle
B. Key
C. Lock base

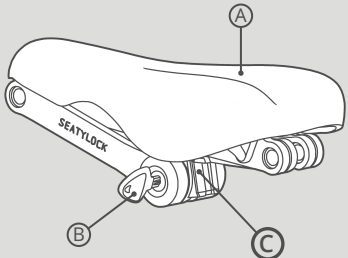


- D. Lever
E. Rails
F. Adaptor
G. Tightening bolt

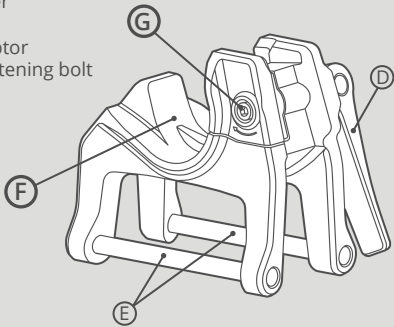


Installation

- ① Release the bolt that secures your seatpost* to the saddle rails.

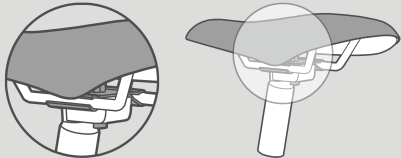

- ② Remove the saddle and put it aside


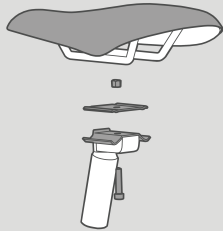


* Seatpost system may vary, rails diameter and the gap between them are always standard

- ③ Replace the saddle with the seatylock adaptor (lever should be on the right side)



- ④ Secure the seatpost bolts on the adaptor's rails (tighten the bolts after making adjustments)

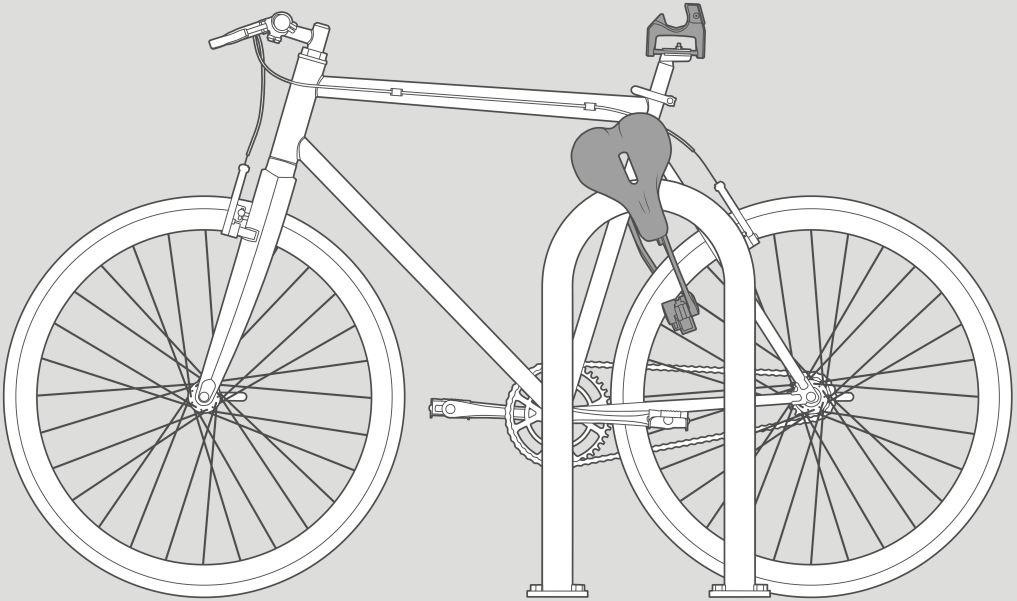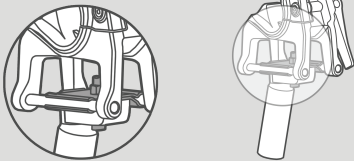


Thank you for sharing the passion for comfortable security with us. We are happy you have just received your Seatylock and joined our growing family. The Seatylock team are passionate about urban riders and making urban riding a part of everyday life. We are constantly looking for ways to improve the comfort for riders and their daily life on their bike, while maintaining a high level of security. Being enthusiastic urban bike riders ourselves, we poured our heart and soul into making sure that Seatylock is everything a rider can ask for; we've engineered it out of ONLY the highest quality materials in order to make sure it's not only strong, but also durable. We hope you love Seatylock as much as we do. We'd love to hear what's on your mind, so please feel free to contact us. We are eager to hear your thoughts.

URL: www.seatylock.com
E mail: info@seatylock.com

Patent protected. Us Pat. 8534754, D663540 & European Pat. EP 2170686, EM 001815515-0001, EM 001815515-0002 & other patents elsewhere & other patents pending. Please refer to www.seatylock.com/patents for more info.

User Manual
SEATYLOCK™

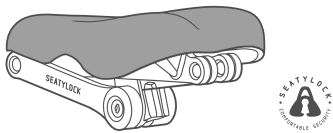


Seatylock Installation
<http://bit.ly/5Installation>




Seatylock Operation
<http://bit.ly/5Operation>

From saddle to lock


- ① Pull the lever (D) upwards to release the Seatylock.

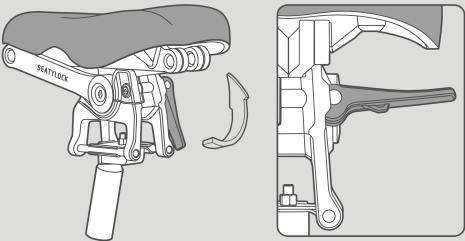


- ② Pull the Seatylock upwards.

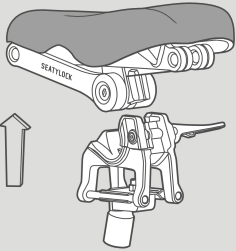


- ③ Pull the lock base (C) downwards to unfold the links.

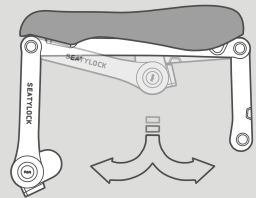


- ④ Unfold the links to 180°.

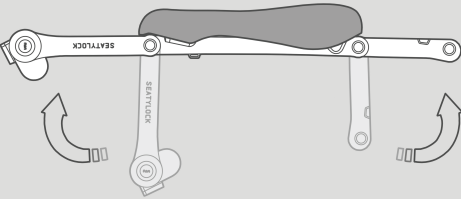


- ⑤ Pull the horizontal link downwards to form a circle.

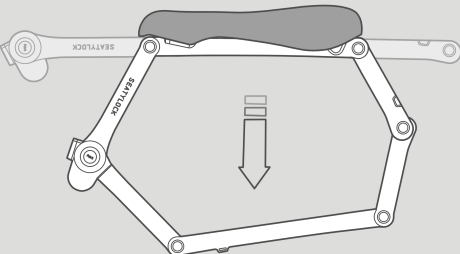

- ⑥ Turn the key 180° clockwise and pull the link out of the lock base (C).

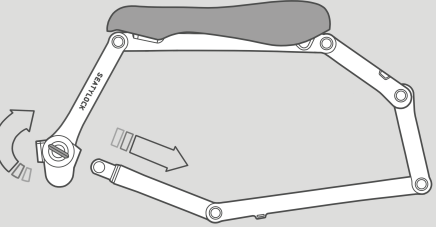


- ⑦ Insert the locking link inside the lock base (C) and turn the key 180° counterclockwise.

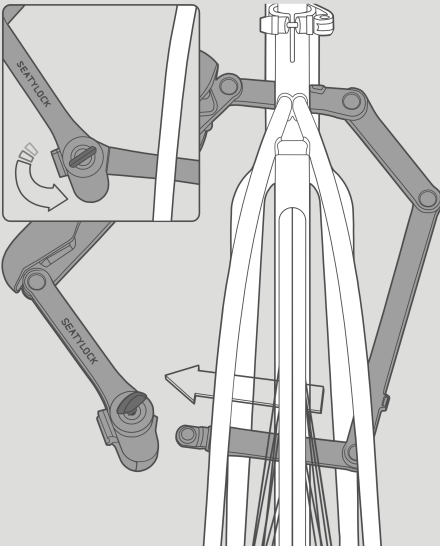


From lock to saddle


- ① Turn the key 180° clockwise and pull the locking link out of the lock base (C).

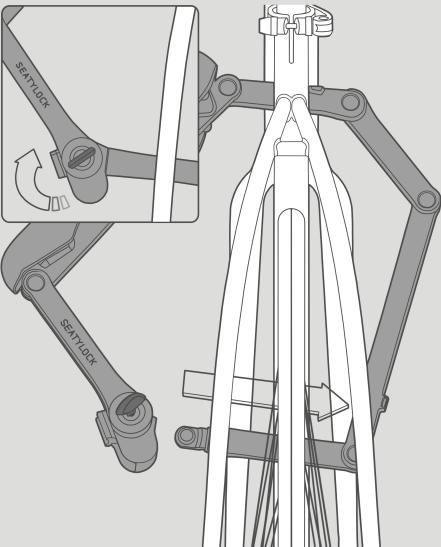


- ② Insert the locking link inside the lock base (C) and turn the key 180° counterclockwise.

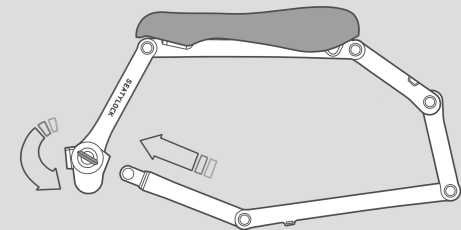


- ③ Push the horizontal link back to place and fold the links to 180°.

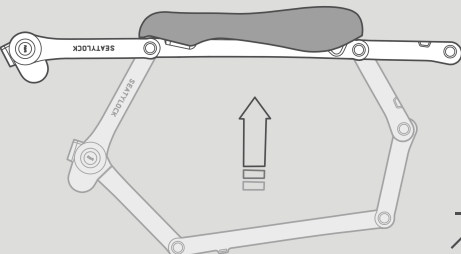


- ④ Hold the two pairs of links and fold them towards the center.

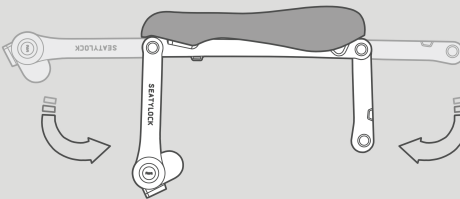

- ⑤ Insert the two short links inside the lock base (C) and complete the folding.

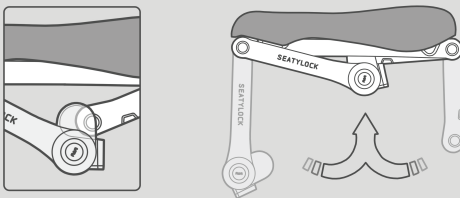

- ⑥ Place the Seatylock on the adaptor.

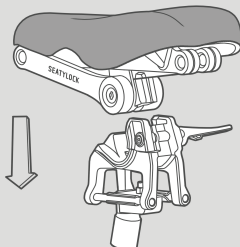

- ⑦ Push the lever (D) downwards to the point it touches the adaptor.

