

 
Oven Crisper Basket

PERFECT HEAT CIRCULATION
ENSURES CRISP FOOD EVERY TIME!




The Oven Crisper Basket allows steam to escape, avoiding soggy food and prevents sticking. With reinforced 1 1/8" trim around the 4 sides.

USE ON THE GRILL TO PREVENT FOOD FROM FALLING THROUGH THE GRATES!

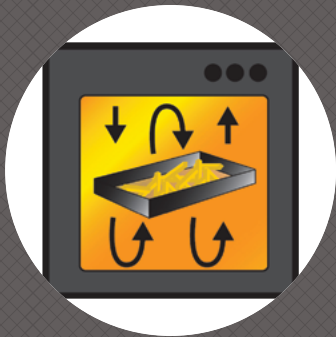

Size 13.25" x 11.5" x 1.25"

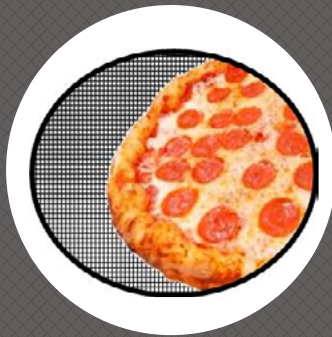 

Non-stick so there is no need to add oil or butter.



Dishwasher, freezer and oven safe up to 500°F.

Ideal for Heating Up:

- PIZZA
- OVEN FRIES
- CHICKEN WINGS
- CHICKEN NUGGETS
- SPRING ROLLS
- PIES
- PASTRY
- FISH STICKS
- BREAD ROLLS
- BAGUETTE
- TURNOVER
- ANYTHING WITH PUFFY PASTRY



Item #: CB3429

UPC Code 890906000781