


# Alertlock

*Wi-Fi Edition*

## Quick Start Guide

### Package Contents:

- 1 -- Alertlock
- 1 -- RFID Key Cards
- 1 -- RFID FOB
- 1 -- Micro USB Cable

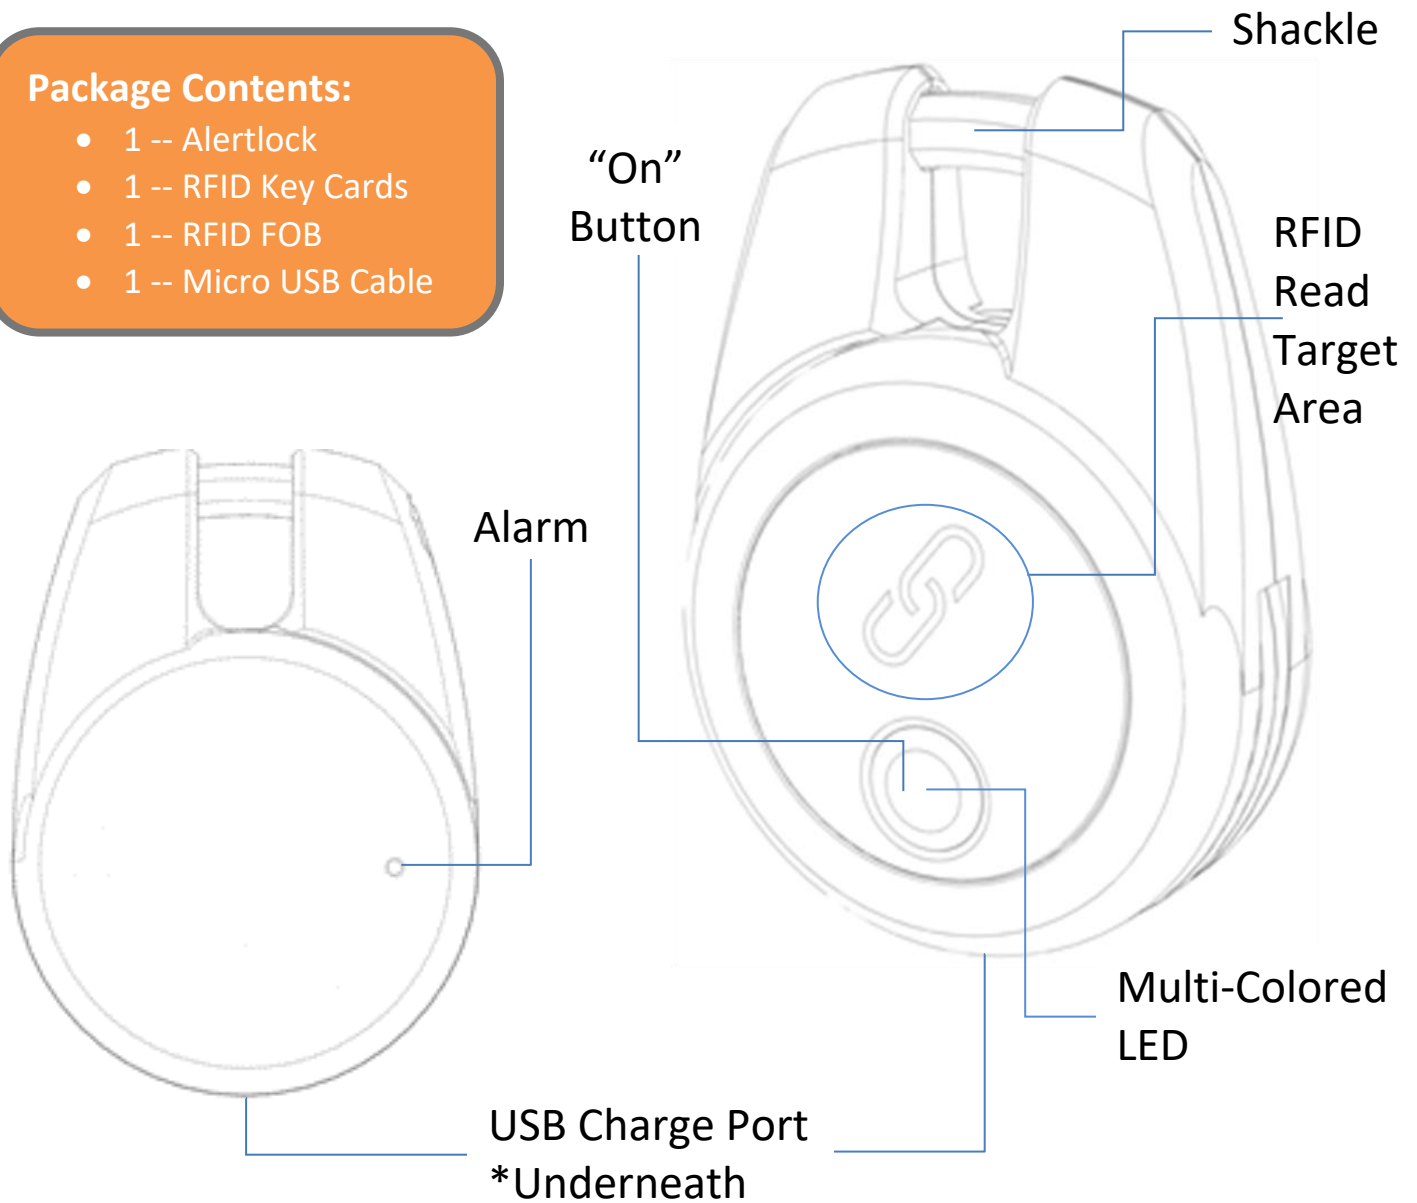

**Please Charge Alertlock Before Use**

## Opening the Alertlock with RFID

- The included RFID's (1 card and 1 FOB) are preprogrammed to the Alertlock.
- To open the Alertlock with RFID:
  1. Press the button on front of the Alertlock (a blue LED will begin to blink).
  2. With the blue LED blinking, place a programmed RFID directly over the Logo on the front of the Alertlock (the motor/servo will activate, and the LED will be solid green).
  3. The Alertlock can now be opened (slide the left metal away from the shackle).
  4. The Alertlock will automatically close the motor/servo and power down after 3 seconds.



## Closing the Alertlock

- The Alertlock has a spring-loaded latching mechanism.
- To close the Alertlock:
  1. After the motor/servo has closed, simply slide the left metal back towards the shackle after the motor has closed.
  2. You will feel the latches ratchet as you are sliding back towards the shackle.
    - This allows you to close the Alertlock as tight as you want.
  3. The Alertlock is now closed and locked again.

## Opening the Alertlock using Bluetooth

- Create a free account on a web browser.
  1. Go to [www.lynk.com](http://www.lynk.com).
  2. Select 'Login' in the upper right-hand corner.
  3. Select 'Don't have a LYNKD Account? Sign Up' on the new page.
  4. Select 'Don't Have Code'.
  5. Change plan to a Lite account and then click 'Select Lite' at the bottom.
  6. Fill out the user information and then select 'Next'.
  7. Confirm account using the email address that was used to sign up.
- Download the 'Lynkd' app from the App Store (iOS) or Google Play (Android).
- Open the 'Lynkd' app and login using your username and password.
- On the new screen, select 'Add New' and press the front button on the Alertlock.
  1. Enter the default password, 12345678.
- Select the 'Unlock' button on the new screen (the motor/servo will activate, and the LED will be solid green).
- The Alertlock can now be opened (slide the left metal away from the shackle).
  1. The Alertlock will power down and the motor/servo will close after 3 seconds.
- To close the Alertlock, simply slide the left metal back towards the shackle after the motor has closed.
  1. You will feel the latches ratchet as you are sliding back towards the shackle.

- This allows you to close the Alertlock as tight as you want.
- The Alertlock is now closed and locked again.

## **Turning the Audible Alarm Feature On**

- The Alertlock is equipped with a tamper alarm to alert you if the Alertlock has been moved.
- To turn on the alarm feature:
  1. Hold the power button for 5 seconds, until the Alertlock begins to beep and blink yellow. The Alertlock will be armed within 5 seconds.
  2. After 5 seconds, any movement of the Alertlock will cause it to beep and blink red repeatedly until the alarm is cleared.
    - Additionally, if one of the buttons is pressed, the Alertlock will blink yellow indicating that the alarm will go off within 10 seconds if a valid access method is not used to open the Alertlock.
  3. The Alertlock will alarm for 2 minutes and will automatically turn off and rearm if the alarm has not been cleared.
  4. To clear the alarm, press the power button and disarm using a programmed RFID. To rearm the Alertlock, you will need to press and hold the power button again for 5 seconds.
- This is only for setting the audible alarm for your box, NOT to receive the Mobile Alerts to your phone.
- **\*\*Note\*\*** Mobile Alerts requires a pro account from the Lynkd service.

## **Updates**

- The Alertlock is capable of software updates over Wi-Fi. Make sure that The Gunbox, LLC has your correct email address so you will be informed when software updates become available.

## **Mobile Alerts/Tamper Alerts**

- Purchase separate subscription for 1 year, 2 years, or 5 years through the Lynkd service. For more information visit [www.lynk.com](http://www.lynk.com).

## **Charging the Alertlock**

- The Alertlock has a rechargeable battery (700mAh LiPo).
  1. the battery can work for up to 3 months without charging.
- If the Alertlock runs low on battery, (under 40%) it will flash blue and red when the front button is pressed.
- To charge the battery, plug in the Micro USB cable that came with the Alertlock.
  1. A 5v 2A charger is recommended for charging the Alertlock (\*not included).
  2. The Alertlock will beep and flash red, indicating that it is charging.
    - No lights will be on while charging
- A full charge will be reached within 8 hours.



## **Security Disclaimer**

- There is no guarantee that the Alertlock or the accompanying accessories cannot be tampered with, broken into, electronically hacked, or otherwise compromised. The manufacturers and sellers of the Alertlock are not responsible for theft or damage of the Alertlock or any contents secured by the Alertlock. The user is warned that it is possible for an unauthorized party to access the Alertlock and does not make claims that it is invulnerable to attack.

**SAFE STORAGE. QUICK ACCESS.**

**The Alertlock, a dba of SafeTech Products, LLC**

[www.thegunbox.com](http://www.thegunbox.com) - [techsupport@thegunbox.com](mailto:techsupport@thegunbox.com) - 801-331-8655