




THE GUNBOX

Quick Start Guide

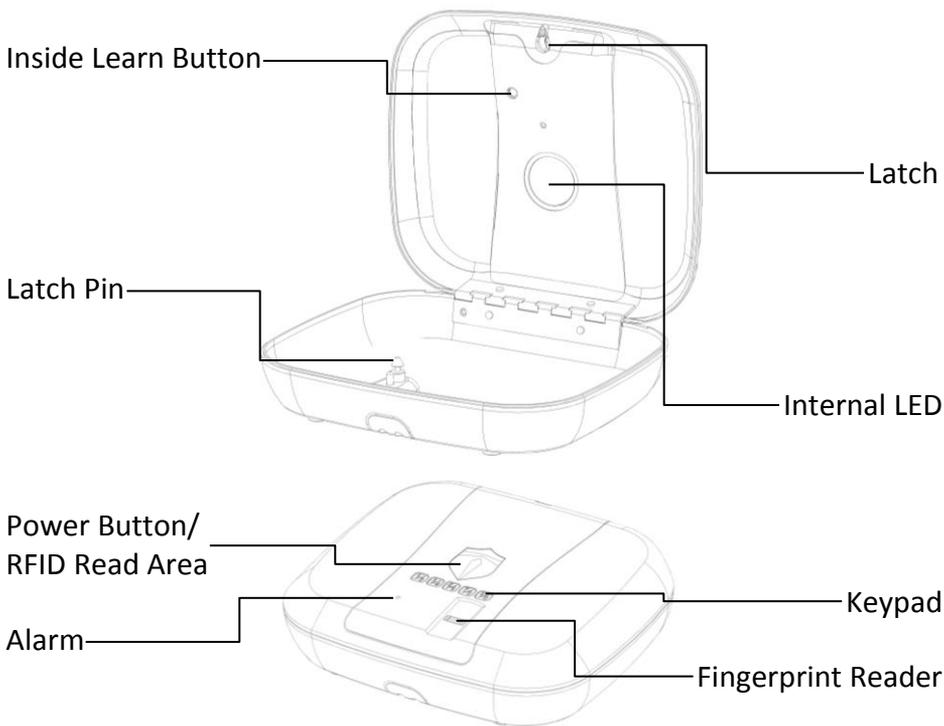

Please Charge Gunbox Echo Before Use

Gunbox Echo

Wifi Edition

Software Version 3.5

Basic Functions

Opening the Gunbox Echo with RFID

- The 4 RFID tags (2 cards and 2 FOBs) that come with the Gunbox Echo are preprogrammed to the Gunbox Echo. If you have upgraded the software on your Gunbox Echo, you will need to reprogram these RFID Tags to your Gunbox Echo.
- To open the Gunbox Echo using one of the preprogrammed RFID tags:
 1. Press the power button on the Gunbox Echo to wake up the Gunbox Echo. A blue LED will begin to flash.
 2. With the blue LED flashing, place one of the included preprogrammed RFID tags up close to the power button. The green LED will light and the Gunbox Echo will pop up making it easy to open.
 3. Note: When the Gunbox Echo is plugged in, indicated by a solid blue light, the top power button does not need to be pressed to wake it up.

Closing the Gunbox Echo

- The Gunbox Echo closes easily by pressing down on the top front of the Gunbox Echo. The latches are spring loaded and will automatically latch.

Programming an additional RFID Tag

- To program an RFID tag
 1. Start with the Gunbox Echo open.
 2. Press and hold the inside learn button for 3 seconds until the Gunbox Echo begins to beep and blink blue.
 3. Within 10 seconds, place an RFID Tag over the top of the power button to record that RFID tag.
 4. You will hear 6 rapid beeps and the green LED will flash rapidly to indicate that the card has been recorded to the Gunbox Echo.
- Up to 20 RFID tags can be stored to the Gunbox Echo. Once 20 cards have been added, the box will flash red when trying to add a card, and the card will not be stored.

Programming a Fingerprint

- To program a fingerprint:
 1. Start with the Gunbox Echo open.
 2. Press and hold the inside learn button for 3 seconds until the Gunbox Echo begins to beep and blink blue.
 3. Within 10 seconds, place your finger on the plastic directly above the fingerprint reader and swipe your finger down over the fingerprint reader. The Gunbox Echo LED will turn light blue while recording the fingerprint and then rapidly beep 3 times with the green LED blinking when the fingerprint read is recorded.
 4. Continue programming by swiping your finger again over the fingerprint reader. This process usually takes 5-10 swipes, but can require more swipes.
 5. When your fingerprint is recorded, the Gunbox Echo will beep rapidly 6 times with green and light blue LED blinks, to indicate that your fingerprint has been stored to the Gunbox Echo.
- (The Gunbox Echo may blink red during programming to indicate that the previous fingerprint read was invalid. When this occurs, the Gunbox Echo is still in programming mode, continue swiping your finger to continue programming.)
- Up to 10 fingerprints can be stored to the Gunbox Echo. If the box flashes red and buzzes, the fingerprint did not store and the fingerprint will need to be programmed again.

Opening with a Fingerprint

- To open the Gunbox Echo with a fingerprint
 1. Press the power button on the Gunbox Echo to wake up the Gunbox Echo.
 2. Within 10 seconds, place your finger on the plastic directly above the fingerprint reader and swipe your finger down over the fingerprint reader and the Gunbox Echo will open.
 3. Note: When the Gunbox Echo is plugged in, indicated by a solid blue light, the top power button does not need to be pressed to wake it up.

Programming the Keypad

- To program a passcode:
 1. Start with the Gunbox Echo open.
 2. Press and hold the inside learn button for 3 seconds until the Gunbox Echo begins to beep and blink blue.
 3. Within 10 seconds, enter a passcode by pressing the keypad buttons (make sure to enter the passcode quickly, as the Gunbox Echo will time out with 5 seconds of inactivity.)
 4. With each keypad press, the Gunbox Echo will beep and flash green indicating that the key press was recorded. **The passcode must be 5-10 digits.**
 5. After entering the passcode, press the power button to store the passcode.
 6. To add another passcode, follow the steps again.
 7. After programming a new passcode, use the new passcode to open the Gunbox Echo to make sure that the passcode was entered correctly.
- Only 1 passcode can be stored to the Gunbox Echo.

Opening with a Keypad

- To open the Gunbox Echo with the keypad
 1. Press the power button on the Gunbox Echo to wake up the Gunbox Echo.
 2. Within 10 seconds, enter the passcode using the keypad buttons and the Gunbox Echo will open. If you have entered an incorrect passcode, or pressed a wrong button, wait for the Gunbox Echo to time out (this will be indicated by the red LED blinking and buzz).
 3. Note: When the Gunbox Echo is plugged in, indicated by a solid blue light, the top power button does not need to be pressed to wake it up.

Turning the Audible Alarm Feature On

- The Gunbox Echo is equipped with a tamper alarm to alert you if the Gunbox Echo has been moved. To turn on the alarm feature:
 1. Press the power button on the Gunbox Echo to wake up the Gunbox Echo.
 2. Press and hold the 1/2 and 9/0 buttons for 2 seconds, until the box begins to beep and blink yellow. The Gunbox Echo will be armed within 5 seconds.
 3. After 5 seconds, any movement of the Gunbox Echo will cause it to beep and flash red repeatedly until the alarm is cleared. Additionally, if one of the buttons is pressed, the Gunbox Echo will blink yellow indicating that the alarm will go off within 10 seconds if a valid access method is not used to open the Gunbox Echo.
 4. The Gunbox Echo will alarm for 2 minutes and will automatic turn off and rearm if the alarm has not been cleared.
- To clear the alarm, press the power button and disarm using an RFID tag, fingerprint or passcode. To rearm the Gunbox Echo, you will need to press and hold the 1/2 and 9/0 buttons again.

Deleting All RFIDs

- To delete all RFID tags, press and hold the inside learn button for 3 seconds until the Gunbox Echo begins to beep and blink blue and then hold down the 9/0 button for 3 seconds. The Gunbox Echo will blink green and beep 3 times to indicate that the passcode has been removed.

Deleting All Fingerprints


- To delete all fingerprints, press and hold the inside learn button for 3 seconds until the Gunbox Echo begins to beep and blink blue and then hold down the 1/2 button for 3 seconds. The Gunbox Echo will blink green and beep 3 times to indicate that the passcode has been removed.

Deleting the Passcode

- To delete the passcode, press and hold the inside learn button for 3 seconds until the Gunbox Echo begins to beep and blink blue and then hold down the power button for 3 seconds. The Gunbox Echo will blink green and beep 3 times to indicate that the passcode has been removed.

Charging the Gunbox Echo

- The Gunbox Echo is powered by a battery and can work for up to 3 months without charging. To charge the battery, plug the included charge cable into the back of the Gunbox Echo. Be carefully to not damage the connector when inserting and removing the cable.

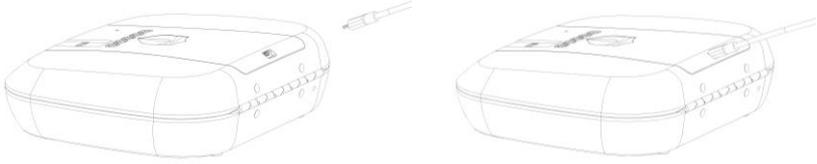

THE
G U N B O X

SAFE STORAGE. QUICK ACCESS.

The Gunbox, a dba of SafeTech Products, LLC

www.thegunbox.com - techsupport@thegunbox.com - 801-331-8655