



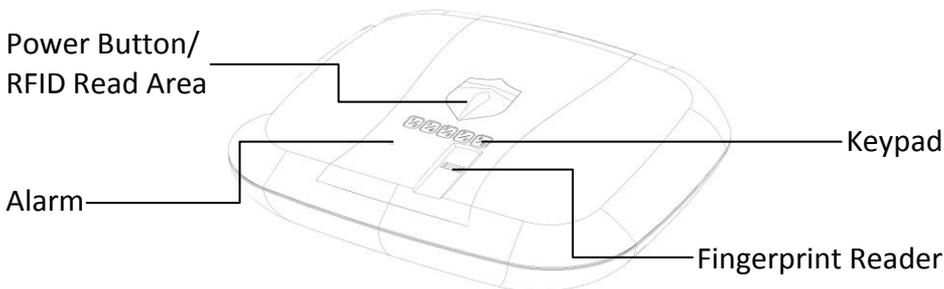

THE GUNBOX

Quick Start Guide

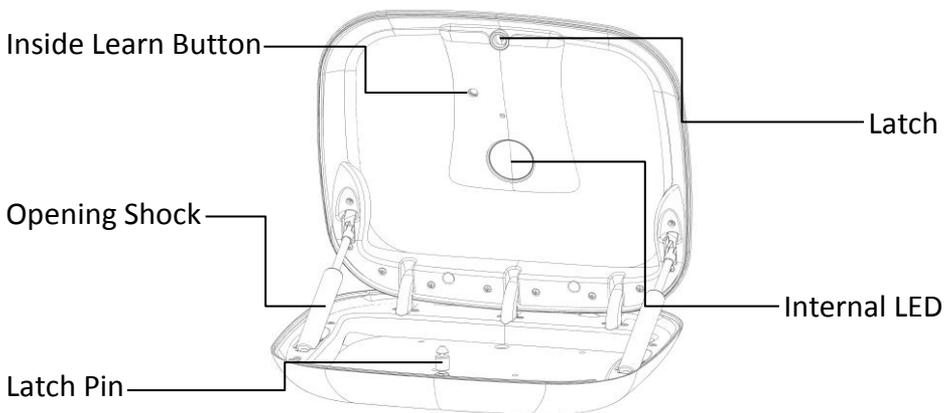

Please Charge Gunbox Before Use

Gunbox 2.0

Wifi Edition

Software Version 3.5

Basic Functions

Opening the Gunbox with RFID

- The 4 RFID tags (2 cards and 2 FOBs) that come with the Gunbox are preprogrammed to the Gunbox. If you have upgraded the software on your Gunbox, you will need to reprogram these RFID Tags to your Gunbox.
- To open the Gunbox using one of the preprogrammed RFID tags:
 1. Press the power button on the Gunbox to wake up the Gunbox. A blue LED will begin to flash.
 2. With the blue LED flashing, place one of the included preprogrammed RFID tags up close to the power button. The green LED will light and the Gunbox will pop open.
 3. Note: When the Gunbox is plugged in, indicated by a solid blue light, the top power button does not need to be pressed to wake it up.

Closing the Gunbox

- The Gunbox closes easily by pressing down on the top front of the Gunbox. The latches are spring loaded and will automatically latch.

Programming an additional RFID Tag

- To program an RFID tag
 1. Start with the Gunbox open.
 2. Press and hold the inside learn button for 3 seconds until the Gunbox begins to beep and blink blue.
 3. Within 10 seconds, place an RFID Tag over the top of the power button to record that RFID tag.
 4. You will hear 6 rapid beeps and the green LED will flash rapidly to indicate that the card has been recorded to the Gunbox.
- Up to 20 RFID tags can be stored to the Gunbox. Once 20 cards have been added, the box will flash red when trying to add a card, and the card will not be stored.

Programming a Fingerprint

- To program a fingerprint:
 1. Start with the Gunbox open.
 2. Press and hold the inside learn button for 3 seconds until the Gunbox begins to beep and blink blue.
 3. Within 10 seconds, place your finger on the plastic directly above the fingerprint reader and swipe your finger down over the fingerprint reader. The Gunbox LED will turn light blue while recording the fingerprint and then rapidly beep 3 times with the green LED blinking when the fingerprint read is recorded.
 4. Continue programming by swiping your finger again over the fingerprint reader. This process usually takes 5-10 swipes, but can require more swipes.
 5. When your fingerprint is recorded, the Gunbox will beep rapidly 6 times with green and light blue LED blinks, to indicate that your fingerprint has been stored to the Gunbox.
- (The Gunbox may blink red during programming to indicate that the previous fingerprint read was invalid. When this occurs, the Gunbox is still in programming mode, continue swiping your finger to continue programming.)
- Up to 10 fingerprints can be stored to the Gunbox. If the box flashes red and buzzes, the fingerprint did not store and the fingerprint will need to be programmed again.

Opening with a Fingerprint

- To open the Gunbox with a fingerprint
 1. Press the power button on the Gunbox to wake up the Gunbox.
 2. Within 10 seconds, place your finger on the plastic directly above the fingerprint reader and swipe your finger down over the fingerprint reader and the Gunbox will open.
 3. Note: When the Gunbox is plugged in, indicated by a solid blue light, the top power button does not need to be pressed to wake it up.

Programming the Keypad

- To program a passcode:
 1. Start with the Gunbox open.
 2. Press and hold the inside learn button for 3 seconds until the Gunbox begins to beep and blink blue.

3. Within 10 seconds, enter a passcode by pressing the keypad buttons (make sure to enter the passcode quickly, as the Gunbox will time out with 5 seconds of inactivity.)
 4. With each keypad press, the Gunbox will beep and flash green indicating that the key press was recorded.
The passcode must be 5-10 digits.
 5. After entering the passcode, press the power button to store the passcode.
 6. To add another passcode, follow the steps again.
 7. After programming a new passcode, use the new passcode to open the Gunbox to make sure that the passcode was entered correctly.
- Only 1 passcode can be stored to the Gunbox.

Opening with a Keypad

- To open the Gunbox with the keypad
 1. Press the power button on the Gunbox to wake up the Gunbox.
 2. Within 10 seconds, enter the passcode using the keypad buttons and the Gunbox will open. If you have entered an incorrect passcode, or pressed a wrong button, wait for the Gunbox to time out (this will be indicated by the red LED blinking and buzz).
 3. Note: When the Gunbox is plugged in, indicated by a solid blue light, the top power button does not need to be pressed to wake it up.

Turning the Audible Alarm Feature On

- The Gunbox is equipped with a tamper alarm to alert you if the Gunbox has been moved. To turn on the alarm feature:
 1. Press the power button on the Gunbox to wake up the Gunbox.
 2. Press and hold the 1/2 and 9/0 buttons for 2 seconds, until the box begins to beep and blink yellow. The Gunbox will be armed within 5 seconds.
 3. After 5 seconds, any movement of the Gunbox will cause it to beep and flash red repeatedly until the alarm is cleared. Additionally, if one of the buttons is pressed, the Gunbox will blink yellow indicating that the alarm will go off within 10 seconds if a valid access method is not used to open the Gunbox.
 4. The Gunbox will alarm for 2 minutes and will automatic turn off and rearm if the alarm has not been cleared.
- To clear the alarm, press the power button and disarm using an RFID tag, fingerprint or passcode. To rearm the Gunbox, you will need to press and hold the 1/2 and 9/0 buttons again.

Deleting All RFIDs

- To delete all RFID tags, press and hold the inside learn button for 3 seconds until the Gunbox begins to beep and blink blue and then hold down the 9/0 button for 3 seconds. The Gunbox will blink green and beep 3 times to indicate that the passcode has been removed.

Deleting All Fingerprints

- To delete all fingerprints, press and hold the inside learn button for 3 seconds until the Gunbox begins to beep and blink blue and then hold down the 1/2 button for 3 seconds. The Gunbox will blink green and beep 3 times to indicate that the passcode has been removed.

Deleting the Passcode


- To delete the passcode, press and hold the inside learn button for 3 seconds until the Gunbox begins to beep and blink blue and then hold down the power button for 3 seconds. The Gunbox will blink green and beep 3 times to indicate that the passcode has been removed.

Updates

- The Gunbox is capable of software updates over Wi-Fi. Make sure that The Gunbox, LLC has your correct email address so you will be informed when software updates become available.


Charging the Gunbox

- The Gunbox is powered by a rechargeable battery and can work for up to 2 years without charging. To charge the battery, plug the included wall charger into the back of the Gunbox. (Note: using a different charger than the one that came with your Gunbox may damage the Gunbox and void your warranty.)
- USB ports are included for convenience and will not charge your unit. They are designed to charge your phone or tablet and will only function when the Gunbox is plugged in.

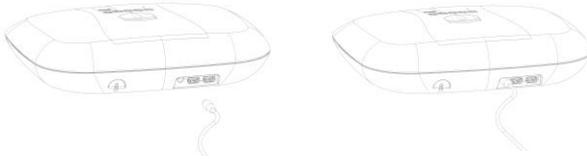


Securing the Gunbox to the Wall or Table

- The Gunbox can be mounted to a wall, table, or under a desk. To do this, you will need to drill out the 2 countersunk holes in the bottom of the Gunbox. Using flat head screws (not provided), you can secure the Gunbox to a wall or table. (Note, it is recommended that when securing to a wall, the screws go into a stud. This will prevent the Gunbox from easily being pulled off of the wall.)

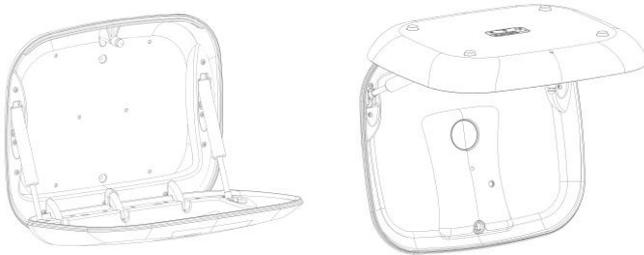

- When mounting the Gunbox under a desk, it is best to limit how far the Gunbox will open. To do this, install the Stop Block that came with the Gunbox on the middle hinge. The Gunbox must be closed half-way for the Stop Block to be installed properly.

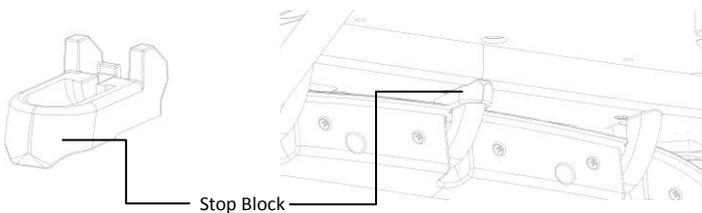

THE
GUNBOX
SAFE STORAGE. QUICK ACCESS.

The Gunbox, a dba of SafeTech Products, LLC

www.thegunbox.com - techsupport@thegunbox.com - 801-331-8655