



Thank you for purchasing the Jägermeister® Shotmeister

## REGISTRATION INFORMATION

Register your Jägermeister® Shotmeister online at:

### WWW.TAPMACHINE.COM

PLEASE MAKE SURE TO REGISTER YOUR MACHINE AND RETAIN YOUR ORIGINAL BOX AND PACKING MATERIALS. FAILURE TO DO SO MAY CAUSE DELAYS IF YOU REQUIRE WARRANTY SERVICE.

NOTE: THIS MACHINE COMES WITH A 1 YEAR LIMITED WARRANTY. THESE MATERIALS WILL BE NEEDED FOR SHIPPING IF YOUR FREEZER NEEDS TO BE RETURNED FOR SERVICE OR REPAIR.

Please visit **www.tapmachine.com** for more information on warranty, repair and returns and for an online version of this owner's manual.

Do not return your freezer unless you receive authorization to do so by Tap Machine Inc.

To receive a return material authorization (RMA) number, call: 1-800-713-8881 or email: TapService@jagermeister.com

Freezers returned to Tap Machine Inc., Mast-Jägermeister US., or our affiliated warehouses, without a specified return material authorization number will be refused and returned to sender.

This manual is provided with each new Jägermeister<sup>®</sup> Shotmeister and contains important information to keep your freezer running problem free. This manual is also available online at www.tapmachine.com.

#### DRINK RESPONSIBLY

Jägermeister is the registered trademark of Mast-Jägermeister SE. Jägermeister Shotmeister manufactured and sold under license exclusively by Tap Machine Inc. Jägermeister® Liqueur, 35% Alc./Vol., Imported by Mast-Jägermeister US, Inc., White Plains, NY. Made in China.

# GET TO KNOW YOUR JÄGERMEISTER® SHOTMEISTER

Model	Jägermeister® Shotmeister
Dimensions	10" W x 17.5" D x 16.5" H
Power Required	110V-120VAC / 60Hz
Current Draw	3A at start / 1.7A steady
Electrical Cord	6 Ft.
Compressor	1/10P
Refrigerant / Charge Size	R134A / 42g
Temperature Range	Factory set at: 14°to -8°F
Capacity of Cooling Tank	370ml
Required Clearances	100mm (Approximately 4 inches)
Operating Environment	For Indoor Use Only Between 50°F (10°C) and 90°F (32°C)

### **OPERATION INFORMATION**

**General:** The Jägermeister® Shotmeister is a unique display, refrigeration and delivery system designed to chill and dispense Jägermeister Herbal Liqueur at temperatures well below freezing 32°F (0°C).

The Jägermeister® Shotmeister is designed to hold only 750ml or 1.0L Jägermeister bottles. DO NOT ATTEMPT TO USE BOTTLES LARGER THAN 1.0 LITERS.

### **CARTON CONTENTS**

The following are packaged with the freezer: (1) Drip tray, (2) Bottle stoppers, (1) Owner's manual

# TO PURCHASE OTHER ACCESSORIES, PLEASE VISIT

www.tapmachine.com

# INSTRUCTIONS

### UNPACKING AND START-UP INSTRUCTIONS

- 1. Start by removing the included bag of bottle stoppers and drip tray
- 2. Remove foam inserts to reveal the machine
- **3.** Carefully remove the machine by lifting it straight up out of the box DO NOT HOLD THE SHOTMEISTER BY THE FRONT FAUCET!
- 4. Place the machine in desired location with 4 inches of clearance on all sides
- 5. REMOVE PAPER PADDING from tap spout and inner chilling chamber
- Before plugging in, make sure the power switch in the back is in the OFF position
- 7. Plug in, and flip the switch to ON
- 8. Insert drip tray in the lower front side of the machine

### **INSERTING A BOTTLE**

- 1. It is recommended that you place a pre-chilled bottle into the Shotmeister
- 2. Unscrew the bottle cap (picture A) and replace it with a bottle stopper (picture B) screwing it on tightly
- **3.** Turn the bottle upside down into the chilling chamber (picture C) with the bottle stopper engaging the well (picture D)
- **4.** Bottle is inserted correctly when the Jägermeister begins to drain from the bottle into the machine
- 5. When closing the lid, make sure to PRESS DOWN FIRMLY and ensure the lid is completely sealed









# POURING SHOTS FROM YOUR SHOTMEISTER MACHINE

When pouring ice cold shots from your Jägermeister Shotmeister, pull the tap handle towards you. When done pouring, push the tap handle back to the center position, ensuring the valve is closed.

Note: If the tap handle is not completely vertical, Jägermeister may continue to flow from the tap in a slow stream.

### **CLEANING INSTRUCTIONS**

- 1. Turn off machine and remove the bottle
- 2. Drain remaining Jägermeister liqueur from the machine
- **3.** Fill empty Jägermeister bottle with warm water, install a bottle stopper, and insert into machine
- 4. Pull on tap handle and drain out all warm water from bottle
- 5. Repeat step 4 until the water exiting the machine is clear
- **6.** Remove drip tray and tip machine towards you, raising the back a few inches, pulling the tap handle to ensure all water has drained from the machine
- 7. Make sure to clean all used bottle stoppers

Note: Cleaning should take place after machine has not been used for an extended period of time, or once every 6 months.

### IN CASE OF FROST

It is normal for frost to appear in the freezer. To remove the layer of frost, simply turn off the freezer and let it sit while the frost melts. The frost will automatically drain out of the freezer. It is recommended you place a towel under the freezer in case of seepage.

It is normal to experience a layer of frost up to 1/8" inch thick.

ALWAYS CHECK TO MAKE SURE THE LID IS CLOSED FIRMLY

RETAIN YOUR ORIGINAL BOX AND PACKING MATERIALS FOR A PERIOD OF 1 YEAR.

THESE ITEMS ARE NEEDED IF YOUR FREEZER REQUIRES SERVICE OR REPAIRS.

For information on requesting service or repairs, visit:

WWW.TAPMACHINE.COM

# **IMPORTANT!**

# **NOTICE**

The Jägermeister® Shotmeister is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the Jägermeister® Shotmeister by a person responsible for their safety.

Children should not operate the Jägermeister® Shotmeister in any instance.

The Shotmeister's intended use is to dispense Jägermeister Herbal Liqueur and should be operated in accordance with the laws and regulations of the location in which such use takes place.

When setting up your new Jägermeister Shotmeister, place it on a level surface, indoors, with 4 inches of space on all sides to allow for adequate airflow from the refrigeration system.

DO NOT PLACE MACHINE ON AN ANGLE.
FAILURE TO PROVIDE ADEQUATE CLEARANCE
AROUND THE MACHINE WILL RESULT IN
IMPROPER CHILLING OR POSSIBLE DAMAGE
TO INTERNAL COMPONENTS.

# WARNINGS AND IMPORTANT NOTICES

# **DANGER**

### **ELECTRICAL SHOCK HAZARD**

Can cause injury or death. Service should only be performed by qualified service personnel. Before attempting to perform ANY maintenance, UNPLUG unit. Use extreme care during electrical circuit tests. Live circuits may be exposed.

THERE ARE NO USER REPLACEABLE PARTS OR USER ADJUSTMENTS INSIDE THE MACHINE.

IF THE POWER CORD IS DAMAGED IT MUST BE REPLACED BY THE MANUFACTURER, AUTHORIZED SERVICE AGENT, OR SIMILARLY QUALIFIED PERSONS TO AVOID A HAZARD.

# **WARNING**

DO NOT introduce water or other fluids with a freezing temperature above -10°F while the POWER switch is in the ON position.

Failure to do so may result in the unit freezing, causing internal damage.

