

# SHOT GLASS FREEZER

OWNER'S MANUAL



# INSTRUCTIONS

#### UNPACKING AND START-UP INSTRUCTIONS

- 1. Start by removing the included boxes of shot glasses (if applicable).
- 2. Remove foam inserts to reveal the freezer.
- 3. Carefully remove the freezer by lifting it straight up out of the box.
- Place the freezer in desired location with 4 inches of clearance on all sides.
- **5.** Before plugging in, make sure the power switch in the back is in the **OFF** position.
- **6.** Plug in, and flip the power switch to **ON**.
- **7.** Place dry glasses in freezer upside down.
- **8.** Place non-skid rubber mat on top of the freezer with logo facing up.

#### **CLEANING INSTRUCTIONS**

- **1.** Turn off freezer and remove the trays.
- 2. Wipe down the trays with disinfectant spray; return trays to freezer.

#### IN CASE OF FROST

It is normal for frost to appear in the freezer. To remove the layer of frost, simply turn off the freezer and let it sit while the frost melts. The frost will automatically drain out of the freezer. It is recommended you place a towel under the freezer in case of seepage.

It is normal to experience a layer of frost up to 1/8" inch thick.

ALWAYS CHECK TO MAKE SURE THE DOOR IS CLOSED FIRMLY

RETAIN YOUR ORIGINAL BOX AND PACKING MATERIALS FOR A PERIOD OF 1 YEAR. THESE ITEMS ARE NEEDED IF YOUR FREEZER REQUIRES SERVICE OR REPAIRS.

For information on requesting service or repairs, visit:

WWW.TAPMACHINE.COM

Thank you for purchasing the Jägermeister® Shot Glass Freezer

## **REGISTRATION INFORMATION**

Register your Jägermeister® Shot Glass Freezer online at:

#### WWW.TAPMACHINE.COM

PLEASE MAKE SURE TO REGISTER YOUR FREEZER AND RETAIN YOUR ORIGINAL BOX AND PACKING MATERIALS. FAILURE TO DO SO MAY CAUSE DELAYS IF YOU REQUIRE WARRANTY SERVICE.

NOTE: THIS FREEZER COMES WITH A 1 YEAR LIMITED WARRANTY. THESE MATERIALS WILL BE NEEDED FOR SHIPPING IF YOUR FREEZER NEEDS TO BE RETURNED FOR SERVICE OR REPAIR.

Please visit **www.tapmachine.com** for more information on warranty, repair and returns and for an online version of this owner's manual.

Do not return your freezer unless you receive authorization to do so by Tap Machine Inc.

To receive a return material authorization (RMA) number, call: 1-800-713-8881 or email: TapService@jagermeister.com

Freezers returned to Tap Machine Inc., Mast-Jägermeister US., or our affiliated warehouses, without a specified return material authorization number will be refused and returned to sender.

This manual is provided with each new Jägermeister<sup>®</sup> Shot Glass Freezer and contains important information to keep your freezer running problem free. This manual is also available online at www.tapmachine.com.

# GET TO KNOW YOUR JÄGERMEISTER® SHOT GLASS FREEZER

Model	Jägermeister® Shot Glass Freezer
Dimensions	11.81" W x 20.32" D x 9.77" H
Power Required	AC110
Current Draw	4A at start / 1A steady
Electrical Cord	6 Ft.
Compressor	1/10P
Refrigerant / Charge Size	R134A / 60g
Temperature Range	<5°F (-15° C)
Capacity of Freezing Chamber	9L
Required Clearances	100mm (Approximately 4 inches)
Operating Environment	For Indoor Use Only Between 50°F (10°C) and 90°F (32°C)

#### **OPERATION INFORMATION**

**General:** The Jägermeister® Shot Glass Freezer is a unique display and refrigeration unit designed to chill Jägermeister shot glasses to temperatures well below freezing 32°F (0°C).

#### **CARTON CONTENTS**

The following are packaged with the freezer:
36 Jägermeister Glasses (where legal), Non-Skid Rubber Mat,
Owner's Manual

# TO PURCHASE ADDITIONAL GLASSES, OR OTHER ACCESSORIES, PLEASE VISIT

www.tapmachine.com



THE JÄGERMEISTER® TAP MACHINE MAY BE PLACED ON TOP OF THE JÄGERMEISTER SHOT GLASS FREEZER! (SOLD SEPARATELY)

## **IMPORTANT!**

# NOTICE

The Jägermeister® Shot Glass Freezer is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the Jägermeister® Shot Glass Freezer by a person responsible for their safety.

Children should not operate the Jägermeister®
Shot Glass Freezer in any instance.

The Shot Glass Freezer's intended use is to chill Jägermeister shot glasses and should be operated in accordance with the laws and regulations of the location in which such use takes place.

HANDLE FROZEN SHOT GLASSES WITH CARE, FAILURE TO DO SO MAY CAUSE INJURY.

# IMPORTANT!

When setting up your new Jägermeister Shot Glass Freezer, place it on a level surface, indoors, with 4 inches of space on all sides to allow for adequate airflow from the refrigeration system.

The Jägermeister Tap Machine may be placed on top of the Shot Glass Freezer.

DO NOT PLACE FREEZER ON AN ANGLE.
FAILURE TO PROVIDE ADEQUATE CLEARANCE
AROUND THE MACHINE WILL RESULT IN
IMPROPER CHILLING OR POSSIBLE DAMAGE
TO INTERNAL COMPONENTS.

# WARNINGS AND IMPORTANT NOTICES

# **DANGER**

#### **ELECTRICAL SHOCK HAZARD**

Can cause injury or death. Service should only be performed by qualified service personnel. Before attempting to perform ANY maintenance, UNPLUG unit. Use extreme care during electrical circuit tests. Live circuits may be exposed.

THERE ARE NO USER REPLACEABLE PARTS OR USER ADJUSTMENTS INSIDE THE FREEZER.

IF THE POWER CORD IS DAMAGED IT MUST BE REPLACED BY THE MANUFACTURER, AUTHORIZED SERVICE AGENT, OR SIMILARLY QUALIFIED PERSONS TO AVOID A HAZARD.



#### DRINK RESPONSIBLY | TAPMACHINE.COM