


CS600 Mobile User Guide

Instructions

- 1. LED Light.
- 2. USB Port.
- 3. Left soft key, in standby mode, press this button enter into main menu.
- 4. Call Button.
- 5. LED key, press it to turn on /off the LED lights.
- 6. Open the battery cover here.
- 7. * Key, in standby mode, hold down this key to lock/unlock the keypad.
- 8. In standby mode, press this key to enter phonebook.
- 9. End Call, Hold down to Power On / Power off
- 10. # Key, hold down to put into Silent Mode / Change Input method.
- 11.0 Key, play music / FM radio.
- 12. Camera.
- 13. Emergancy Assist Button.

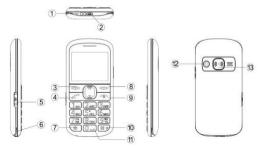

Contents


Installation	4
Installing the SIM Card and battery	4
Phonebook	6
Add new contact	
Photo contact	6
Make a call	7
Make a call from phonebook	7
	7
Writing and sending SMS	7
Inbox	8
Drafts	8
Sent messages	8
SMS settings	9
Call history	9
Organizer	9
Alarm	9
Bluetooth	
Calendar	10
Calculator	11
File manager	11
Multimedia	11
Camera	11
Image viewer	12
FM radio	12
Audio player	12
Settings	13
SOS setting	13
Make a SOS call	13
Phone settings	13
Setup Time and date	14
Setup Language	14
Setup input method	14
Change the wallpaper	14
Call settings	14
User profiles	15
Speed dial	16
Block function	16
Set shortcut kevs.	
Call Blocking	17
Security settings	
Restore factory settings	10
Safety and Attentions	20
Safety and Attentions	20

Installing the SIM Card and battery

 
1. Remove the battery cover.







 Insert the SIM card by carefully sliding into the holder. Make sure the SIM card's contacts are facing inwards.



Installation

4. Insert the battery by sliding it into the battery compartment. Replace the battery cover.



Add new contact

- 1. Press Menu enter into Phonebook and press OK.
- 2. Select Add New Contact and press Options.
- 3 Press Select to choose To Phone or To SIM
- $\textbf{4. Input Name} \ \text{and} \ \textbf{number}. \ \text{To change the input method, please press (\#)} \ .$
- 5. Press Options to Save or Cancel the contact.
- 6. Press the End Call button return to standby.

Note: Always add + before the country code for making international call. You can do this by holding down the (0) key for the international prefix +.

Photo Contact

- 1. Press Menu, scroll to Phonebook and press OK.
- Scroll to Photo Contacts and press OK. Press Edit Enter a Name and Number for contact.
- 3. Scroll down and select Caller Picture (this will be set to Default).

Select one of the following options and press OK:

1) Select from Camera:

Press Options, then Select, then From Camera and take a picture.

2) Select From File:

Press **Options**, then **Select**, then **From File** (Phone or Memory card) and select an existing picture.

- 4. Press Options and scroll to Save, then press Select to save.
- 5. Press the End Call Key return to standby mode.

Make A Call

- 1. Activate phone from standby by pressing the **End Call** key, start entering the phone number (including the area code). To delete a wrongly entered number press the right-hand (...) key.
- 2. Press to the **Green Answer** key to dial and the **Red End Call** to cancel the call

Make a call from phonebook:

- **1.** In standby mode, press the right-hand (...) key to open the phonebook.
- **2.** Scroll through the contacts using the **Up / Down Arrows** or use a quick search by pressing the first letter of the name.
- 3. Press the Green Answer key to call the selected contacts.

SMS Message

Writing and sending SMS

- 1. Press Menu, scroll down to Message and press OK.
- 2. Select Write Message and press OK.
- $\begin{tabular}{ll} \bf 3. \ Type \ your \ message. \ Press \ the \ (*) \ key \ to \ select \ symbol \ or \ press \ (#) \ to \ change \ input \ method. \end{tabular}$
- 4. Press Options, then Send To, select either Enter Number (to enter a number that is not in contact list) or Add From Phonebook (to choose a contact) then press OK to send message.

Inhox

- 1. Press Menu, scroll down to Messages and press OK.
- 2. Select Inbox and press OK.
- 3. Select a message from the list and press Options to view the message.

From Options you can:

Reply: Input your message and send to the sender.

Call sender: Select to call sender.

Forward: Forward message to other contacts

Delete: Select to Delete the message.

Delete all: Delete all received messages.

Save to phonebook: Here you can save the sender's phone number.

Outbox

- 1. Press Menu, scroll down to Messages and press OK.
- 2. Select Outbox and press OK.
- Select a message from the list and press Options to View/Resend/Edit/Delete/Delete All Messages.

Drafts

Here you can see the messages which you have not sent.

Sent messages

Here you can check all messages you have sent out.

SMS Settings

Here you can check memory status and setup preferred storage or save sent messages.

Call History

All Received, Missed and Outgoing Calls are saved in **Call History.** Here you can check call logs as below:

- Missed calls
- Dialled calls
- Received calls
- Delete call logs

Magnifier

In standby mode, **Press Menu**, scroll to **Magnifier**. With this function, the elderly users can easily read the newspaper, magazine, books, etc.

By pressing the **Up / Down** Arrows the size will increase or decrease.

Organizer

Alarm

- 1. Press Menu, scroll down to Organizer, select Alarm and press OK.
- Press Edit to select status On / Off. Press (*) and (#) to change the status on/off.
- 3. Enter the time directly by keypad.
- 4. Scroll to edit Repeat Times, Alert Tone and Alert Type.
- 5. Press Save to activate the alarm, to cancel press the Back Key (...)
- 6. To edit the alarm, press Edit, to stop the alarm, select OFF.

Bluetooth

- 1. Press Menu scroll to Organizer and press OK.
- Select Bluetooth and press OK for the below settings: Function on /off: Select on/off to enable/disable Bluetooth. Visibility: Select on/off to make the phone visible /invisible to other devices.

My device: Saved device name and allow you to add new devices. Search Audio Device: Search for the available audio device, search by pressing yes. If connecting other devices, you need to share the password, enter it and press OK.

My Name: Name for current device.

Calendar

- 1. Press **Menu**, scroll to **Organizer**, press **OK** to select **Calendar**. Today's day and date is shown on the display.
- 2. Press **Options** to do following settings: **View:** Show the event for the selected date.

View all

View all events

Add event

- 1. Input subject for the event.
- 2. Enter a start date and time for the event.
- 3. Enter the end date and time for the event.
- 4. Enter subject for the event.
- 5. Activate Alarm and repeat times for the event.
- 6. Enter location for the event.
- 7. Save the event.

Delete event: Delete the selected event

Jump to date: Enter the date and press OK.

Go to weekly view: Shown this week date

Calculator

- 1. Press Menu, scroll to Organizer, press OK to select Calculator.
- 2. Enter the first number and use (#) to enter into decimal point.
- 3. Use the **Up / Down** key to select ($+-*\div$) and press **OK.** Enter the next number and press **OK.** The result is then shown on the screen.

File Manager

Use it to manage all files, you can rename, copy, delete, move the files.

- 1. Press Menu, scroll to Settings, select File Management and press OK.
- 2. Select from phone or SIM card

Multimedia

Camera

- 1. Press Menu, scroll to Camera and press OK.
- 2. Press the (0) key to take photo.
- **3.** To view photos, press **Options** and select **Photos**. **Warning!** If memory card is insufficient, delete some documents or expand the storage with Micro SD card.

Image Viewer

View all saved photos under this menu.

FM radio

- 1. Press Menu, scroll down to Multimedia, press OK to select FM Radio.
- 2. Press Options to view Channel List.
- 3. Select Manual Input to tune to the channel you prefer.
- 4. Select Auto Search to search for your local radio channel.
- 5. Enter into Settings to set up background play.
- 6. Press the Up / Down key to start the search program.
- 7. Press the (*) and (#) keys to control the volume.
- 8. Press the (0) key to start or stop the FM Radio

Audio player

- 1. Please download music to the phone or memory card first.
- 2. Press $\mathbf{Menu}, \mathsf{scroll}$ down to $\mathbf{Multimedia}, \mathsf{press}~\mathbf{OK}$ to select $\mathbf{Audio~Player}.$
- 3. Select a preferred music and press the (0) to play or stop it.
- 4. Press to select the last song or the next song.
- 5. To control the volume, please press (*) and (#).
- 6. Press Red End Call key to the standby mode.

Settings 13

SOS Settings

- 1. Press Menu, scroll down to Settings, press OK.
- 2. Select SOS Settings and press OK.
- Scroll to Status and setup SOS status On / Off.
- 4. Scroll to **Family Numbers** to setup SOS Numbers. Here you can setup **5** numbers.
- 5. Scroll to SOS SMS on / off to choose send SOS SMS or not.
- Enter into SOS SMS to edit message.
- 7. Enter into Warning Tone to control the tone status on / off.

Make A SOS Call

Before you make an SOS Call, please assure SOS Status is **ON** and you have already finished the SOS setup.

Hold down the **SOS button**, located on the back of the phone, the phone will automatically send SMS messages to the programmed SOS numbers it will then call the three SOS numbers one by one. A siren will be alarmed and will stop once a call is answered.

Phone Settings

- 1. Press Menu scroll to Settings.
- 2. Select Phone Settings and press OK.

Settings 14

Setup Time and Date

- 1. Select Set Home City and choose your local city.
- 2. Select Time and Date and press OK.
- 3. Select Set Time/Date and press OK.
- 4. Enter Time and Date and press Save.

Setup Language

- 1. Select Language and press OK.
- 2. Use Up / Down key to select your language from the list and press OK.

Setup Input Method

1. Select Prefered Input method and press OK.

Change the Wallpaper

- 1. Select Display, then select Wallpaper.
- 2. Here you can select wallpaper form the phone and memory card.

Call Settings

- 1. Press Menu enter into Settings and press OK.
- Select Call Settings and press OK.
- 3. Here you can Activate or Deactivate the functions below:
 - Blacklist
 - Whitelist
 - Auto-redial
 - Call time reminder
 - Answer mode

User Profiles

- Press Menu scroll to Settings.
- 2. Select User Profiles and press OK.

Then you will see four mode as below:

- General
- Silent
- Meeting • Outdoor
- Customize General Mode

Here you can choose your preferred Power on/off ringtones, incoming call ringtones etc.

- 1. Press Menu scroll to Settings.
- Select User Profiles and press OK. Select General and press Options.
- 3. Select Customize and press Select.
- 4. Scroll to Alert Type and press Options to select Ring only Vib. only Vib, and ring or Vib. Then ring. Press OK to save.
- Scroll to Ringtone and press Options to select preferred ringtone.
- 6. Scroll to Ringtone volume and press Option, use Up / Down key to adjust volume, press **OK** to save.
- 7. Scroll to Message and press Option to select a preferred ringtone for message.
- 8. Scroll to Message volume and press Option, use Up / Down key to adjust volume, press OK to save.

Speed dial

(*) and (#) key and the numerical keys 2-9 can be used for speed dialling.

Add speed dial number and activate the status Add (*) and (#) key speed dial numbers:

- 1. Press Menu scroll to Settings.
- 2. Select Speed Dial and press OK.
- 3. Enter into (*) and (#) key to activate the status.
- **4.** Select Set numbers to choose numbers for (*) and (#) keys from phonebook.

The same with to add contacts for the numerical keys 2 - 9.

Block function

You can disable functions to simply use the phone.

- 1. Press Menu scroll to Settings and press OK.
- 2. Select Block Function and press OK.

 Scroll to choose each function you want to disable and press Done.

Up/Down Key Shortcut Settings

Here you can set shortcuts for up key and down key.

- 1. Press Menu scroll to Settings.
- 2. Select Key Shortcuts and press Ok.
- **3.** Choose **Up** key to determine relevant functions you like, the same way to set shortcuts for **Down** key.

- 1. Press Menu scroll to Call Blocking and press OK.
- **2.** Scroll to **Black List** to setup blocking specific numbers from calling you, here you can add/remove up to 100 numbers.
- 3. To turn the Black List function On/Off, scroll to Black List and then scroll to Turn ON/OFF.
- **4.** Scroll to **White List** to setup blocking all calls apart from those added into your white list, here you can add/remove up to 100 numbers. **The phone password is 1122.**
- **5.** To turn the White List function ON/OFF scroll to **Block List** and press **Turn ON/OFF**.
- 6. To quickly add numbers that have called you to the Black List press Green Answer key scroll to the number you wish to block and press Options then scroll to Add to Black List.
- 7. To quickly add SMS Text message numbers to the Black list navigate to the SMS message press Options then View then Options and scroll to Add to Black List.

Call Blocking

Here you can do security settings for SIM card, phone and keypad.

- 1. Press Menu to Settings.
- 2. Scroll to Security Settings and press OK.

Then you can see sub-menus below:

SIM security: Here you can setup and change PIN lock status on or off. Phone security: Here you can setup the Phone lock status on/off. You can also Change Password here.

Screen auto lock: Press OK to on/off auto lock.