



 
USER GUIDE CS600 MOBILE



"Stop Nuisance Calls To your Mobile At the Touch of a Button"

Instructions

1. LED Light.
2. USB Port.
3. Left soft key, in standby mode, press this button enter into main menu.
4. Call Button.
5. LED key, press it to turn on /off the LED lights.
6. Open the battery cover here.
7. * Key, in standby mode, hold down this key to lock/unlock the keypad.
8. In standby mode, press this key to enter phonebook.
9. End Call. Hold down to Power On / Power off
10. # Key, hold down to put into Silent Mode / Change Input method.
11. 0 Key, play music / FM radio.
12. Camera.
13. Emergency Assist Button.

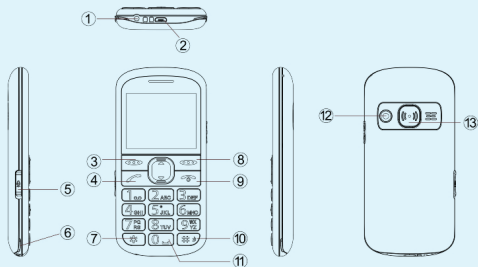


Contents


Installation	4
Installing the SIM Card and battery	4
Phonebook	6
Add new contact.....	6
Photo contact.....	6
Make a call	7
Make a call from phonebook.....	7
SMS Messages	7
Writing and sending SMS.....	7
Inbox.....	8
Outbox.....	8
Drafts.....	8
Sent messages.....	8
SMS settings.....	9
Call history	9
Magnifier	9
Organizer	9
Alarm.....	9
Bluetooth.....	10
Calendar.....	10
Calculator.....	11
File manager.....	11
Multimedia	11
Camera.....	11
Image viewer.....	12
FM radio.....	12
Audio player.....	12
Settings	13
SOS setting.....	13
Make a SOS call.....	13
Phone settings.....	13
Setup Time and date.....	14
Setup Language.....	14
Setup input method.....	14
Change the wallpaper.....	14
Call settings	14
User profiles.....	15
Speed dial.....	16
Block function.....	16
Set shortcut keys.....	16
Call Blocking	17
Security settings	17
Restore factory settings	19
Safety and Attentions	20

Installing the SIM Card and battery

 
1. Remove the battery cover.

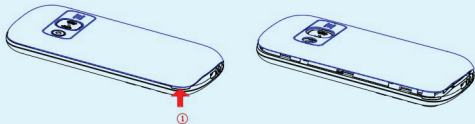

 
2. Insert the Micro-SD card by carefully sliding into the holder.

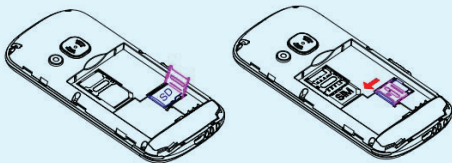

 
3. Insert the SIM card by carefully sliding into the holder.
Make sure the SIM card's contacts are facing inwards.

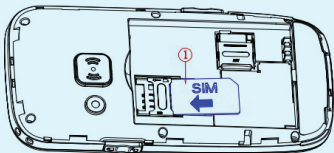

 4. Insert the battery by sliding it into the battery compartment.

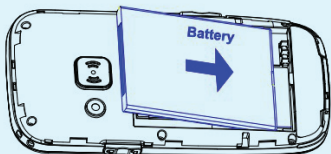

 5. Replace the battery cover.

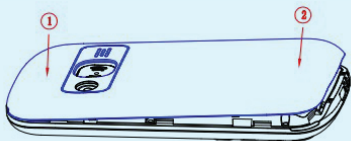

Add new contact

1. Press **Menu** enter into **Phonebook** and press **OK**.
2. Select **Add New Contact** and press **Options**.
3. Press **Select** to choose **To Phone** or **To SIM**.
4. Input **Name** and **number**. To change the input method, please press **(#)**.
5. Press **Options** to **Save** or **Cancel** the contact.
6. Press the **End Call** button return to standby.

Note: Always add **+** before the country code for making international call. You can do this by holding down the **(0)** key for the international prefix **+**.

Photo Contact

1. Press **Menu**, scroll to **Phonebook** and press **OK**.
2. Scroll to **Photo Contacts** and press **OK**. Press **Edit** - Enter a **Name** and **Number** for contact.
3. Scroll down and select **Caller Picture** (this will be set to Default).

Select one of the following options and press OK:

1) Select from Camera:

Press **Options**, then **Select**, then **From Camera** and take a picture.

2) Select From File:

Press **Options**, then **Select**, then **From File** (Phone or Memory card) and select an existing picture.

4. Press **Options** and scroll to **Save**, then press **Select** to save.
5. Press the **End Call** Key return to standby mode.

Make A Call

1. Activate phone from standby by pressing the **End Call** key, start entering the phone number (including the area code). To delete a wrongly entered number press the right-hand (. . .) key.
2. Press to the **Green Answer** key to dial and the **Red End Call** to cancel the call.

Make a call from phonebook:

1. In standby mode, press the right-hand (. . .) key to open the phonebook.
2. Scroll through the contacts using the **Up / Down Arrows** or use a quick search by pressing the first letter of the name.
3. Press the **Green Answer** key to call the selected contacts.

SMS Message

Writing and sending SMS

1. Press **Menu**, scroll down to **Message** and press **OK**.
2. Select **Write Message** and press **OK**.
3. Type your message. Press the (*) key to select symbol or press (#) to change input method.
4. Press **Options**, then **Send To**, select either **Enter Number** (to enter a number that is not in contact list) or **Add From Phonebook** (to choose a contact) then press **OK** to send message.

Inbox

1. Press **Menu**, scroll down to **Messages** and press **OK**.
2. Select **Inbox** and press **OK**.
3. Select a message from the list and press **Options** to view the message.

From Options you can:

Reply: Input your message and send to the sender.

Call sender: Select to call sender.

Forward: Forward message to other contacts

Delete: Select to Delete the message.

Delete all: Delete all received messages.

Save to phonebook: Here you can save the sender's phone number.

Outbox

1. Press **Menu**, scroll down to **Messages** and press **OK**.
2. Select **Outbox** and press **OK**.
3. Select a message from the list and press **Options** to **View/Resend/Edit/Delete/Delete All Messages**.

Drafts

Here you can see the messages which you have not sent.

Sent messages

Here you can check all messages you have sent out.

SMS Settings

Here you can check memory status and setup preferred storage or save sent messages.

All Received, Missed and Outgoing Calls are saved in **Call History**. Here you can check call logs as below:

- Missed calls
- Dialed calls
- Received calls
- Delete call logs

Magnifier

In standby mode, **Press Menu**, scroll to **Magnifier**.

With this function, the elderly users can easily read the newspaper, magazine, books, etc.

By pressing the **Up / Down** Arrows the size will increase or decrease.

Organizer

Alarm

1. Press **Menu**, scroll down to **Organizer**, select **Alarm** and press **OK**.
2. Press **Edit** to select status **On / Off**. Press (*) and (#) to change the status on/off.
3. Enter the time directly by keypad.
4. Scroll to edit **Repeat Times**, **Alert Tone** and **Alert Type**.
5. Press **Save** to activate the alarm, to cancel press the **Back Key** (...)
6. To edit the alarm, press **Edit**, to stop the alarm, select **OFF**.

Bluetooth

1. Press **Menu** scroll to **Organizer** and press **OK**.
2. Select **Bluetooth** and press **OK** for the below settings:
Function on /off: Select on/off to enable/disable Bluetooth.
Visibility: Select on/off to make the phone visible /invisible to other devices.
My device: Saved device name and allow you to add new devices.
Search Audio Device: Search for the available audio device, search by pressing yes. If connecting other devices, you need to share the password, enter it and press OK.
My Name: Name for current device.

Calendar

1. Press **Menu**, scroll to **Organizer**, press **OK** to select **Calendar**. Today's day and date is shown on the display.
2. Press **Options** to do following settings:
View: Show the event for the selected date.
View all
View all events

Add event

1. Input subject for the event.
2. Enter a start date and time for the event.
3. Enter the end date and time for the event.
4. Enter subject for the event.
5. Activate Alarm and repeat times for the event.
6. Enter location for the event.
7. Save the event.

Delete event: Delete the selected event.

Jump to date: Enter the date and press OK.

Go to weekly view: Shown this week date

Calculator

1. Press **Menu**, scroll to **Organizer**, press **OK** to select **Calculator**.
2. Enter the first number and use (#) to enter into decimal point.
3. Use the **Up / Down** key to select (+ - * ÷) and press **OK**.
Enter the next number and press **OK**.
The result is then shown on the screen.

File Manager

Use it to manage all files, you can rename, copy, delete, move the files.

1. Press **Menu**, scroll to **Settings**, select **File Management** and press **OK**.
2. Select from phone or SIM card

Multimedia

Camera

1. Press **Menu**, scroll to **Camera** and press **OK**.
2. Press the **(0)** key to take photo.
3. To view photos, press **Options** and select **Photos**.
Warning! If memory card is insufficient, delete some documents or expand the storage with Micro SD card.

Image Viewer

View all saved photos under this menu.

FM radio

1. Press **Menu**, scroll down to **Multimedia**, press **OK** to select **FM Radio**.
2. Press **Options** to view **Channel List**.
3. Select **Manual Input** to tune to the channel you prefer.
4. Select **Auto Search** to search for your local radio channel.
5. Enter into **Settings** to set up background play.
6. Press the **Up / Down** key to start the search program.
7. Press the (*) and (#) keys to control the volume.
8. Press the (0) key to start or stop the FM Radio

Audio player

1. Please download music to the phone or memory card first.
2. Press **Menu**, scroll down to **Multimedia**, press **OK** to select **Audio Player**.
3. Select a preferred music and press the (0) to play or stop it.
4. Press to select the last song or the next song.
5. To control the volume, please press (*) and (#).
6. Press **Red End Call** key to the standby mode.

SOS Settings

1. Press **Menu**, scroll down to **Settings**, press **OK**.
2. Select **SOS Settings** and press **OK**.
3. Scroll to **Status** and setup **SOS status** On / Off.
4. Scroll to **Family Numbers** to setup SOS Numbers. Here you can setup **5** numbers.
5. Scroll to **SOS SMS** on / off to choose send SOS SMS or not.
6. Enter into SOS SMS to edit message.
7. Enter into **Warning Tone** to control the tone status on / off.

Make A SOS Call

Before you make an SOS Call, please assure SOS Status is **ON** and you have already finished the SOS setup.

Hold down the **SOS button**, located on the back of the phone, the phone will automatically send SMS messages to the programmed SOS numbers it will then call the three SOS numbers one by one. A siren will be alarmed and will stop once a call is answered.

Phone Settings

1. Press **Menu** scroll to **Settings**.
2. Select **Phone Settings** and press **OK**.

Setup Time and Date

1. Select **Set Home City** and choose your local city.
2. Select **Time and Date** and press **OK**.
3. Select **Set Time/Date** and press **OK**.
4. Enter **Time and Date** and press **Save**.

Setup Language

1. Select **Language** and press **OK**.
2. Use **Up / Down** key to select your language from the list and press **OK**.

Setup Input Method

1. Select **Prefered Input** method and press **OK**.

Change the Wallpaper

1. Select **Display**, then select **Wallpaper**.
2. Here you can select wallpaper form the phone and memory card.

Call Settings

1. Press **Menu** enter into **Settings** and press **OK**.
2. Select **Call Settings** and press **OK**.
3. Here you can Activate or Deactivate the functions below:
 - Blacklist
 - Whitelist
 - Auto-redial
 - Call time reminder
 - Answer mode

User Profiles

1. Press **Menu** scroll to **Settings**.
2. Select **User Profiles** and press **OK**.
Then you will see four mode as below:
 - General
 - Silent
 - Meeting
 - Outdoor

Customize General Mode

Here you can choose your preferred Power on/off ringtones, incoming call ringtones etc.

1. Press **Menu** scroll to **Settings**.
2. Select **User Profiles** and press **OK**. Select **General** and press **Options**.
3. Select **Customize** and press **Select**.
4. Scroll to **Alert Type** and press **Options** to select Ring only Vib, only Vib, and ring or Vib. Then ring. Press **OK** to save.
5. Scroll to **Ringtone** and press **Options** to select preferred ringtone.
6. Scroll to **Ringtone** volume and press **Option**, use **Up / Down** key to adjust volume, press **OK** to save.
7. Scroll to **Message** and press **Option** to select a preferred ringtone for message.
8. Scroll to **Message** volume and press **Option**, use **Up / Down** key to adjust volume, press **OK** to save.

Speed dial

(*) and (#) key and the numerical keys 2-9 can be used for speed dialling.

Add speed dial number and activate the status
Add (*) and (#) key speed dial numbers:

1. Press **Menu** scroll to **Settings**.
2. Select **Speed Dial** and press **OK**.
3. Enter into (*) and (#) key to activate the status.
4. Select Set numbers to choose numbers for (*) and (#) keys from phonebook.

The same with to add contacts for the numerical keys 2 - 9.

Block function

You can disable functions to simply use the phone.

1. Press **Menu** scroll to **Settings** and press **OK**.
2. Select **Block Function** and press **OK**.
Scroll to choose each function you want to disable and press Done.

Up/Down Key Shortcut Settings

Here you can set shortcuts for up key and down key.

1. Press **Menu** scroll to **Settings**.
2. Select **Key Shortcuts** and press **Ok**.
3. Choose **Up** key to determine relevant functions you like, the same way to set shortcuts for **Down** key.

1. Press **Menu** scroll to **Call Blocking** and press **OK**.
2. Scroll to **Black List** to setup blocking specific numbers from calling you, here you can add/remove up to 100 numbers.
3. To turn the **Black List** function On/Off, scroll to **Black List** and then scroll to **Turn ON/OFF**.
4. Scroll to **White List** to setup blocking all calls apart from those added into your white list, here you can add/remove up to 100 numbers.
The phone password is 1122.
5. To turn the White List function ON/OFF scroll to **Block List** and press **Turn ON/OFF**.
6. To quickly add numbers that have called you to the Black List press **Green Answer** key scroll to the number you wish to block and press **Options** then scroll to **Add to Black List**.
7. To quickly add SMS Text message numbers to the Black list navigate to the **SMS message** press **Options** then **View** then **Options** and scroll to **Add to Black List**.

Call Blocking

Here you can do security settings for SIM card, phone and keypad.

1. Press **Menu** to **Settings**.
2. Scroll to **Security Settings** and press **OK**.

Then you can see sub-menus below:

SIM security: Here you can setup and change PIN lock status on or off.

Phone security: Here you can setup the Phone lock status on/off.

You can also Change Password here.

Screen auto lock: Press OK to on/off auto lock.