

USER'S MANUAL

 
Dear Musician,
Thank you for purchasing the rechargeable MICRONOME Clip-on Metronome, and welcome to the KLIQ!

To register your product warranty, please visit www.kliqmusicgear.com/warranty. To get the most out of your new metronome, please carefully read this manual prior to first use, and keep it for later reference.

PRECAUTIONS

- USE** - Using the metronome in the following locations can result in a malfunction:
 - In direct sunlight
 - Locations of extreme temperature or humidity
 - Excessively dusty or dirty locations
 - Locations of excessive vibration
 - Close to magnetic fields
- HANDLING and CARE** - We recommend the following:
 - To avoid breakage, do not apply excessive force to the buttons, charging port, or display.
 - If the exterior becomes dirty, wipe it with a clean, dry cloth. (Do not use any chemical liquid cleaners or water.)
 - Never set any container with liquid in it near this device. If liquid gets into the equipment, it could cause malfunction, fire or electrical shock. Be careful not to let metal objects get into the equipment.

SPECIFICATIONS

- **Tempo Range:** 30 - 260 bpm
- **Beats:** 0, 1, 2, 3, 4, 5, 6, 7, 8, 9
- **Rhythm:** 
- **Volume:** Mute, Low, Medium, High
- **Display:** LED-backlit LCD Display
- **Power Source:** 3.7v / 110mAH internal battery
- **Energy Save Feature:** Automatic Power Off after 3 minutes of no sound/button engagement
- **Metronome Body Size:** 59.2 x 42 x 37.5 mm / 2.33 x 1.65 x 1.48 inch
- **Weight:** 28g / 0.99 oz

Included items:

- Metronome
- Owner's Manual
- 1 Micro USB Cable

CHARGING THE METRONOME



Charge the metronome with the included white micro USB cable and any powered USB port on a standard smartphone adapter or computer.

- In ON Mode, the screen shows the recharging label. The battery is fully charged recharging label becomes solid.
- In OFF mode, the screen shows recharging label at the same time LED light turns red and becomes dark when the power is fully charged.



100%~30%
battery power



20% battery power



5% battery power
(automatically OFF after
flashing for 5 seconds)

Recharging Duration: 1.2 hours

Continuous service time: A full charge will provide 16 hours of continuous use. (Under Normal Use)

Important: To prolong the life of the rechargeable battery, the device should be charged at least once every 6 months.

 
 
USING THE CLIP

You can clip this mini metronome onto your music, sheet music book, music stand, or even your collar, etc.

Caution: Clip may scratch the surface of your instrument. We do not recommend clipping the metronome directly to the finished surface of the instrument.

DISPLAY & BUTTON FUNCTIONS

1. POWER button
2. SELECT button
3. UP button
4. DOWN button
5. Display (see display chart to far right)
 - a. Select item
 - b. Flashing cursor
 - c. Beat
 - d. Tempo
 - e. Rhythm
 - f. Battery indicator
6. Metronome Flash LED
7. Clip
8. Micro USB charging jack

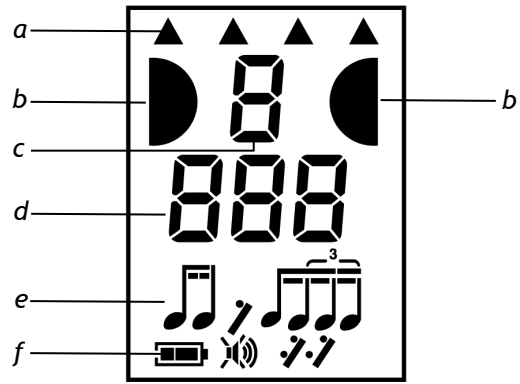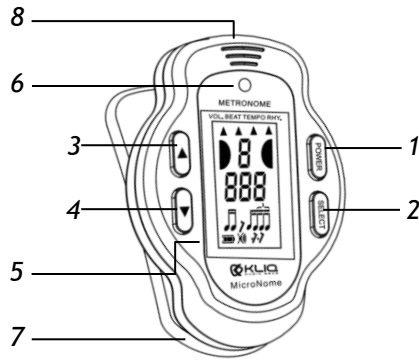

Display Chart

OPERATING INSTRUCTIONS

1. Press and hold POWER/PLAY button (Button 1) to turn on metronome.
2. Select **beat**. Press SELECT (Button 2) and move the cursor to "BEAT." Then press UP Button (Button 3) or DOWN Button (Button 4) to select the beat you want. The beat options are 0, 1, 2, 3, 4, 5, 6, 7, 8, 9. *
3. Select **tempo**. Press SELECT (Button 2) and move the cursor to "TEMPO." Then press UP Button (Button 3) or DOWN Button (Button 4) to select the tempo you want. The tempo ranges from 30 bpm to 260bpm. (See quick tempo range guide to the left for assistance) *
4. Select **rhythm**. Press SELECT (Button 2) and move the cursor to "RHY." Then press UP Button (Button 3) or DOWN Button (Button 4) to select the beat you want. The rhythm options are: *
5. Select **volume**. Press SELECT (Button 2) and move the cursor to "VOL." Then press UP Button (Button 3) or DOWN Button (Button 4) to select the beat you want. The volume levels are: Mute, Low, Medium, High. *
6. Press and hold POWER/PLAY button (Button 1) to start the metronome, the guide light will be lit red with the tempo set, and the two cursors on either side of the beat number will also flash from left to right according to the tempo.
7. Press and hold POWER/PLAY button (Button 1) to PAUSE the metronome.
8. Press and hold POWER/PLAY button (Button 1) to turn off metronome. If not in use it will power off after 3 minutes of being idle.

DEFAULT SETTINGS

- Tempo=120
- Beat=4
- Rhythm=♪
- Volume=High

* Tuner settings are remembered even when the power is OFF.

TEMPO RANGE REFERENCE GUIDE

TEMPO MARKING	BPM RANGE	
LARGO	40	60
LARGHETTO	60	66
ADAGIO	66	76
ANDANTE	76	108
MODERATO	108	120
ALLEGRO	120	168
PREST	168	200
PRESTISSIMO	>200	



For assistance with this product, please get in touch with us by:

✉ support@kliqumusicgear.com

🌐 www.kliqumusicgear.com/contact

☎ 800.316.9651