

 


HEATMASTER®
18" Log Placement Instructions


Huntington Beachfire
Blue Ridge Blaze

NOTICE
Leave these instructions with the manual accompanying the burner system for future reference.


STEP 1-3

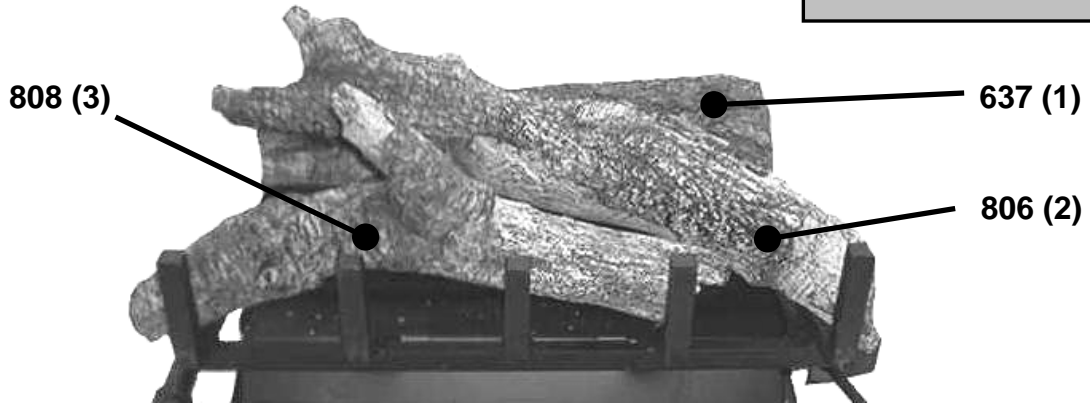

 STEP 4-5

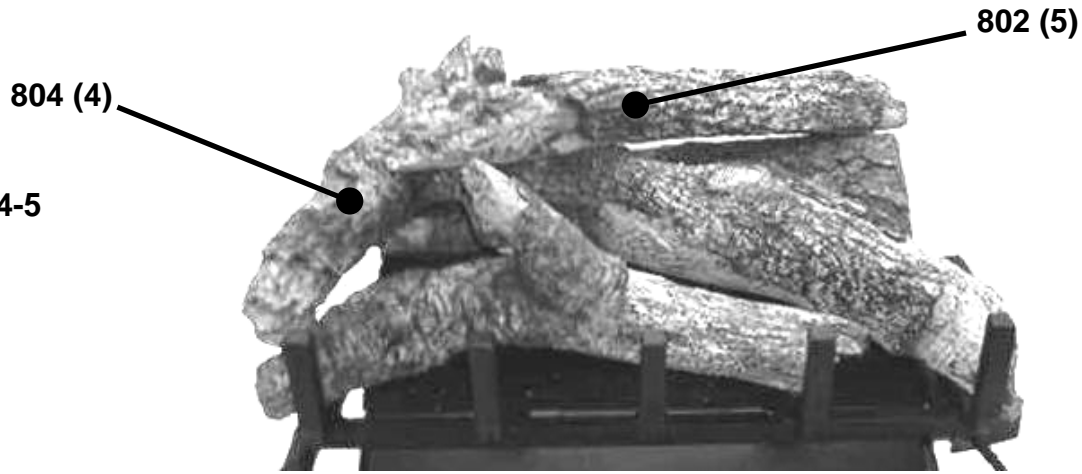

 STEP 6-10

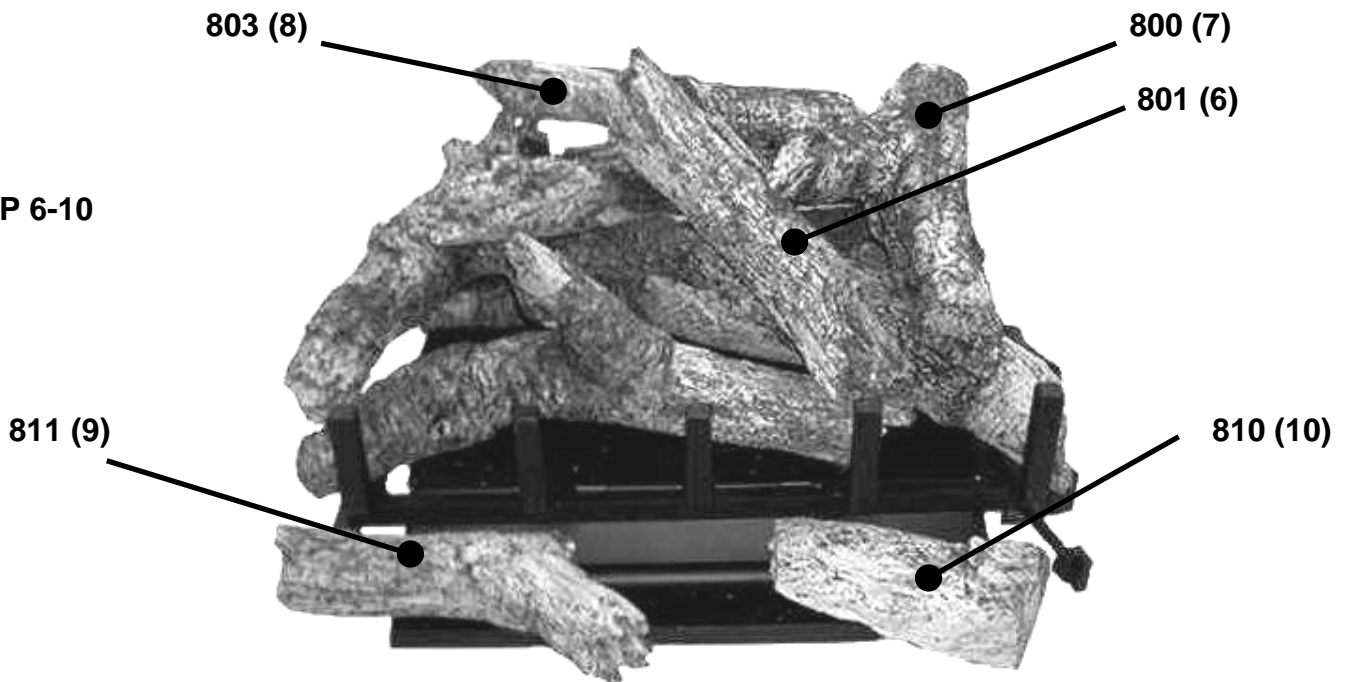

WARNING: FAILURE TO POSITION THE PARTS IN ACCORDANCE WITH THESE INSTRUCTIONS OR FAILURE TO USE ONLY PARTS SPECIFICALLY APPROVED WITH THIS APPLIANCE MAY RESULT IN PROPERTY DAMAGE OR PERSONAL INJURY.

HEATMASTER®
18" Log Part Numbers

 
Huntington Beachfire
Blue Ridge Blaze



637



804

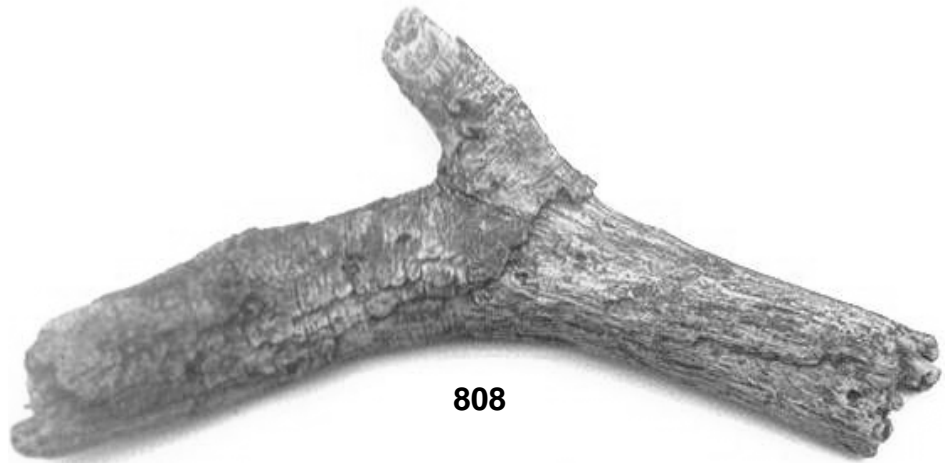


808



806

 HEATMASTER®
18" Log Part Numbers
Huntington Beachfire
Blue Ridge Blaze

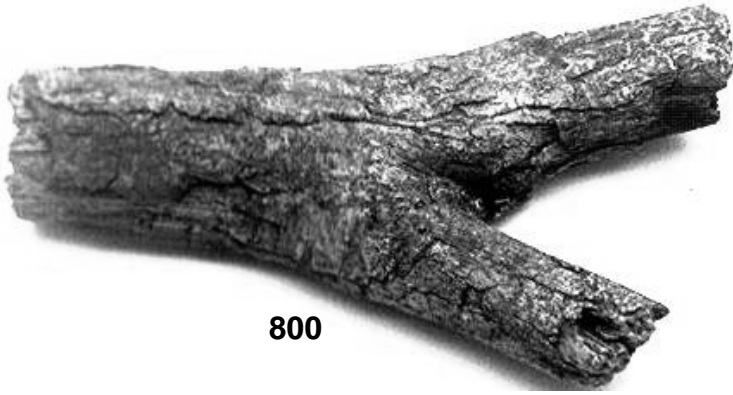

800



810



802



811



803



801

**DO NOT
DISCARD**

 
HEATMASTER®
24" Log Placement Instructions
Huntington Beachfire
Blue Ridge Blaze

NOTICE
Leave these instructions with
the manual accompanying
the burner system for future
reference.

STEP 1-3




STEP 4-6

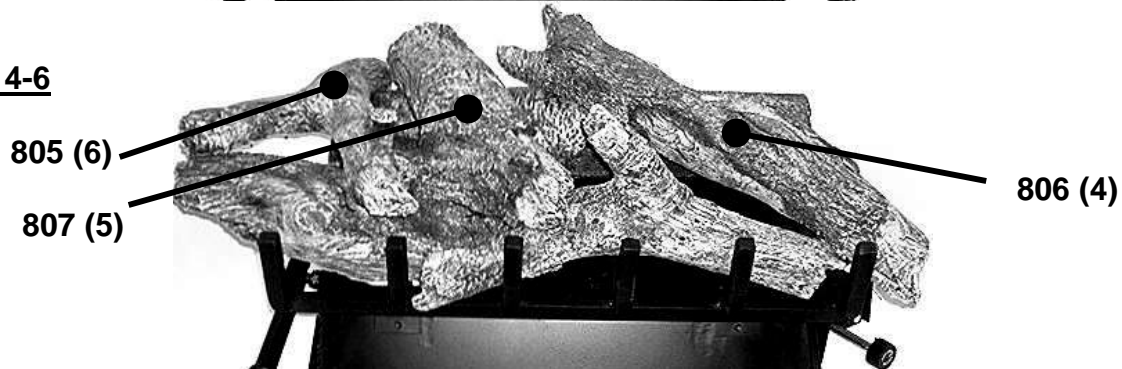

STEP 7-9




 STEP 10-13

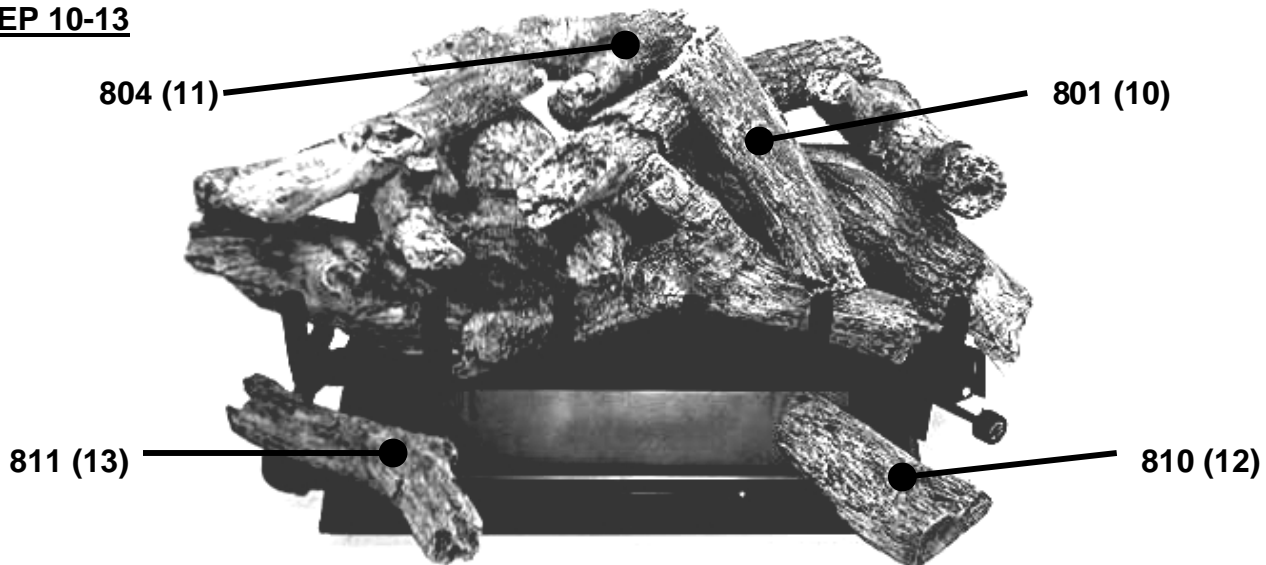

HEATMASTER®
24" Log Part Numbers

 Huntington Beachfire
Blue Ridge Blaze

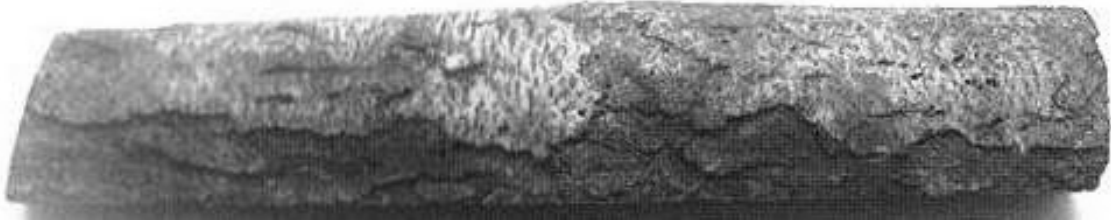


809



815



 808

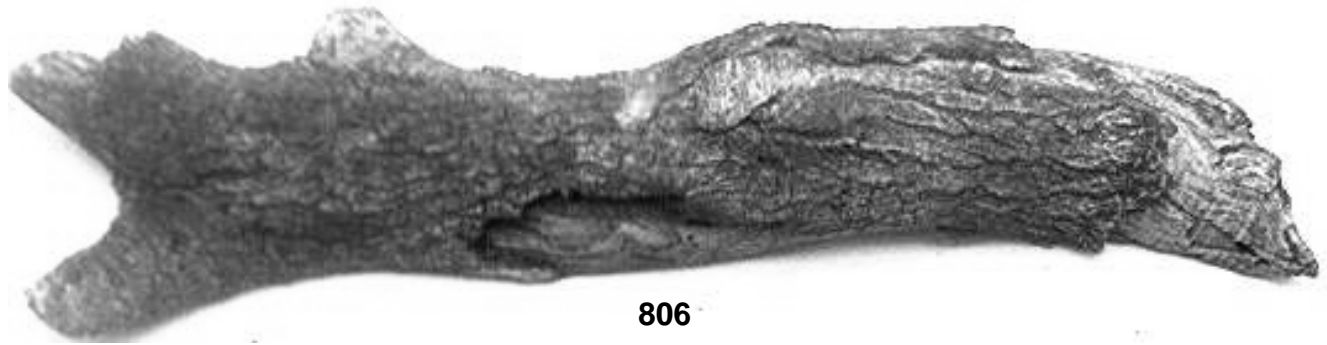

806



804



805

HEATMASTER®
24" Log Part Numbers

 
Huntington Beachfire
Blue Ridge Blaze



807



810

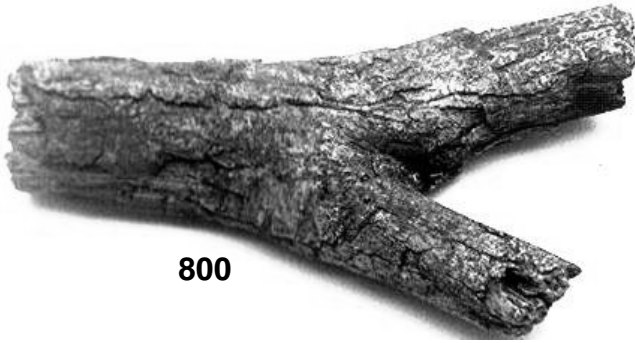

800



811



802




803



 
801




HEATMASTER®
30" Log Placement Instructions
Huntington Beachfire
Blue Ridge Blaze

 **NOTICE**
Leave these instructions with the manual accompanying the burner system for future reference.


STEP 1-3

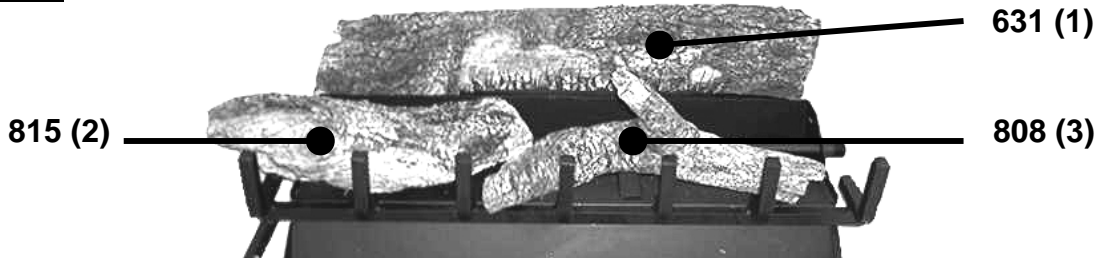

 
STEP 4-5

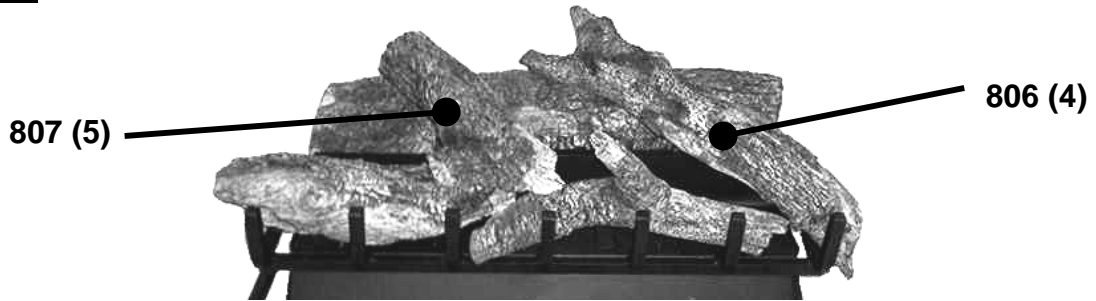

 
STEP 6-8

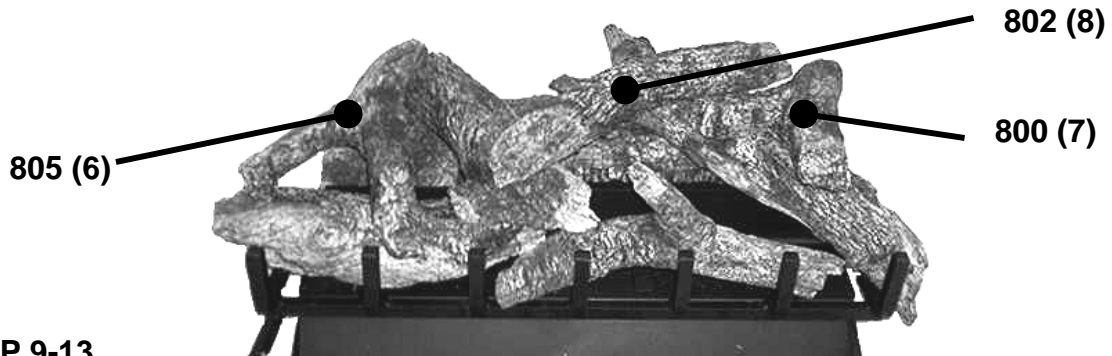

 STEP 9-13

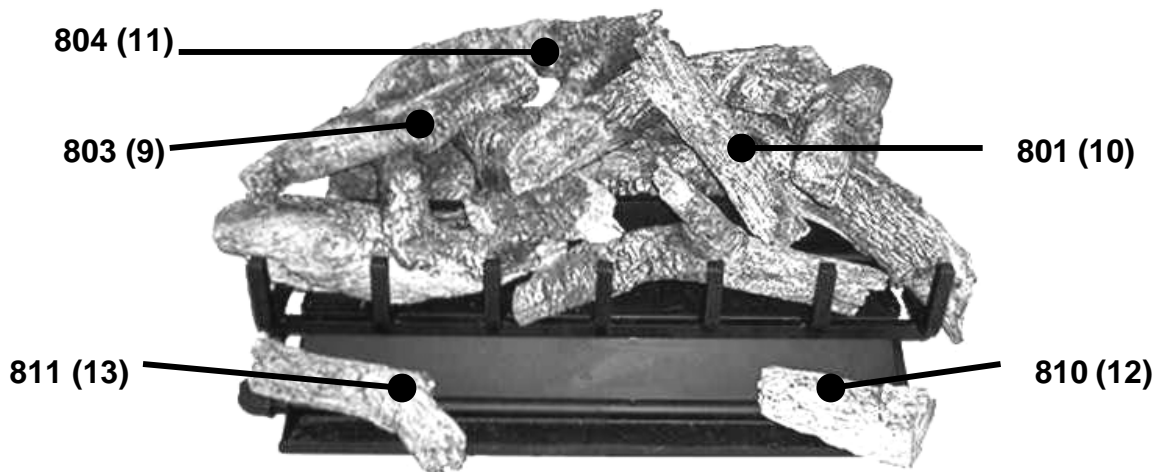

 HEATMASTER
30" Log Part Numbers
Huntington Beachfire
Blue Ridge Blaze

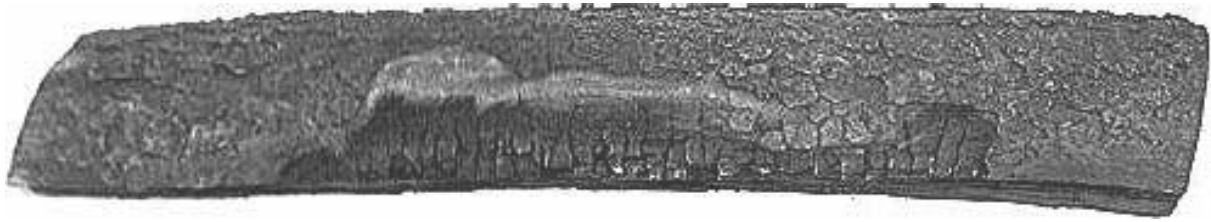

631



815



808



806



804



805

HEATMASTER®
30" Log Part Numbers

 
Huntington Beachfire
Blue Ridge Blaze



807



810

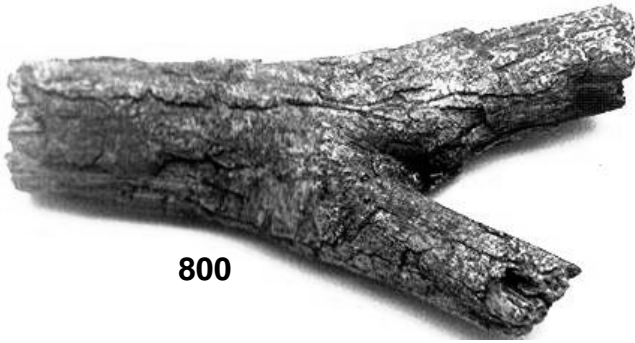

800



811



802

 


803




801

HEATMASTER®
36" & 42" Log Placement
Blue Ridge Blaze
Huntington Beachfire

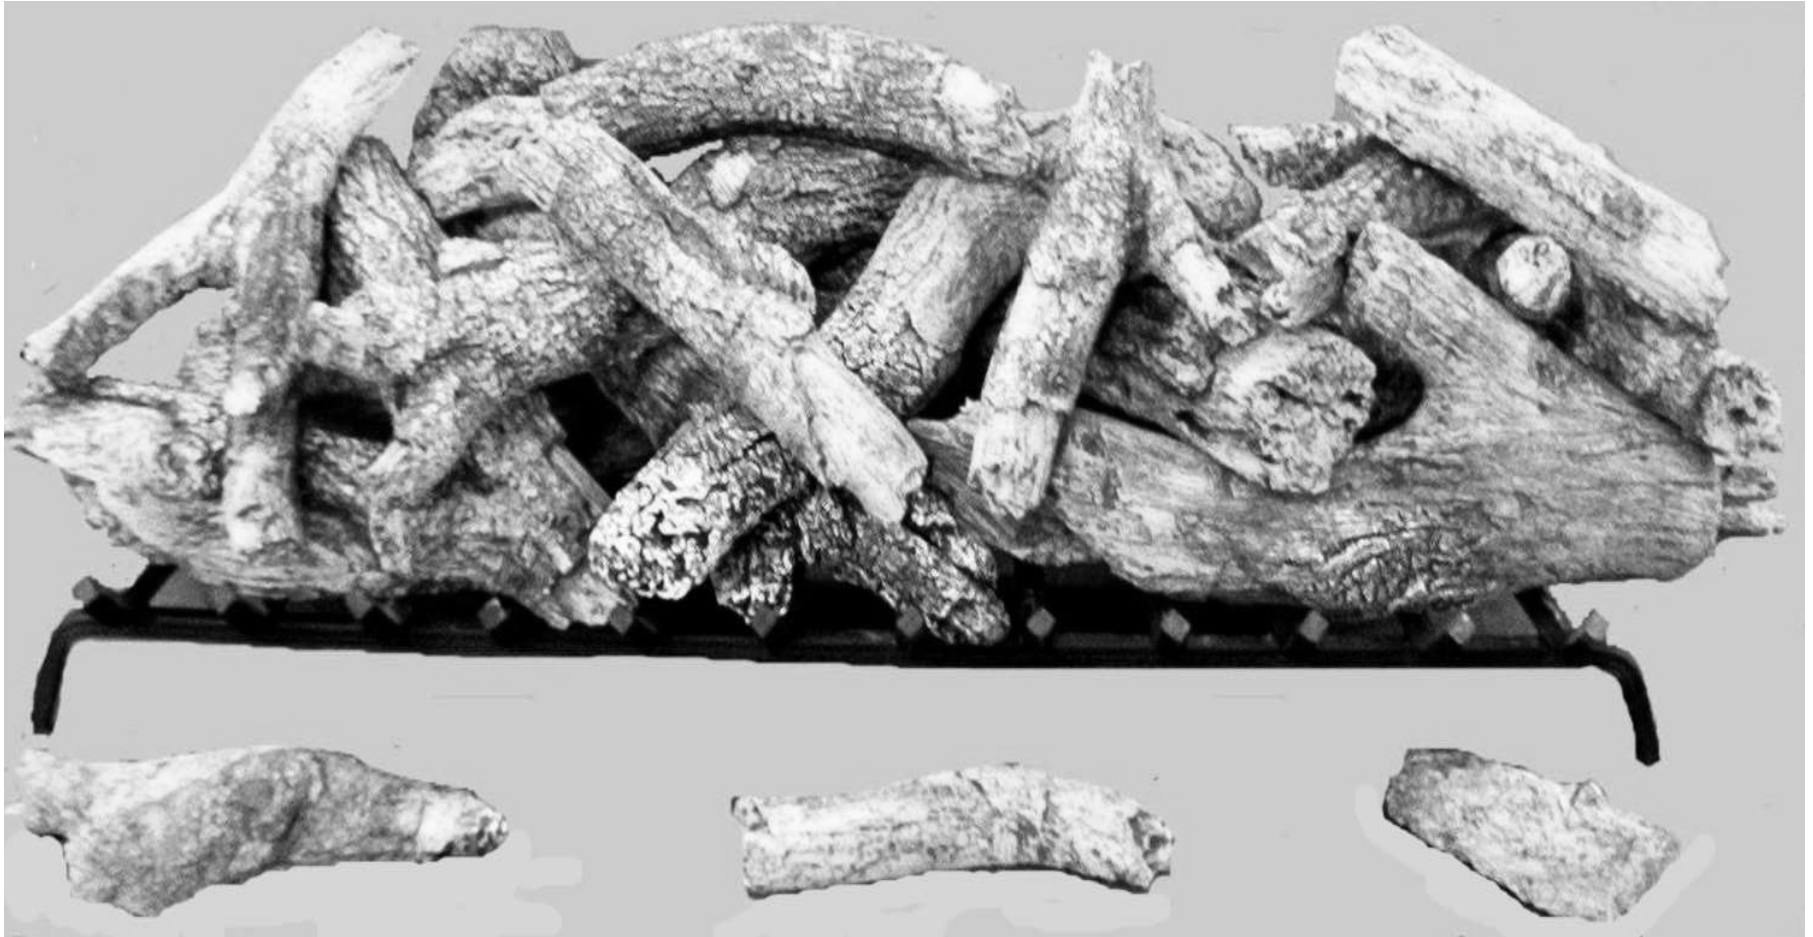

The above illustration is a recommendation only. Log arrangement may be the installer's choice.

 
HEATMASTER®
36" & 42" Log Part Numbers
Huntington Beachfire
Blue Ridge Blaze

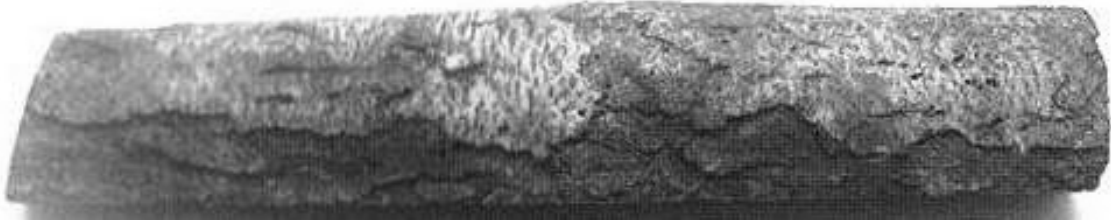


809



 815

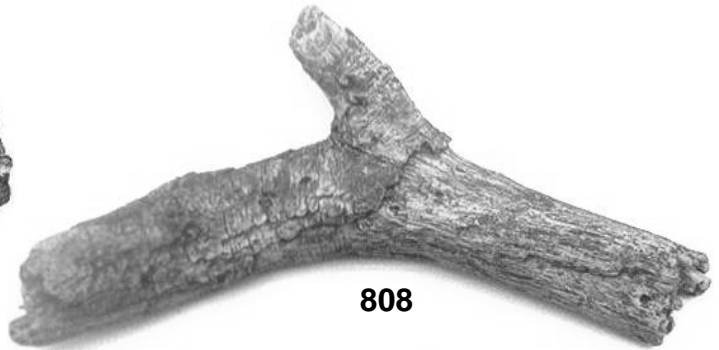

808

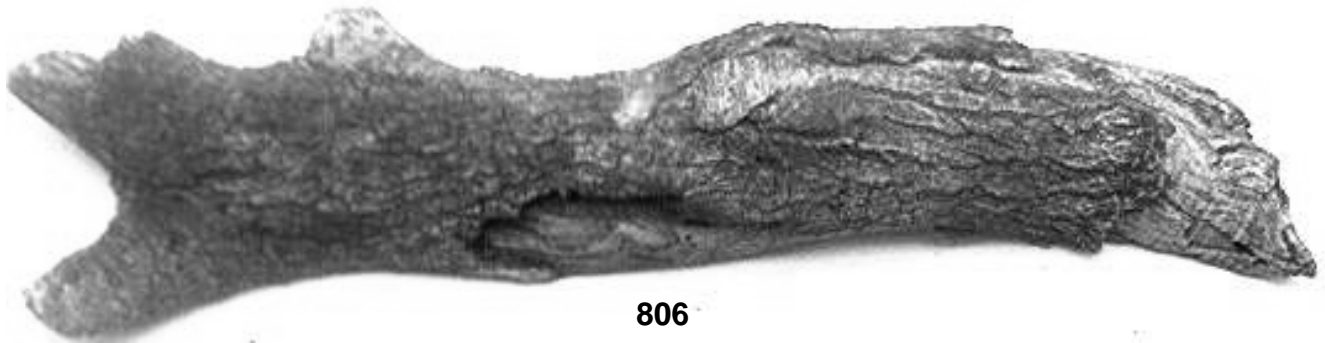 

806



804



805

HEATMASTER®
36" & 42" Log Part Numbers

 
Huntington Beachfire
Blue Ridge Blaze



807



810

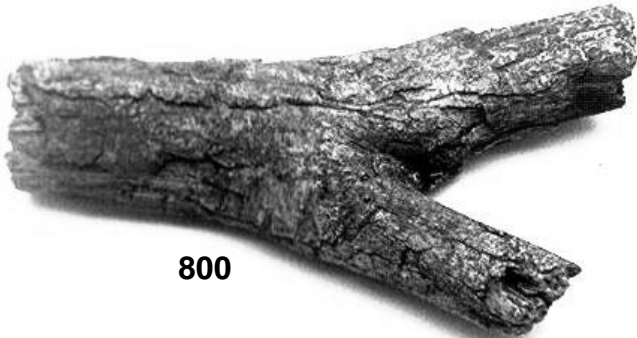

800



811



802



803



801

HEATMASTER®
36" & 42" Log Part Numbers

Huntington Beachfire
Blue Ridge Blaze



744



 
885



886



874

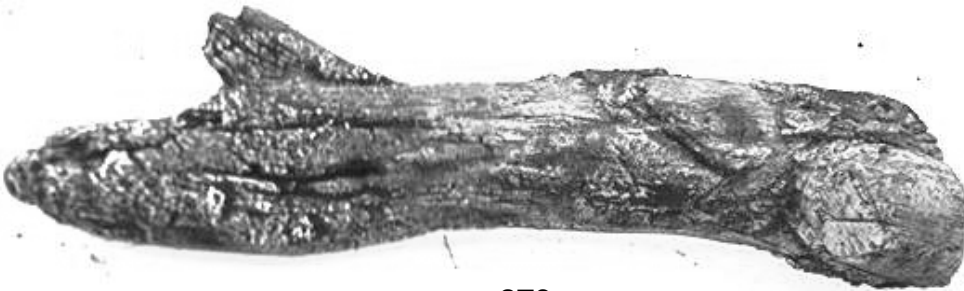

873



887