

info@supremem.com
www.supremem.com



## FIRESCREEN DOOR

The optional SUPREME firescreen door (3238SFC\_FS, 32328SF\_FS or 3238SF\_FSA) is an accessory that is available to use on occasion instead of the fireplace's glass door. The SUPREME firescreen door comprises of a screen as well as a pyroceramic glass panel on the lower half.

## INSTALLATION INSTRUCTIONS

WARNING: Do not replace the door of the fireplace if the fireplace is hot. Only replace the door of the fireplace when the fireplace is cold.

- 1. Open the door of the fireplace.
- 2. Lift the fireplace door upwards to remove the lower extremity of the hinge from the bottom hinge hole and then lower the door to remove the upper extremity of the hinge from the top hinge hole.
- 3. Store the glass door in a secure place, so as to not damage the glass panel.
- 4. Install the firescreen door by inserting the upper extremity of the hinge into the top hinge hole and then lowering the firescreen door to insert the lower extremity of the hinge into the bottom hinge hole.

## **OPERATION INSTRUCTIONS**

WARNING: Burn a maximum of three standard sized (approximately 17 inches in length and 4 inches in depth) logs at a time. Burning more than three standard sized logs is hazardous and can result in damages to the unit, damages to personal property, bodily harm and will void the warranty. Do not use fire accelerants to rekindle the fire if the first attempt to start the fire failed. Ensure that all safety precautions and clearances to combustibles in the fireplace's Owner's Manual are respected. Before starting a fire, ensure that there is not a cold draft in your firebox, which is an indication of a downdraft, negative pressure.

- a) Place two logs one next to the other in the firebox. Do not use a fireplace grate.
- b) Place a Firestarter between the two logs.
- c) Light the Firestarter.
- d) Place a third log on top of the two first logs. Ensure that the third log is directly above the Firestarter with a gap between.
- e) Close the firescreen door.

CAUTION: The wood should be placed away from the door for safety purposes and to avoid damage to the glass.

WARNING: The stacked logs should never exceed half the height of the firebox.

