 


FUR TRIMMER™

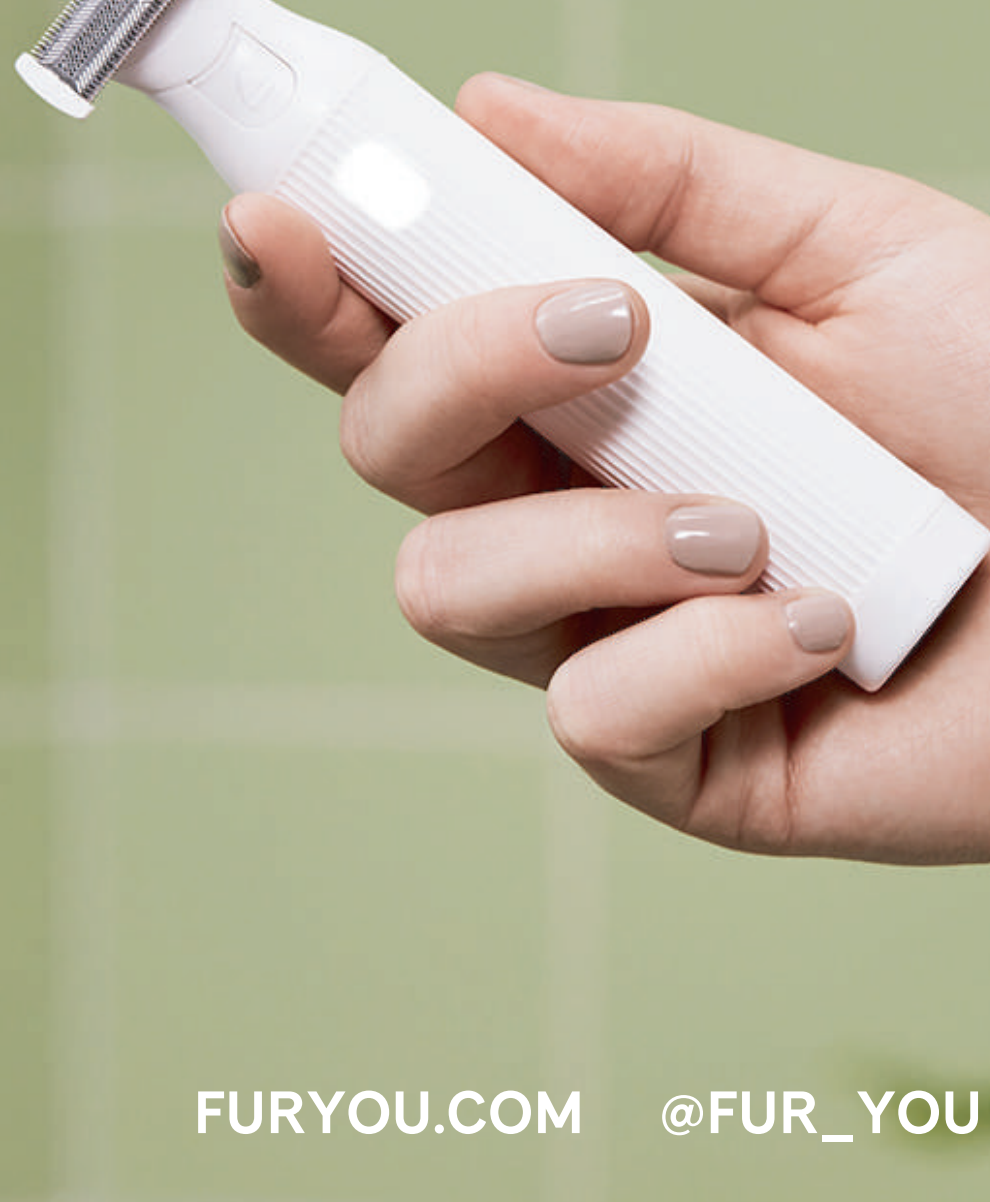

FURYOU.COM @FUR_YOU

HEY! READ THIS FIRST.

To help keep you safe and to get a great shave or trim, please read these warnings and instructions regarding the Fur Trimmer (the "Trimmer" or "device") before you get started.

WARNINGS:

ALWAYS...

- Unplug the adapter from the electrical outlet after charging.
- Clean after every use.
- Use this Trimmer only for its intended use as described in this manual—do not use any attachments or accessories which have not been explicitly recommended by the manufacturer.
- Periodically check the adapter and cable for damage. Never operate this Trimmer if it has a damaged cable or plug or it is not working properly.
- Avoid handling the adapter with wet hands or storing it in a damp environment.


DO NOT...

- Do not use the device if it appears damaged, or has a broken foil, blade, or cutting unit as injury may occur.
- Do not use on injured or damaged skin.
- Do not share with others—this device is for personal use only.
- Do not use while charging.
- Do not use the charging adapter while bathing, or in the shower or tub.
- Do not charge the Trimmer where the power adapter could fall into water or any other liquid.
- Do not operate where aerosol (spray) products or oxygen are being used.
- Do not expose the Trimmer to temperatures less than 32°F or more than 105°F for longer than 2 hours.

AND REMEMBER...

- This device is not a toy, and is not meant for use by children. It is intended for household use only.
- Users with any form of pacemaker or similar device should contact their healthcare provider before using this product.
- Stop use immediately if skin becomes irritated or inflamed.
- In compliance with California law (Proposition 65), we notify you that the Trimmer may contain small traces of lead in the soldering of the circuit board.


DEVICE OVERVIEW

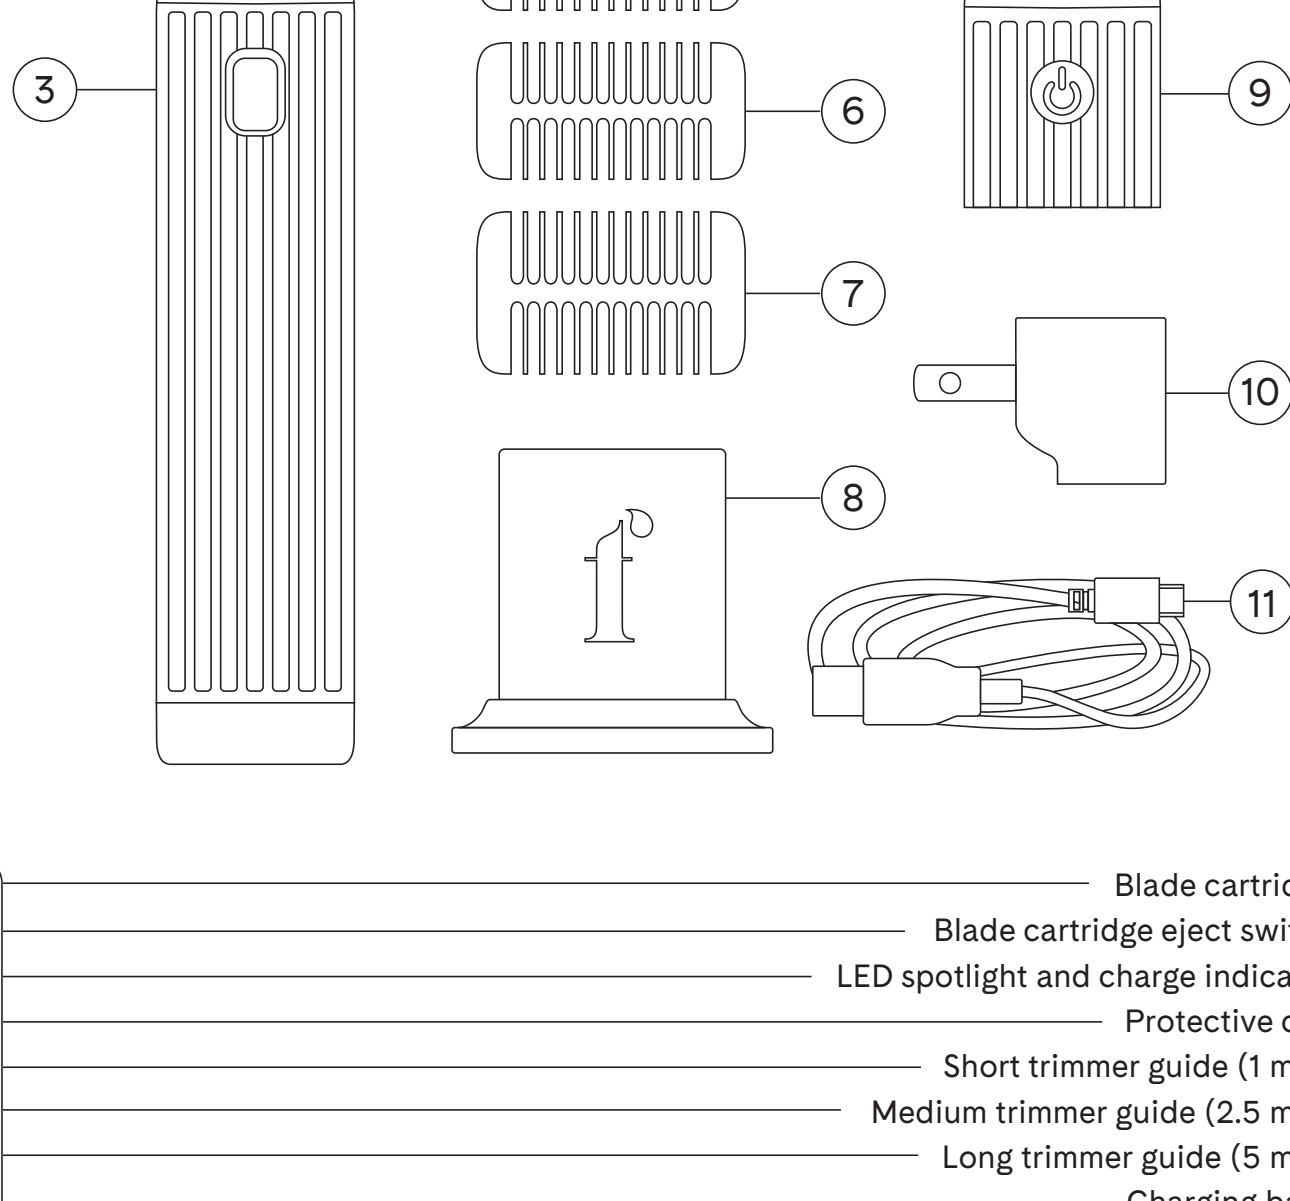

1	Blade cartridge
2	Blade cartridge eject switch
3	LED spotlight and charge indicator
4	Protective cap
5	Short trimmer guide (1 mm)
6	Medium trimmer guide (2.5 mm)
7	Long trimmer guide (5 mm)
8	Charging base
9	Power button
10	Charging adapter
11	USB charging cable

CHARGING




Charge your Trimmer before your first use. The Trimmer will provide 60 minutes of use after a full three hour charge. To charge, follow these steps:

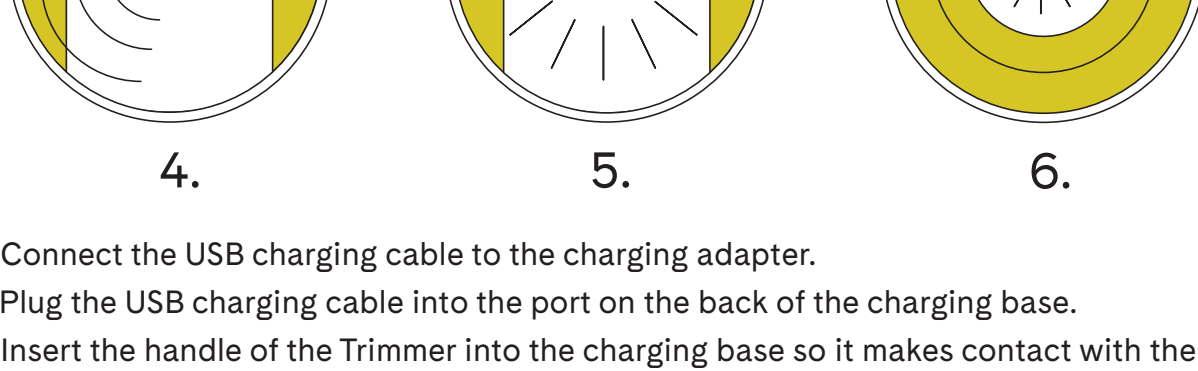

1. Connect the USB charging cable to the charging adapter.
2. Plug the USB charging cable into the port on the back of the charging base.
3. Insert the handle of the Trimmer into the charging base so it makes contact with the bottom of the charging base.
4. The LED spotlight on the front of the device will pulse slowly while the device is charging.
5. The LED spotlight on the front of the device will glow solidly once the Trimmer is fully charged. A full charge will take about 3 hours—do not leave the Trimmer in the charger for longer than 24 hours.
6. When the battery is low, the light behind the power button will flash rapidly.


Never expose the charging adapter to water.

LET'S GET STARTED

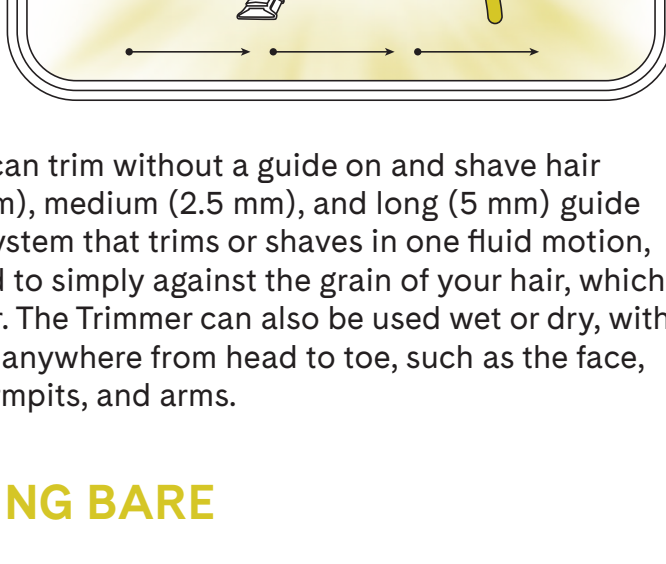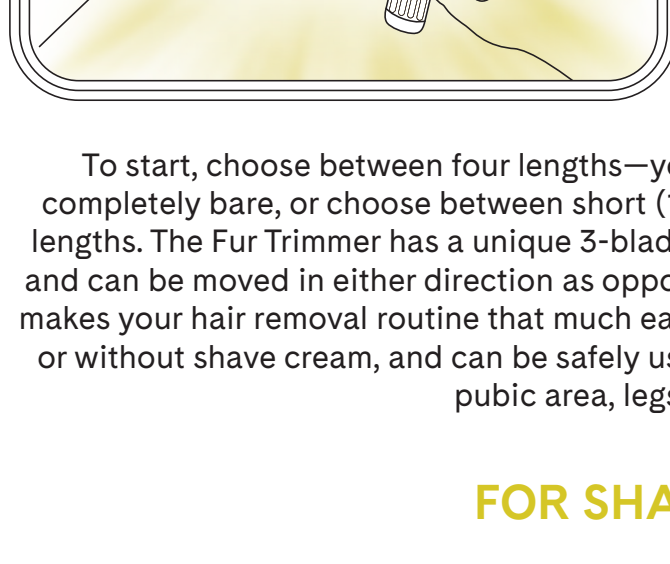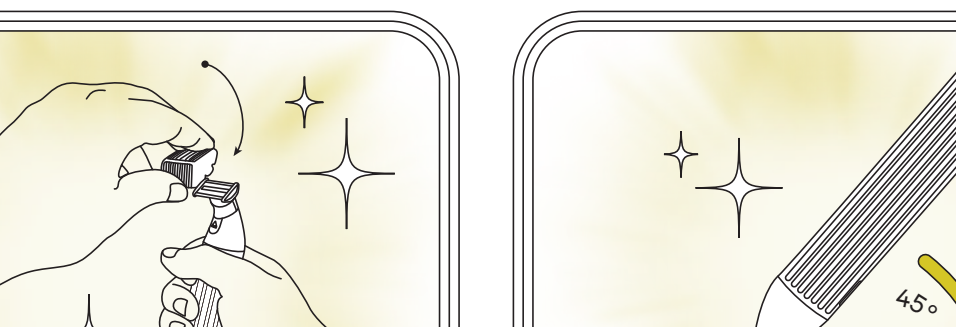

To start, choose between four lengths—you can trim without a guide and shave hair completely bare, or choose between short (1 mm), medium (2.5 mm), and long (5 mm) guide lengths. The Fur Trimmer has a unique 3-blade system that trims or shaves in one fluid motion, and can be moved in either direction as opposed to simply against the grain of your hair, which makes your hair removal routine that much easier. The Trimmer can also be used wet or dry, with or without shave cream, and can be safely used anywhere from head to toe, such as the face, pubic area, legs, armpits, and arms.

 FOR SHAVING BARE

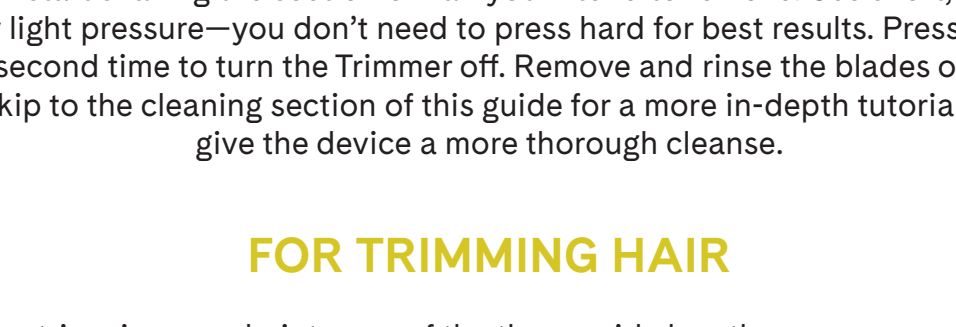

If you plan on shaving completely bare, wet your skin with warm water, and apply a very thin layer of shave cream—we recommend our no-foam, extra hydrating Shave Cream for maximum precision and protection against razor burn. Press the power button on your Trimmer, then start shaving the section of hair you intend to remove. Use short, even strokes, and apply light pressure—you don't need to press hard for best results. Press the power button a second time to turn the Trimmer off. Remove and rinse the blades once you're done, or skip to the cleaning section of this guide for a more in-depth tutorial on how to give the device a more thorough cleanse.


 
FOR TRIMMING HAIR

If you plan on trimming your hair to any of the three guide lengths, you can use the Trimmer on wet or dry hair and skin. First, attach the guide length of your choice to the head of your Trimmer—simply position the guide on the blade head, and push down to snap into place. Press the power button on your Trimmer, and trim to your desired length. Use short, even strokes, and apply light pressure—you don't need to press hard for best results. Press the power button a second time to turn the Trimmer off. Remove and rinse the guide and blades once you're done, or skip to the cleaning section of this guide for a more in-depth tutorial on how to give the device a more thorough cleanse.

AFTERCARE

After trimming or shaving, follow up with our signature Fur Oil—it hydrates skin, minimizes razor burn and ingrowns, and softens prickly hair. For added protection against razor burn, apply Stubble Cream onto fully bare skin to prevent prickly regrowth.

REPLACING THE BLADE CARTRIDGE

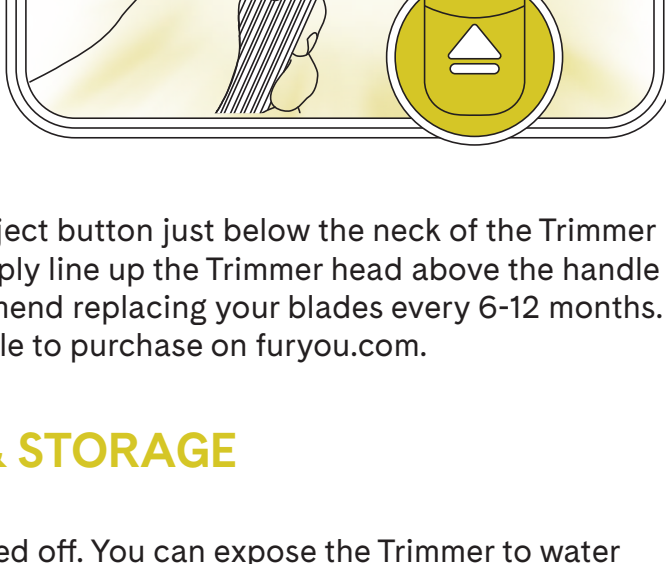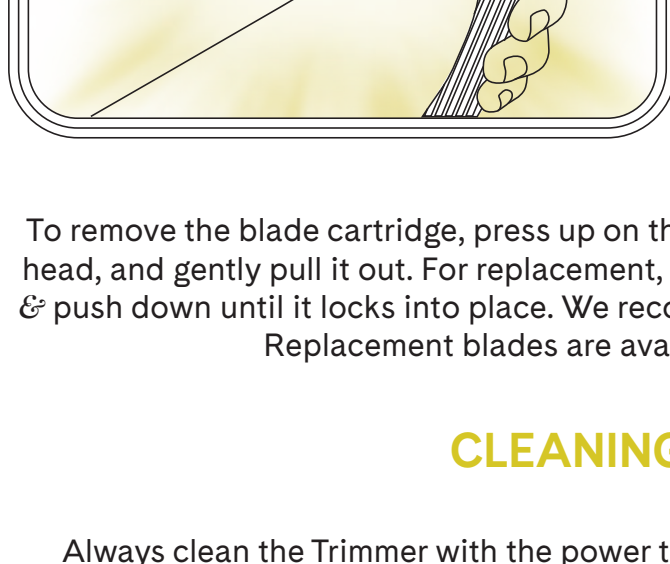

To remove the blade cartridge, press up on the eject button just below the neck of the Trimmer head, and gently pull it out. For replacement, simply line up the Trimmer head above the handle & push down until it locks into place. We recommend replacing your blades every 6-12 months. Replacement blades are available to purchase on furyou.com.

CLEANING & STORAGE

Always clean the Trimmer with the power turned off. You can expose the Trimmer to water during cleaning, but never fully submerge it in water. The Trimmer's head can be pulled from the handle and rinsed under running water. To keep your Trimmer in good condition, we recommend that you clean the Trimmer, blade, guides, and cap after every use. The parts can be rinsed with water and dried with a soft cloth. Don't use harsh cleaning chemicals that could damage the device—mild soap and water is all you need. Once you're done, just store the Trimmer with the protective cap on in a cool, dry place.

CONTACT & WARRANTY

Our limited 1-year warranty covers defects in materials and workmanship of your device under normal use as long as you purchased and used it in the United States or Canada from an authorized retail partner or directly from furyou.com. For the avoidance of doubt, the limited warranty is only for the original purchaser and begins on the date of original purchase and expires one year later (the "Warranty Period"). The Warranty Period is not extended by any period even if replaced by the manufacturer during the Warranty Period.

The Fur Trimmer, inclusive of its charging base and handheld unit and exclusive of blade cartridges, is warranted to be free from manufacturing defects for a period of 1-year. Manufacturers' warranties may not apply in all cases, depending on factors such as use of the device, where the product was purchased, or who you purchased the product from. Please review the warranty carefully, and contact the manufacturer if you have any questions. The limited warranty does not cover or apply to (i) cosmetic deterioration caused by fair wear and tear, or (ii) any damages caused by accident, misuse, or neglect, flood, fire, earthquake or other external causes, (iii) a device or part of the device that has been altered or modified (e.g., to alter functionality or capability) by anyone who is not a representative of Fur, (iv) damage caused by use with non-Fur products; (v) damage caused by operating the device outside the permitted or intended uses described by Fur or with improper voltage or power supply, or (vi) damage caused by service performed by anyone who is not a representative of Fur. Any attempt to open up or take apart the Trimmer (or its accessories) will void the limited warranty.

Fur does not warrant that the operation of the device will be uninterrupted or error-free. Fur is not responsible for damages arising from failure to follow instructions relating to the device's use. If you discover a valid defect and notify Fur during the Warranty Period, Fur will, at our sole and absolute discretion, replace your Trimmer free of charge. The foregoing sets forth your sole and exclusive remedy, and Fur's sole and exclusive obligation, with respect to a breach of the warranty set forth above. All claims under warranty must be supported by reasonable and demonstrable evidence that the date of the claim is within the Warranty Period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the Warranty Period. To claim your warranty, please email hello@furyou.com with your receipt of purchase, a picture of your warranty, and your claim. Should your claim be valid, you will be sent full instructions on how to return your product. Shipping and handling charges may apply except where prohibited by applicable law.

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES (INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, FUR SHALL NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS, REVENUE OR DATA, RESULTING FROM ANY BREACH OF EXPRESS OR IMPLIED WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, EVEN IF FUR HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

For any additional questions or concerns with your Trimmer, please email hello@furyou.com.