 
HEXLOX THRU AXLE SIZING GUIDE



Step 1 - Print out this sheet at 100% - Do not scale!

Step 2 - Check correct scaling by measuring with a ruler here



Step 3 - Place your axle below to measure the axle length. The length can can have a variation of +/- 2 mm and still be a pefect fit.

Head of axle may not go past this line	Millime	eters 1	100	110	120 	130 	140 	150 	160 	170 	180 	190 	200	210	220 	230
Measure the length of body only																

Step 4 - Match the thread of your axle against all of these examples, then pick the best fit

