 


Ronix[®]

Premium Quality

VACUUM CLEANER

8641

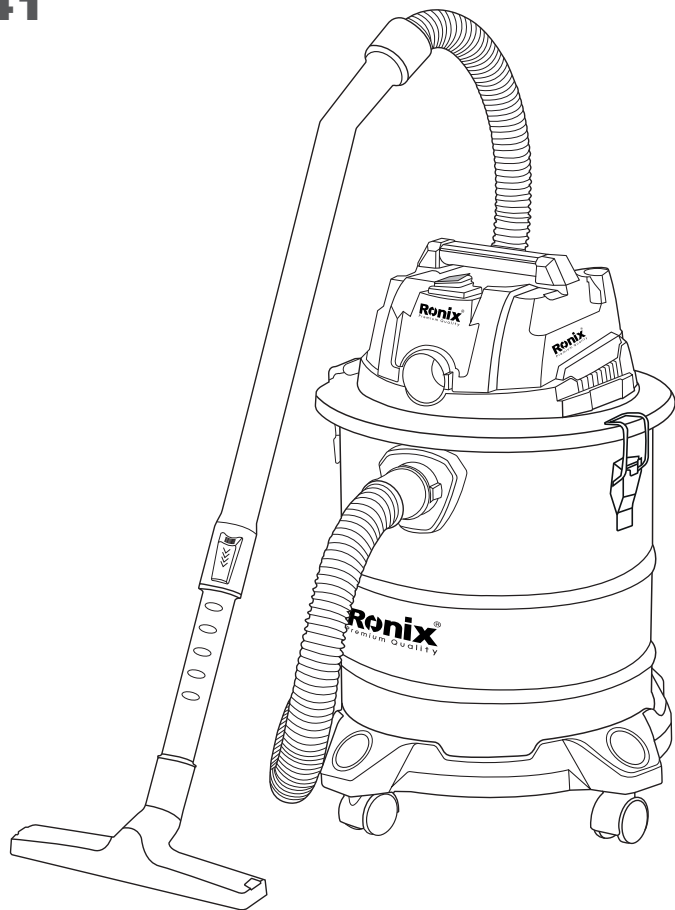


www.ronixtools.com

TECHNICAL SPECIFICATIONS

Model	8641
Voltage	20V DC
Motor Power	150W
Vacuum Pressure	>10KPA
Airflow Rate	20L/S
Weight	4.69Kg
Supplied in	Ronix color box
Includes	Plastic hose, Stainless steel telescopic tube, Washable HEPA filter, Sponge filter, Wet and dry brush, Round brush, crevice nozzle, 4 wheels

 PART LIST

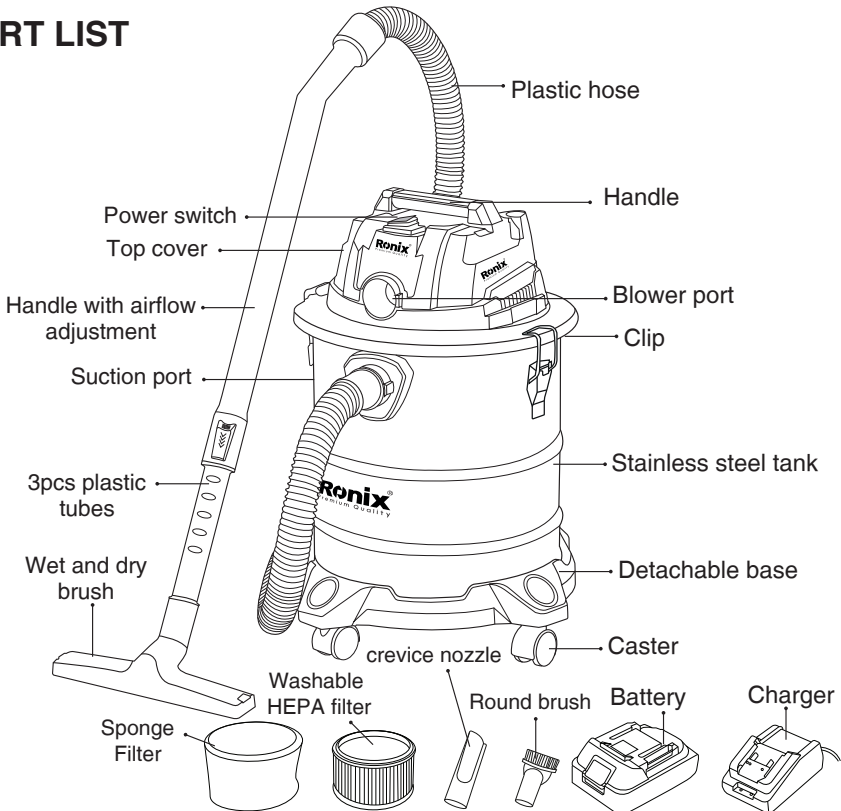

⚠ ATTENTION!

Read these instructions fully before using the appliance.

Retain these instructions and packaging for future reference.

IMPORTANT

Please always switch off the cleaner and remove the battery cartridge before cleaning your appliance, when you are not in use or attempting any maintenance task. Only the specific battery cartridge can be adaptive. This cleaner should only be used for its intended purpose as described in this instruction manual.

SAFETY PRECAUTIONS AND WARNING



 
 
WHEN USING YOUR VACUUM CLEANER, BASIC PRECAUTIONS SHOULD ALWAYS BE OBSERVED, INCLUDING THE FOLLOWING:

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. To prevent electrical shock, do not immerse the appliance, battery cartridge or adaptor into water or other liquids.
4. Always check the battery cartridge before use. It should be in a good condition and must not be damaged. If the battery is damaged or defective, it must be replaced by Ronix service company.
5. Make sure the battery cartridge is well and properly charged, and plugged in before starting the cleaner.


6. Ensure the appliance is switched off before unplugging the battery.
7. Do not handle or operate the appliance with wet hands and follow electrical safety precautions all the time.
8. Extreme caution should be exercised when using the appliance on stairs.
9. Do not operate the vacuum cleaner too close to the heaters, radiators and other hot surfaces.
10. Do not use the appliance to pick up hot water/ liquids, flammable items or combustible liquids (i.e. petrol, hot ashes cigarettes, matches, explosive materials or anything burning) or use in areas where such substances and items may be present.
11. Do not use the appliance to pick up toxic materials (i.e. chlorine bleach, ammonia).
12. Do not operate or use the appliance without dust bag and/or filters in place while dry vacuum cleaning.
13. Before vacuuming, remove any large or sharp objects from the floor or cleaning surface in order to prevent damage to the filter.
14. If the hose inlet, floor tool or the plastic tubs are clogged, switch off the vacuum cleaner right away and remove them. Clear the blocked object before attempting to start the cleaner vacuum again.
15. Do not leave the appliance unattended when it is switched on.
16. Please contact with the local stores or after sale service when the cleaner breaks down.
17. Never clean the vacuum cleaner or any of the electrical parts, especially the electrical connections with water or liquid cleaners.
18. Never attempt to make any modifications electrically to the vacuum cleaner.
19. Always store the appliance indoors in a cool and dry place.
20. Damage caused by improper use or by failure of observing the instructions in this manual will void warranty.

ASSEMBLY


1. Assemble the wheels to vacuum cleaner base tightly (4pcs).

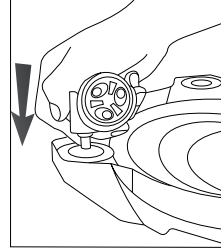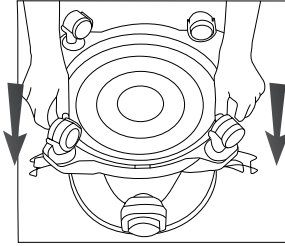

 
2. Fit the base to the bottom of the vacuum cleaner as the picture shows, and press the joints in 4 directions.

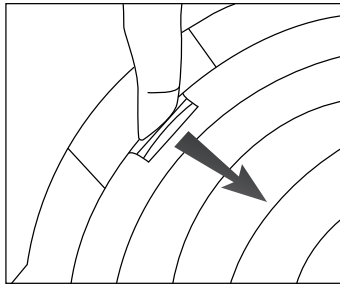

 
3. Connect the plastic hose end with the suction port, and turn it clockwise as the picture shows

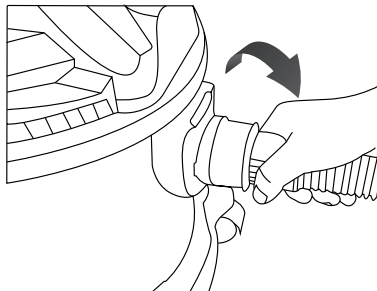

 
4. Insert the handle into the plastic tube; make sure the connection is tight enough.

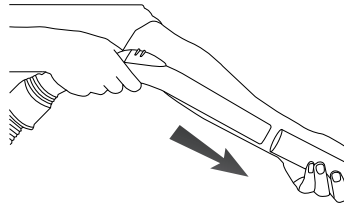

 
5. Connect the 3pcs plastic tubes together.

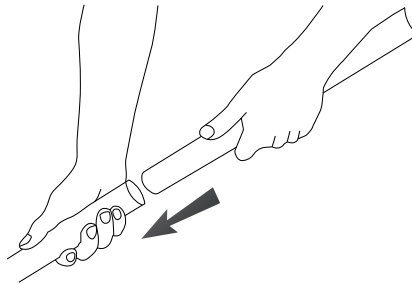

 
6. Connect the wet&dry brush with The plastic tube.

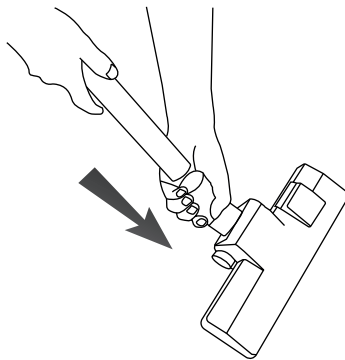

 
7. Fit the HEPA filter as the picture shows turn it clockwise to lock.

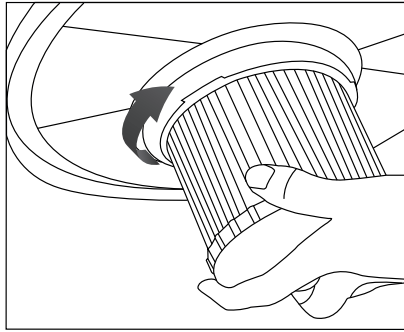

 
8. Fit the paper bag inside the tank; lock it on the suction port.

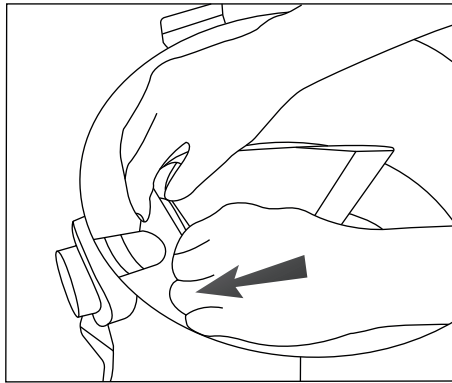

 
9. Fasten the clips

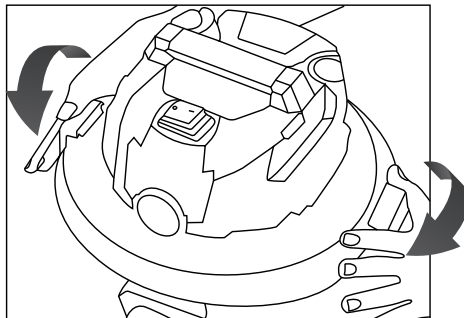

 10. Plug in the battery cartridge.

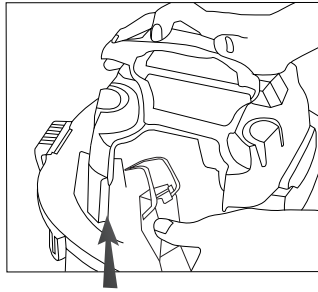


 11. Close the waterproof cover cleaner.

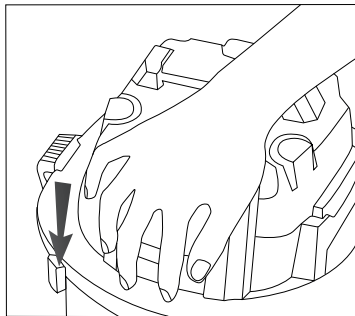


12. Press the switch to start the cleaner.

 'I' stands for 'on'; 'o' stands for 'off'.

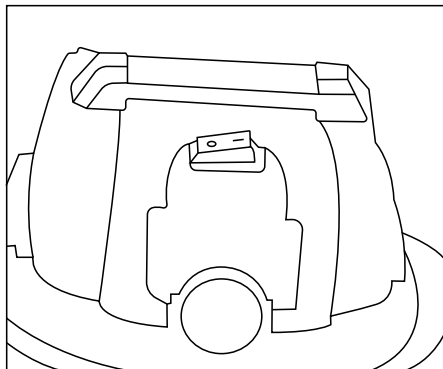


OPERATION

 ■ SPONGE FILTER

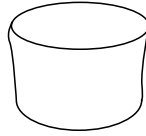

■ HEPA FILTER

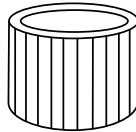 

- Before operating this machine, please make sure that the corresponding filters are fitted properly according to different cases.
- All the filters are consumables. Please contact with your local stores for buying the necessary spares.

■ DRY VACUUM CLEANING

1. Ensure the HEPA filter is always fitted before starting the vacuum cleaner. You can match different filters for better filtration.

Examples:

- a. HEPA filter
- b. Sponge filter

2. Once the tank is full we recommend the tank to be emptied and cleaned or the dust bag, replaced.

3. Remember to clean the filters accordingly for keeping good suction.

■ WET VACUUM CLEANING

1. For cleaning sweage with little and big trash mixed, please fit the sponge filter.

2. For sucking trash with little liquid mixed, please fit the sponge filter + HEPA filter.
3. The paper bag is not advised when cleaning Wet things.
4. Clean the tank after each use. Avoid leaving dust or liquid in the tank. Wipe the machine inside and the surface from time to time, with only lukewarm water.
5. Do not leave any liquid on the battery connector!

MAINTENANCE

ATTENTION:

TAKE OUT THE BATTERY CATRIDGE BEFORE DOING ANY MAINTENANCE WORK.

A. CLEANING OF FILTERS

4.Wash the filters with water at 40 max).

When washing sponge filter / HEPA filter, please be gentle and avoid brushing it, as they can be hurt easily in this way.

5.Remember to dry the filters for at least 24 hours before reusing them. You can buy extra filters for replacing in this case.

PLEASE CONTACT WITH YOUR LOCAL STORES.

B. CLEANING OF ACCESSORIES

1. Wash the plastic hose, the plastic tubes and the wet&dry floor brush regularly, in case of any trash clogging them.

2. Shake off the water left inside after cleaning, and make sure they are dried for at least 24 hours.

C. CLEANING OF TANK

1. Wipe the tank inside with duster cloth; cleaning out the liquid inside.

TROUBLESHOOTING

TROUBLE	POSSIBLE CAUSE	REMEDY
Suction weakens	Clogged filter	Clean dirt from filter. If condition continues, change the filter
	Air leak	Check the connection of all the accessories (floor tool, hoses, etc.). Check that clips are fastened properly
	Obstruction in hose or floor tool	Check floor tool, hose, etc. for obstructions, and remove if present
	Saturated filter	Replace saturated filters
Dust leakage	Filters are not fit well	Check if the filters are fit in the right position
Machine doesn't work	Battery is not well charged	Check if there's any power; left in the battery Or charge the battery
	Motor breaks down	Send the cleaner to your local stores for repairment

Ronix[®]
Premium Quality