INSTALLATION GUIDE Switch System

6 Person Workstation

Size: 1600x800 mm


www.jasonl.com.au

Need help!

Call us on 1300 527 665





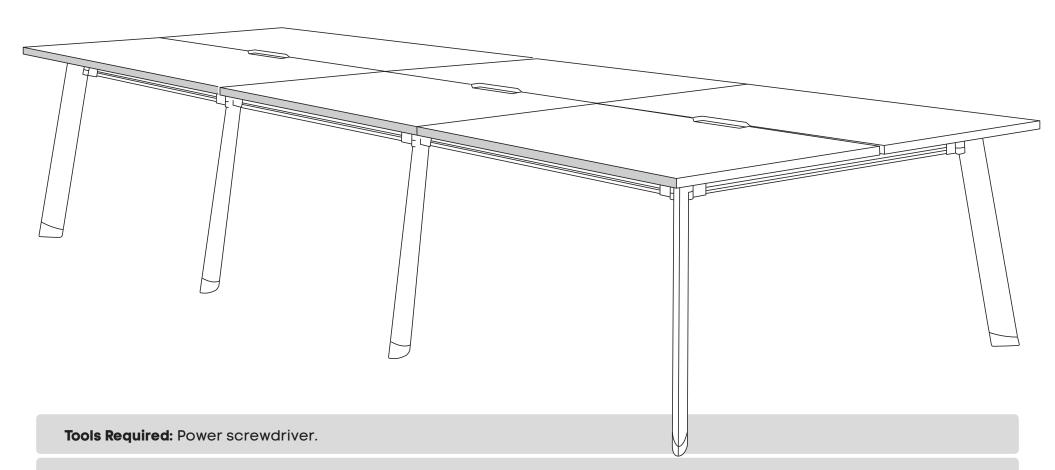

Note: Please ignore any pre-drilled holes or nut inserts that maybe present in your top(s). They will not match your particular table/desk base and woods screws will be required to be screwed directly into the underside of the top.

Note: It is important to fully tighten all bolts and screws before attaching the top(s) so that the frame is sufficiently rigid. Failure to do this may affect stability once the tops are attached.

INSTALLATION GUIDE

Switch System 6 Person Workstation

Size: 1600x800 mm

L-Bracket x20


www.jasonl.com.au

Need help!

Call us on **1300 527 665**





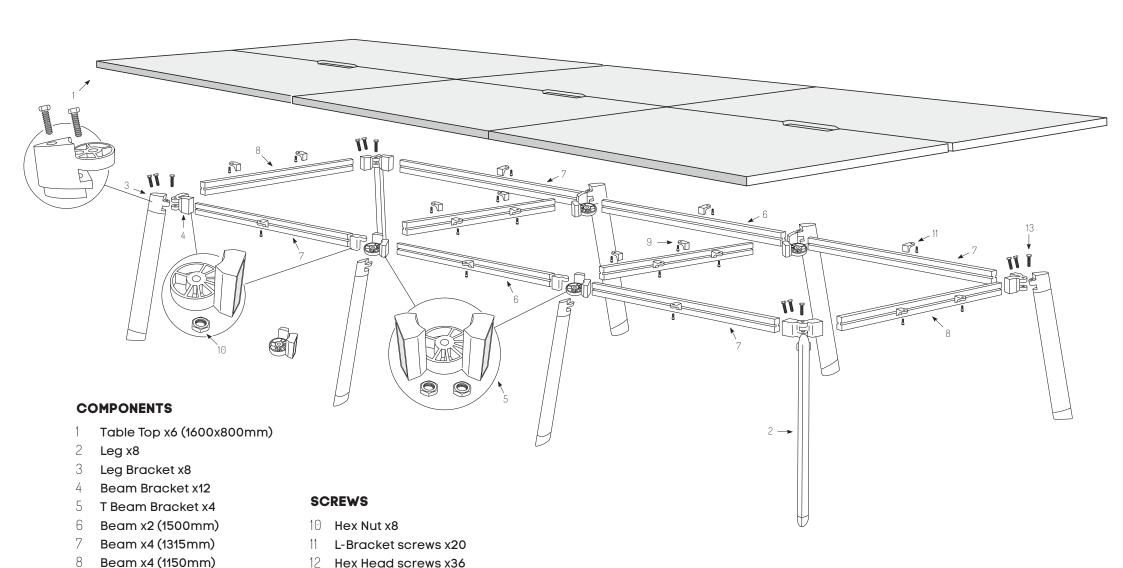

M8x25mm Dome Head x8

INSTALLATION GUIDE

Switch System 6 Person Workstation

www.jasonl.com.au


Need help!

Call us on **1300 527 665**







Size: 1600x800 mm

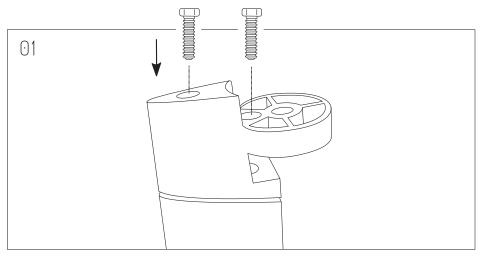


Join Leg Brackets to each Leg using screws to secure them, as follow.

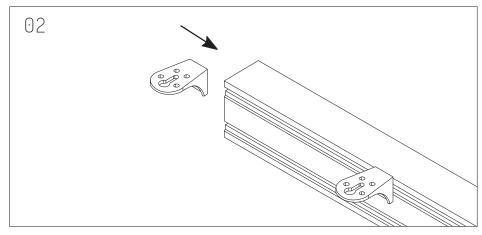

Join 1 L-Bracket through each 1500mm and 1315mm Beam and 2 L-Bracket through each 1150mm Beam.

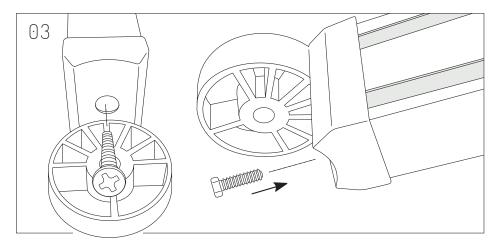

Securely connect each Beam to each Beam Bracket. Screw to secure.

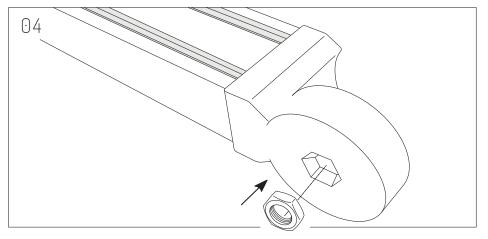

Insert Hex Nut on each Beam Bracket.

INSTALLATION GUIDE

Switch System 6 Person Workstation

Size: 1600x800 mm


www.jasonl.com.au

Need help!


Call us on 1300 527 665






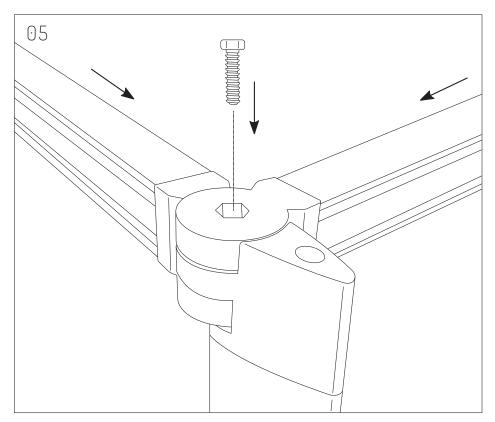

Position as presented, and proceed to screw to ensure each corner of the frame.

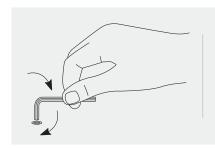

If this bolt does not drop into the joint use the Allen key to screw it all the way in so that it creates its own thread. This will ensure a nice, tight joint.

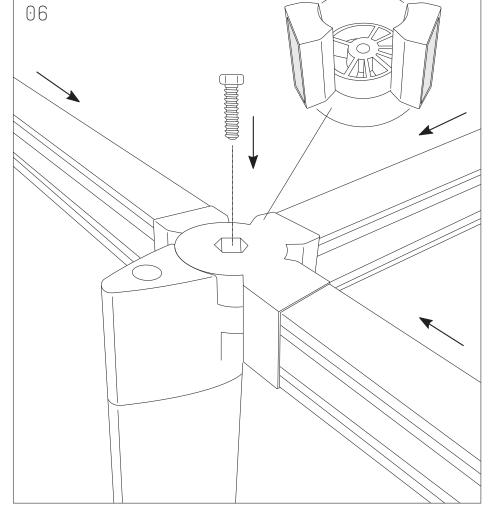

For the 4 central legs, attach as presented, using T Beam Bracket.

Switch System 6 Person Workstation

www.jasonl.com.au

Need help!

Call us on **1300 527 665**





Size: 1600x800 mm

