ASSEMBLY INSTRUCTIONS

Flexi premium 6P Workstation H-Bench

1200x700 | 1400x700 | 1600x700 | 1800x700

www.jasonl.com.au

Need help!

Call us on 1300 527 665






The following steps explain how to assemble the basic two person workstation. Larger workstations will require repeating the process as needed.

Column Stage

Height Range

Width Range

Max. Weight Capacity

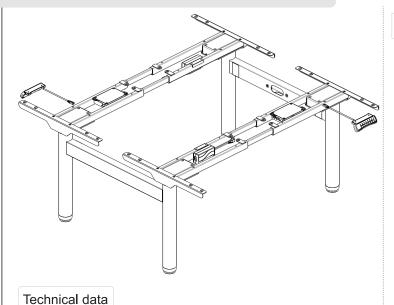

3

100KG

600-1250mm

1100-1700mm


Accessory list


Attention: The drawings below are only for guidance and they may differ slightly from the product and fittings received. Please contact our customer service department if you have any queries.


Note: there are 2 screw packages in total.


No.	Image	Spec	Qty
Α	0	M6	4
В		M6	8
С		St4.2	14
D	A	St4.2	6
Е		Cable Tie	6
F		Allen Key 4x4mm	1


Con	nponent list				
No.	Part	Qty	No.	Part	Qty
1	Left Lifting Column	2	2	Right Lifting Column	2
No.	Part	Qty	No.	Part	Qty
3	Connecting Rod	4	4	Left Beam	4
No.	Part	Qty	No.	Part	Qty
5	Right Beam	4	6	Supporting Plate	4
No.	Part	Qty	No.	Part	Qty
7	Adapter Bracket	2	8	Adapter	2
No.	Part	Qty	No.	Part	Qty
9	Control Box	2	10	Handset (Option)	2
No.	Part	Qty	No.	Part	Qty
11	Switching Cord	2	12	Power Cord	2
No.	Part	Qty			
13	Handset Screw	4			

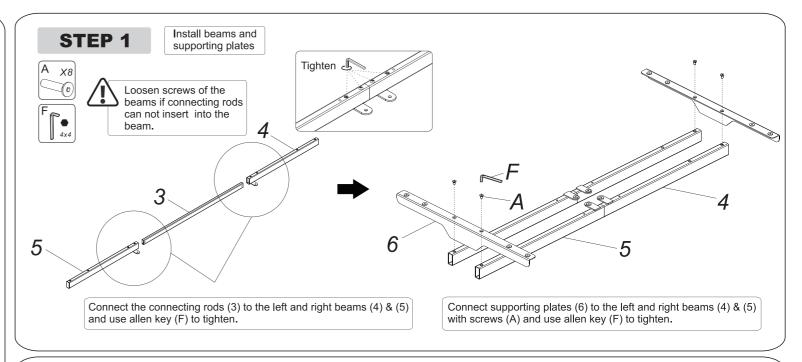


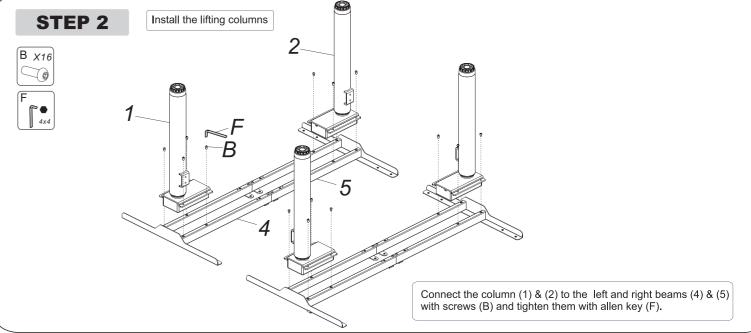

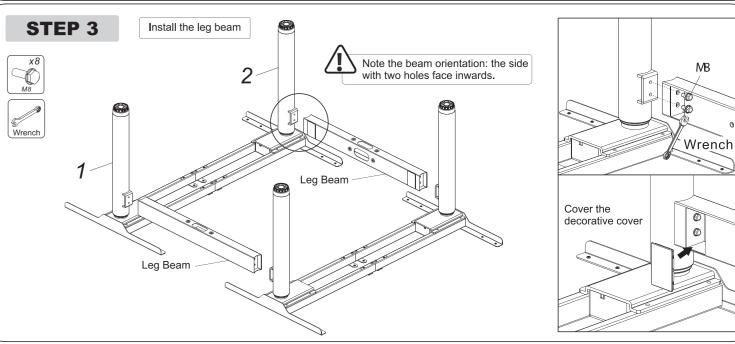

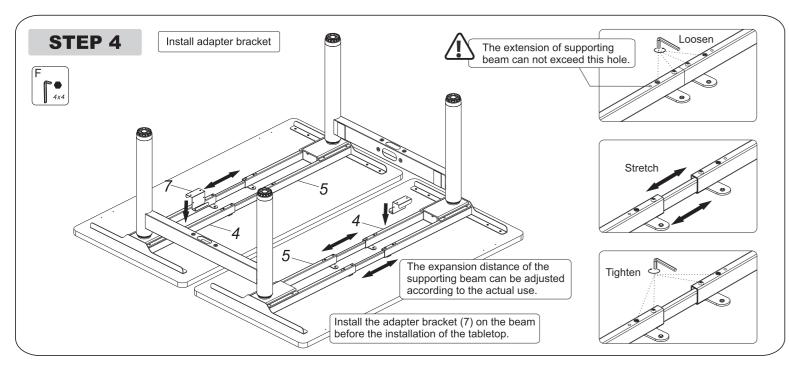

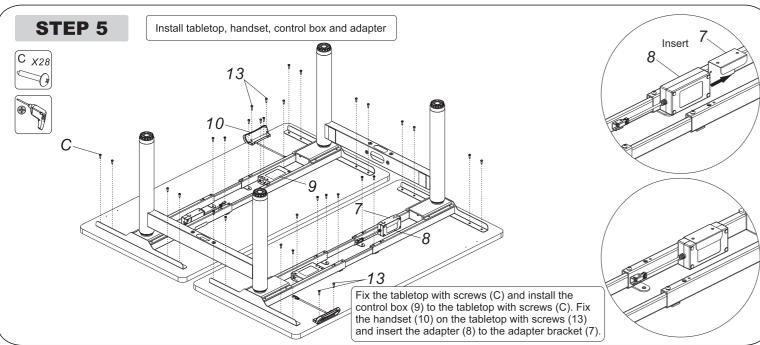

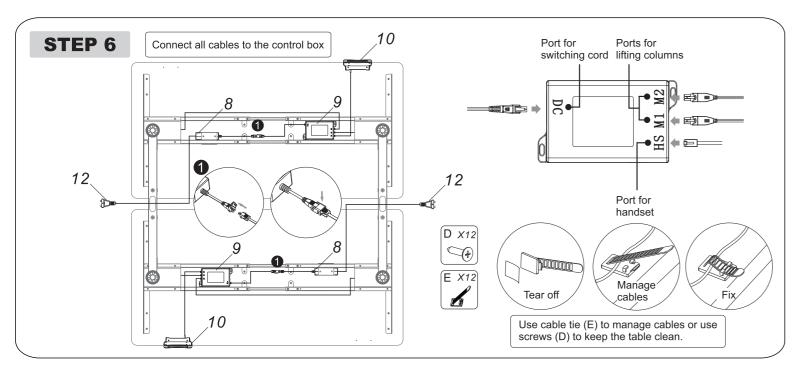

Common fault treatment

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

Fault phenomenon	Method
The desktop could not function	Check if all the cables well connected;
Rising in a low speed	Check if overloaded, max loading: 100kg;
The desk moving downwards without any operation	
Automatically Self-Reset	
Go down but not go up or go up but not go down	Reset;
The upper and downward height is not enough	
The desk could not lifted	
Overwork (Duty cycle: Max 2min on/18min OFF)	Restart after suspend for 18mins while connecting with power.



- 1. Power supply: AC100V-240V, 50/60Hz
- 2. Service Environment: 0-40°C
- 3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.
- 4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.
- 5. Check carefully to ensure correct and complete assembly before using.
- 6. Be familiar with all functions and program settings of the product before first use.
- 7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on manufacturers
- 8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.
- 9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
- 10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance
- 11. Cleaning and user maintenance shall not be made by children without supervision.12. If the supply cord is damaged, it must be replaced by the manufacturer, its service
- agent or a similarly qualified person in order to avoid a hazard.

 13. Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order
- do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.

 14. Keep the original package of the equipment if necessary in case of the future use in transportation.

Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.