#### ASSEMBLY INSTRUCTIONS


# Just Right Single Person 120 Degree Workstation

www.jasonl.com.au



1300 527 665



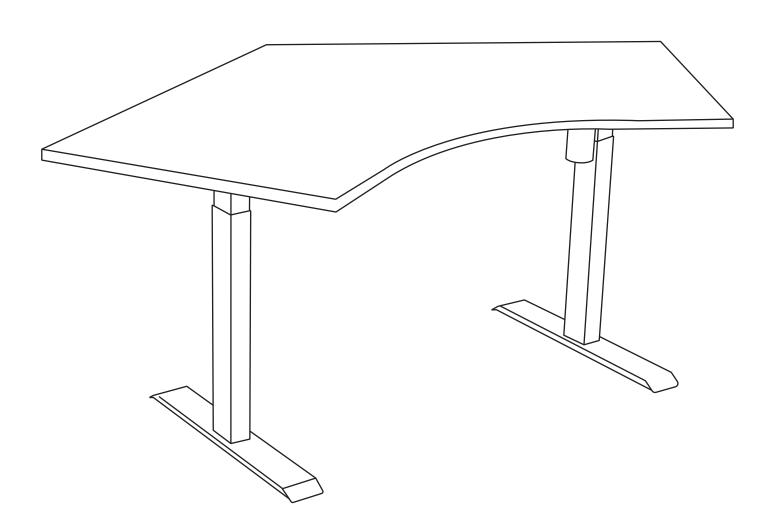

Tools Required: Power screwdriver; Allen key set (provided)

2 persons required for installation

### ASSEMBLY INSTRUCTIONS

# Just Right Single Person 120 Degree Workstation

 
#### www.jasonl.com.au


Need help! Call us on 1300 527 665





## Accessory list


Attention: The drawings below are only for reference which might be slightly different from the actual object, please in kind prevail. Any tools missing or installation problems, please contact the customer service firstly.



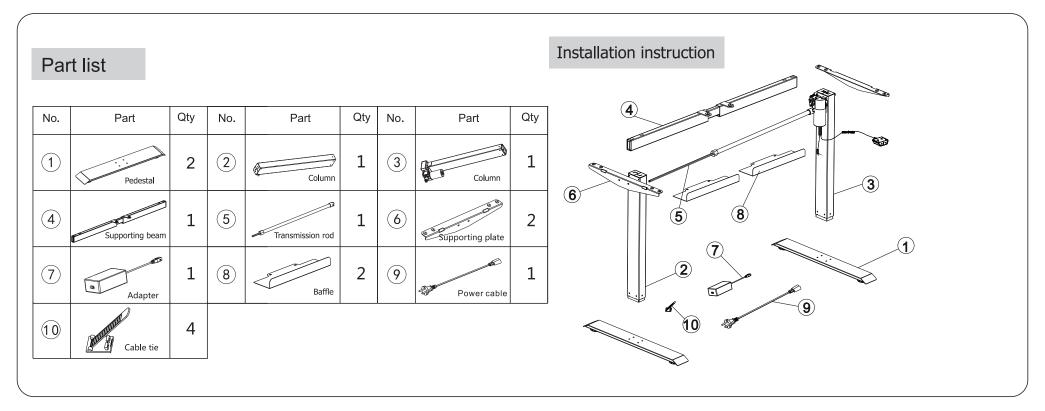

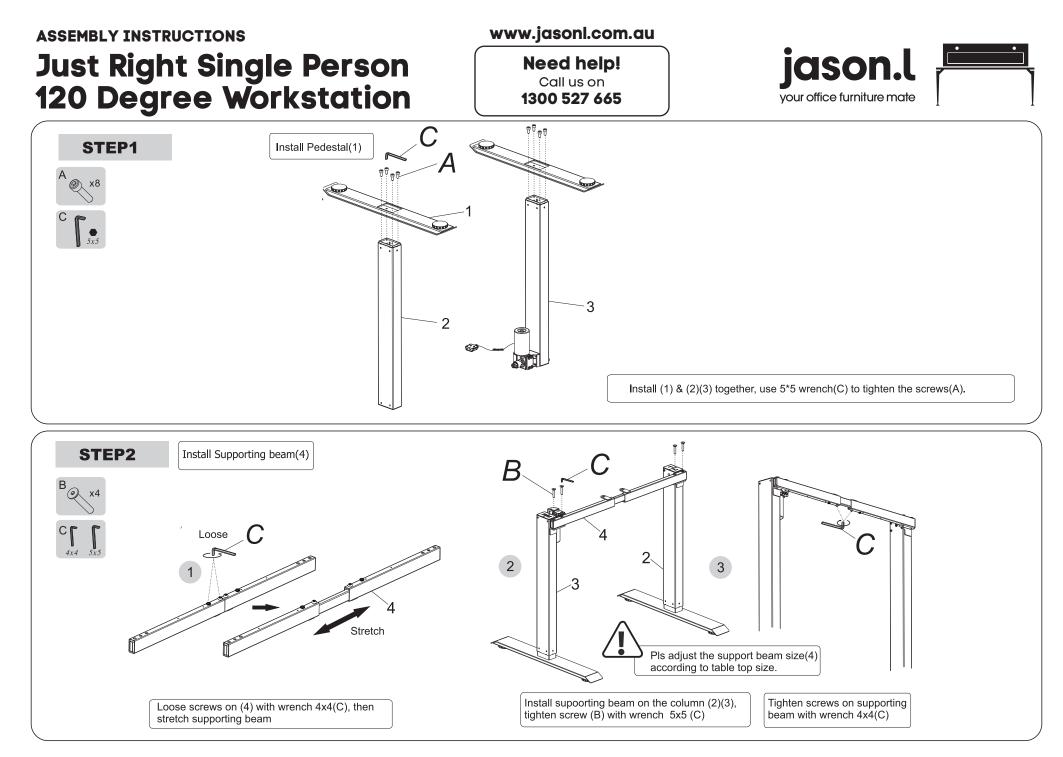

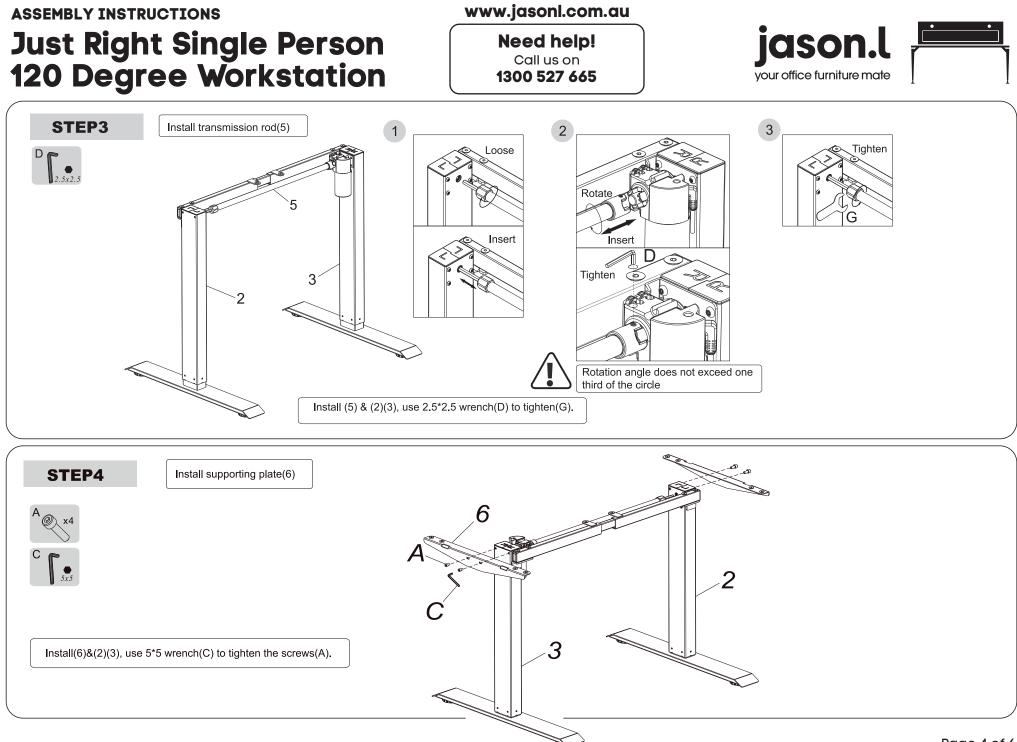

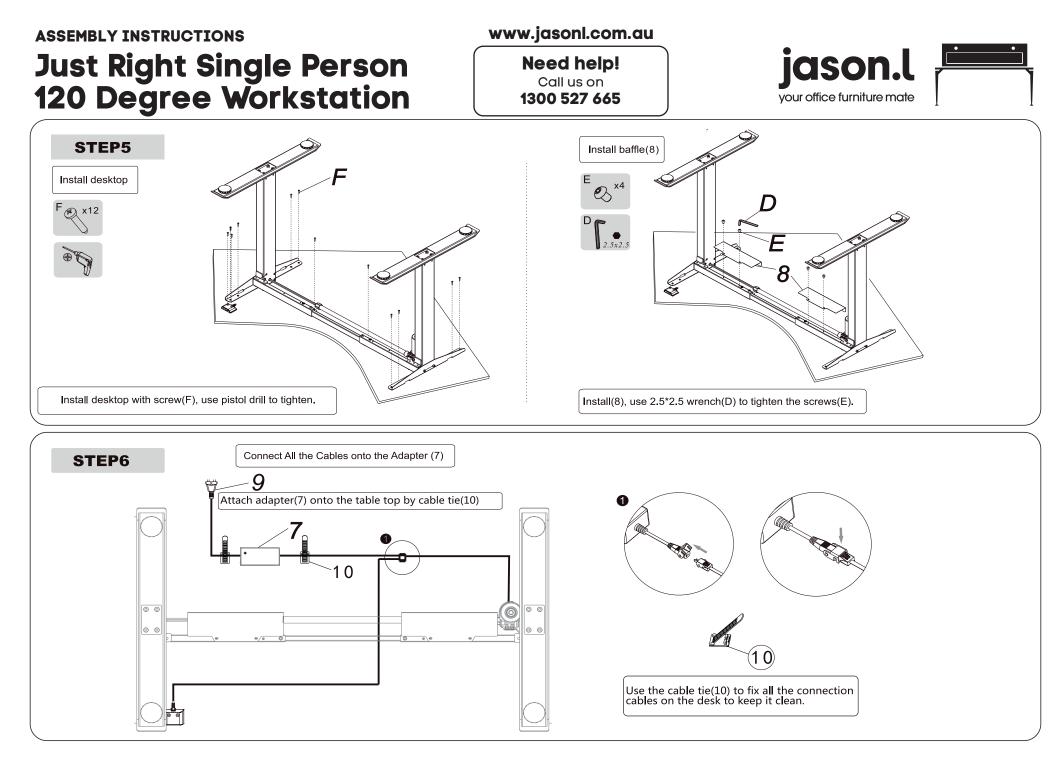

### **ASSEMBLY INSTRUCTIONS**

# Just Right Single Person 120 Degree Workstation

### www.jasonl.com.au

**Need help!** Call us on

1300 527 665



- <u> </u>	lesk upwards lesk downwards	
Instruction		
Press the UP button or DOWN button of desk surface.	on to lift or lower the height	UP button
		Attention
fault you met is not listed below,	ed and eliminate the common fault and error. please contact with your supplier. Only the apable for investigating and correcting	<ol> <li>Power supply: AC100V-240V,50/60HZ</li> <li>Service Environment: 0-40<sup>°</sup>C</li> <li>Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.</li> <li>The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.</li> <li>Check carefully to ensure correct and complete assembly before using.</li> <li>Be familiar with all functions and program settings of the product before first use.</li> <li>Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on</li> <li>Slight noise caused by the V-ribbed bell or brake system due to structure will not have any effect on the use of the equioment.</li> </ol>
ollowing tips will help you detecte fault you met is not listed below, ıfacturer and professionals are ca	ed and eliminate the common fault and error. please contact with your supplier. Only the	<ol> <li>Service Environment: 0-40 ℃</li> <li>Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishdoth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.</li> <li>The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.</li> <li>Check carefully to ensure correct and complete assembly before using.</li> <li>Be familiar with all functions and program settings of the product before first use.</li> <li>Children are forbidden to play on the product become action when playing, so any dangerous consequences caused by this improper action will not be on</li> <li>Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.</li> <li>Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the</li> </ol>
ollowing tips will help you detecte fault you met is not listed below, ifacturer and professionals are ca fault and error. Fault phenomenon	and eliminate the common fault and error. please contact with your supplier. Only the apable for investigating and correcting	<ol> <li>Service Environment: 0-40 ℃</li> <li>Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.</li> <li>The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.</li> <li>Check carefully to ensure correct and complete assembly before using.</li> <li>Be familiar with all functions and program settings of the product before first use.</li> <li>Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on 8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.</li> </ol>
ollowing tips will help you detecte fault you met is not listed below, facturer and professionals are ca fault and error. Fault phenomenon presponse while long pressing wn arrow after connected with	ad and eliminate the common fault and error. please contact with your supplier. Only the apable for investigating and correcting Method 1.Check if all the cables be	<ol> <li>Service Environment: 0-40 ℃</li> <li>Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishdoth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.</li> <li>The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.</li> <li>Check carefully to ensure correct and complete assembly before using.</li> <li>Be familiar with all functions and program settings of the product before first use.</li> <li>Children are forbidden to play on the product become action when playing, so any dangerous consequences caused by this improper action will not be on</li> <li>Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.</li> <li>Crorsive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.</li> <li>Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.</li> </ol>
ollowing tips will help you detecte fault you met is not listed below, ifacturer and professionals are ca fault and error. Fault phenomenon presponse while long pressing own arrow after connected with power supply	ad and eliminate the common fault and error. please contact with your supplier. Only the apable for investigating and correcting Method           Method           1.Check if all the cables be connected well	<ol> <li>Service Environment: 0-40 ℃</li> <li>Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.</li> <li>The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.</li> <li>Check carefully to ensure correct and complete assembly before using.</li> <li>Be familiar with all functions and program settings of the product before first use.</li> <li>Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on</li> <li>Slight noise caused by the V-ribbed bell or brake system due to structure will not have any effect on the use of the equipment.</li> <li>Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.</li> <li>Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.</li> <li>Keep the original package of the equipment if necessary in case of the future use in transportation.</li> </ol>
ollowing tips will help you detecte fault you met is not listed below, ifacturer and professionals are ca e fault and error.	ad and eliminate the common fault and error. please contact with your supplier. Only the apable for investigating and correcting           Method           1.Check if all the cables be connected well           2.Contact your supplier or dealer	<ol> <li>Service Environment: 0-40℃</li> <li>Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishdoth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.</li> <li>The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.</li> <li>Check carefully to ensure correct and complete assembly before using.</li> <li>Be familiar with all functions and program settings of the product before first use.</li> <li>Children are forbidden to play on the product before first use.</li> <li>Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.</li> <li>Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.</li> <li>Please make sure there is no hazard sources in your operating environment. e.g., do not litter te tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.</li> <li>Keep the original package of the equipment if necessary in case of the future use in transportation.</li> <li>The following tips will help you detected and eliminate the common fault and error. If the</li> </ol>
Fault phenomenon Fault phenomenon Fault phenomenon Fault phenomenon response while long pressing power supply	Ad and eliminate the common fault and error. please contact with your supplier. Only the apable for investigating and correcting Method 1.Check if all the cables be connected well 2.Contact your supplier or dealer 1.Check if overloaded, max loading: 70kg;	<ol> <li>Service Environment: 0-40 ℃</li> <li>Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.</li> <li>The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.</li> <li>Check carefully to ensure correct and complete assembly before using.</li> <li>Be familiar with all functions and program settings of the product before first use.</li> <li>Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on</li> <li>Slight noise caused by the V-ribbed bell or brake system due to structure will not have any effect on the use of the equipment.</li> <li>Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.</li> <li>Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.</li> <li>Keep the original package of the equipment if necessary in case of the future use in transportation.</li> </ol>



household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.