

ASSEMBLY INSTRUCTIONS


Just Right height  
adjustable corner desk

[www.jasonl.com.au](http://www.jasonl.com.au)

**Need help!**

Call us on  
**1300 527 665**


**jason.l**  
your office furniture mate

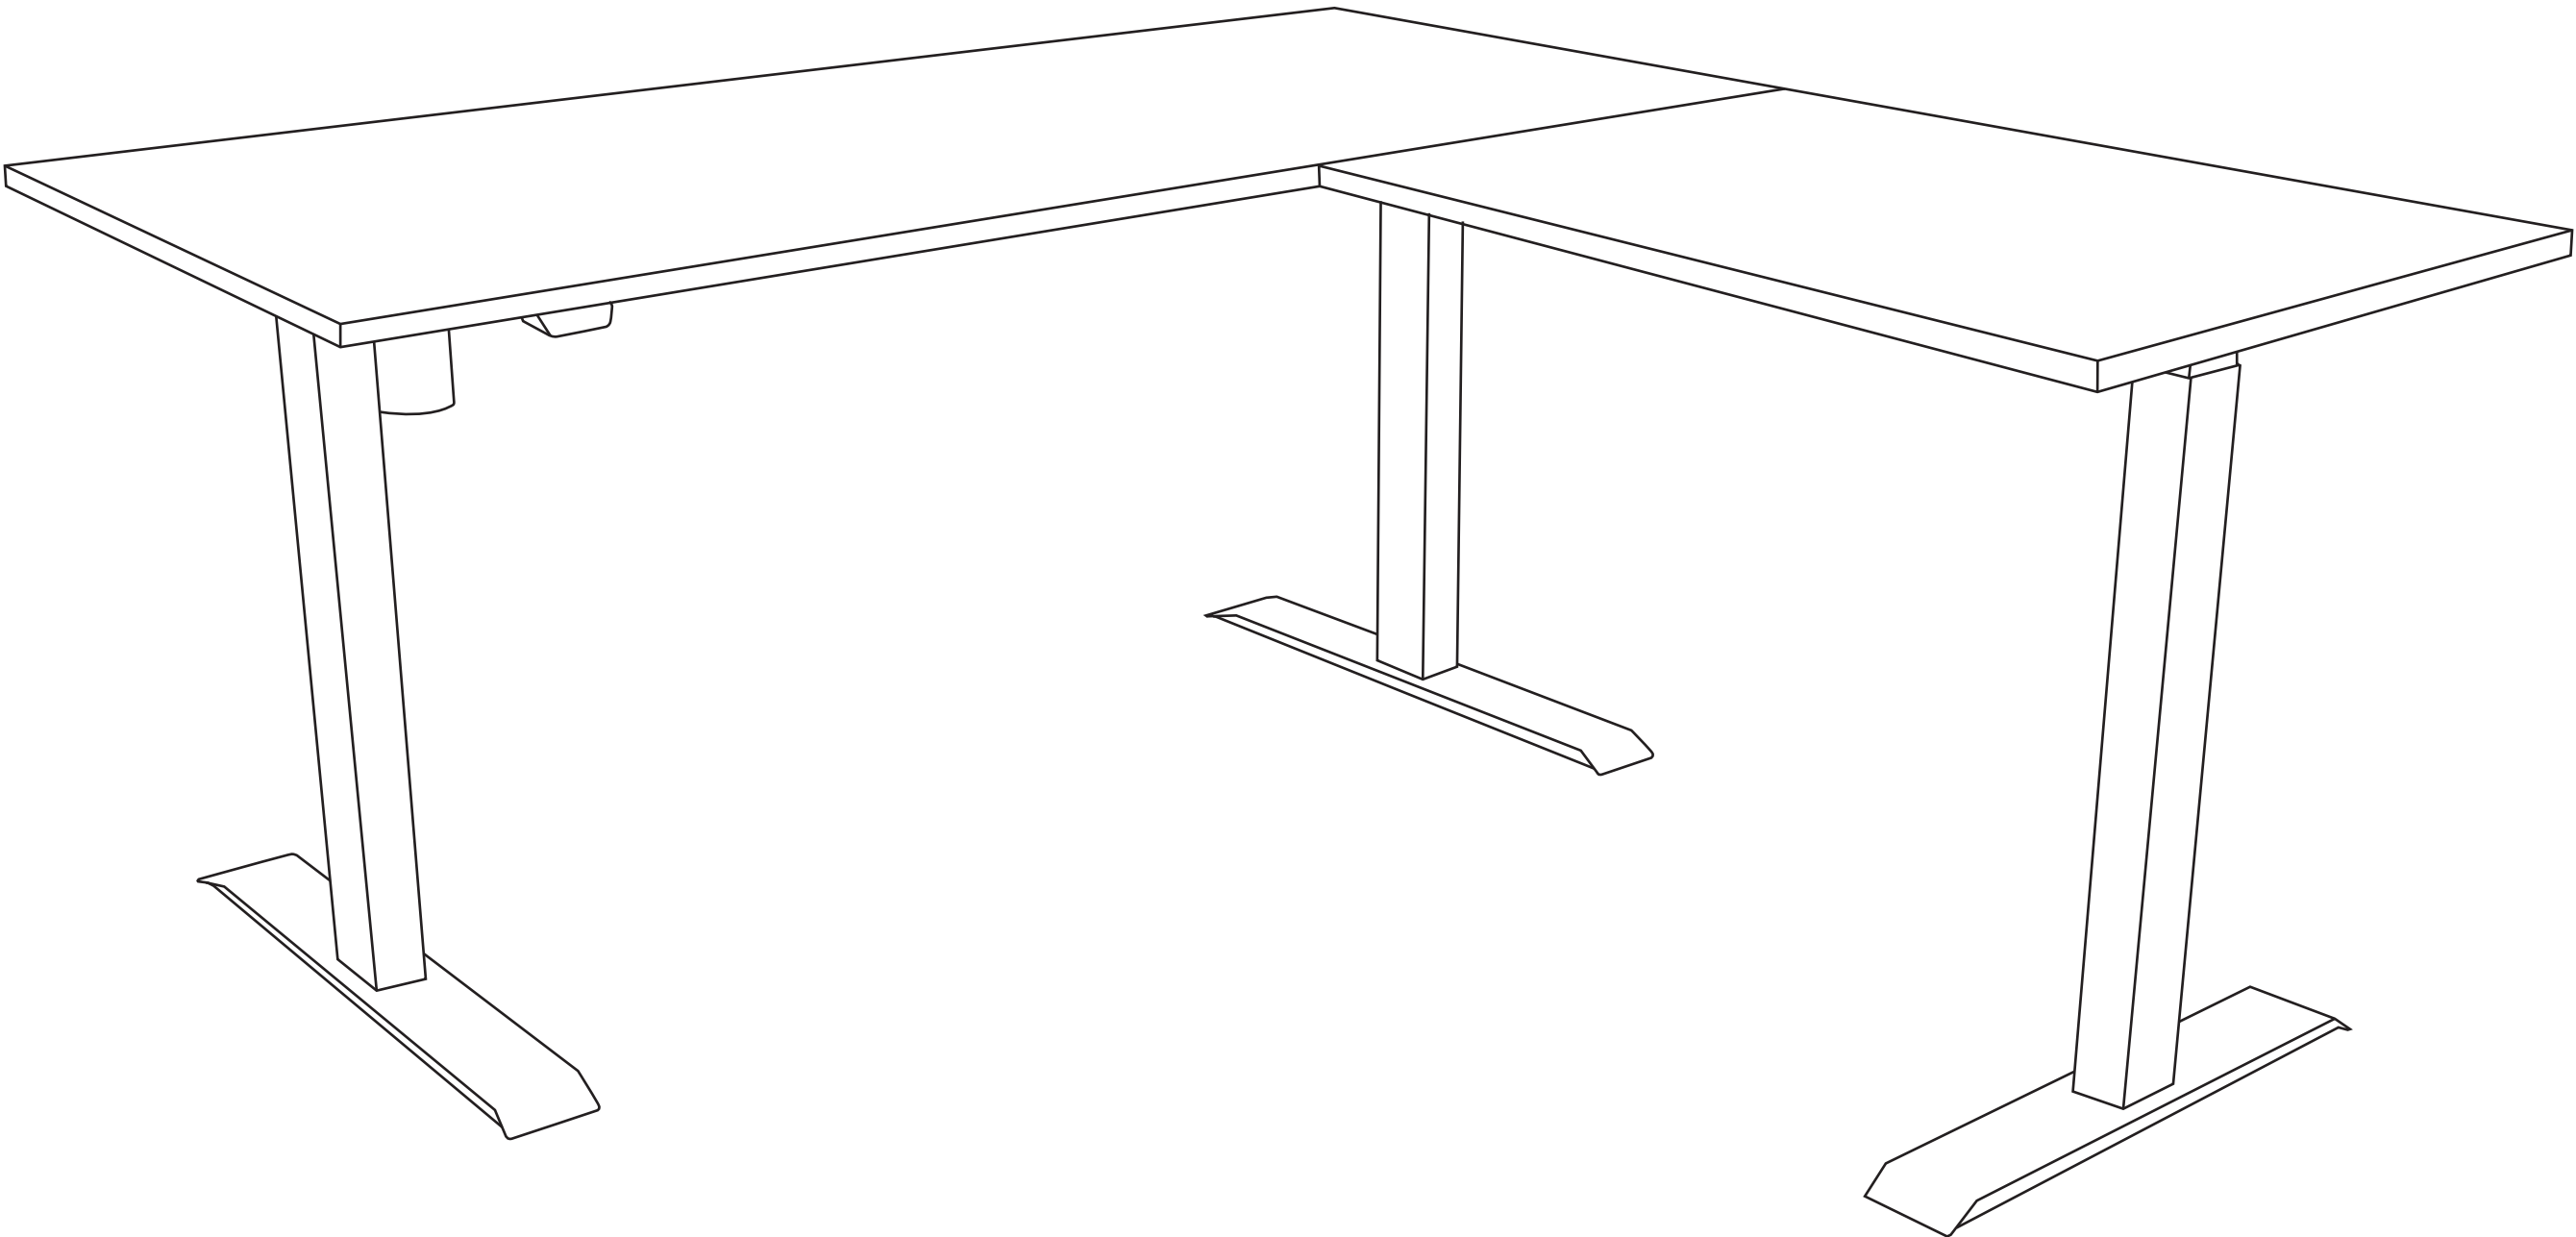

**Tools Required:** Power screwdriver



2 persons required for installation

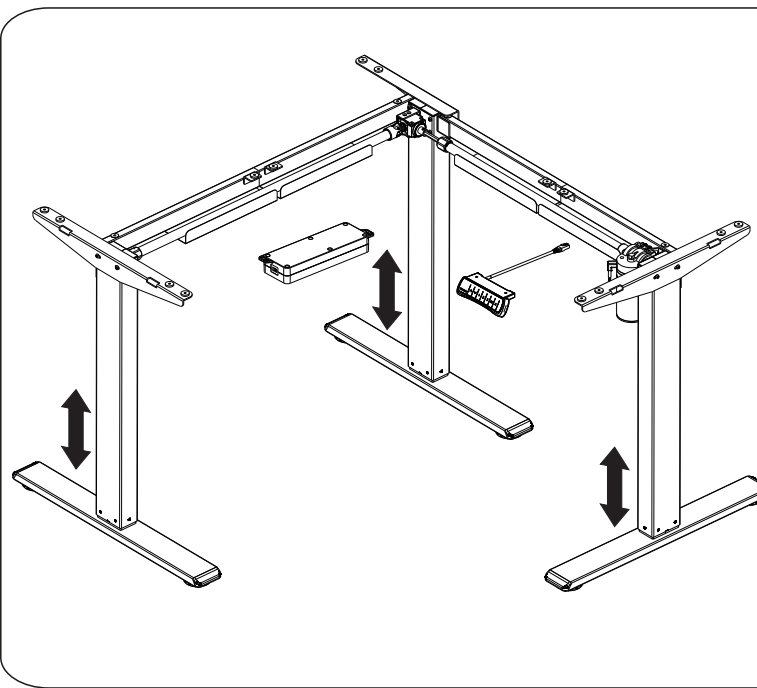

Technical data

Column Number	2
Maximum Load	100KG
Max Speed	25mm/s
Input Voltage	100-240V
Lowest Position	710mm
Highest Position	1210mm
Width Range	1020- 1600mm 1075- 1575mm
Duty Cycle	10%(Pause 18 minutes for each continuous 2-minute operation )
Applicable Temperature	0~40°C

Accessory List

Attention: The drawings below are only for reference which might be slightly different from the physical objects, please refer to the actual product. If there are any tools missing or installation problems, please contact customer service.

A

4x4

5x5

x1

2.5x2.5

B

x8

M4

C

x6

M6

D

x18

ST4.2

E

x12

M6

F

x7

M8

G

x1

Wrench

Part List

1

Right Column X1

2

Middle Column X1

3

Left Column X1

4

Long Supporting Beam X1

5

Short Supporting Beam X1

6

Long Transmission Rod X1

7

Short Transmission RodX1

8

Table Leg X3

9

Long Supporting Plate X2

10

Short Supporting Plate X1

11

Baffle X4

12

Control Box X1

13

Handset X1


14

Power Cable X1

15

Cable Tie X4

Installation Instruction

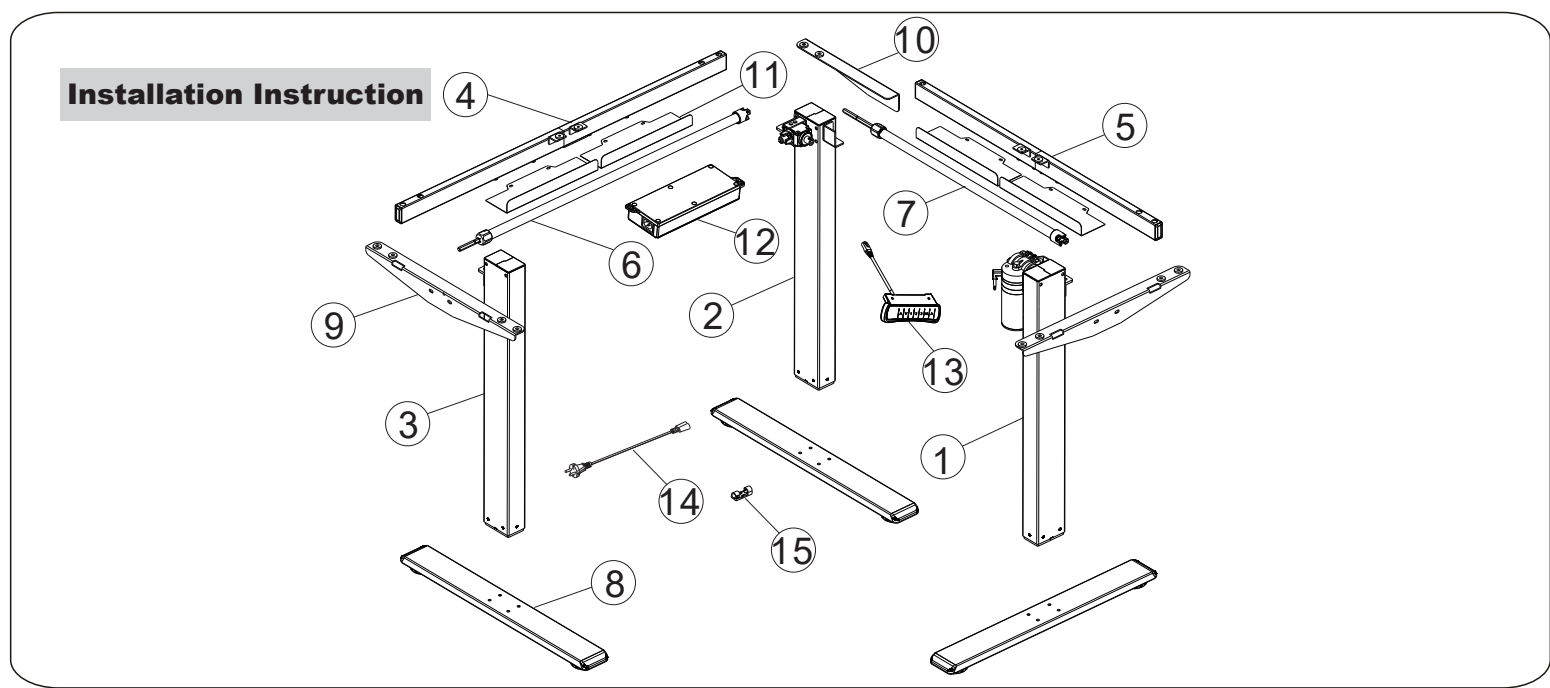


STEP1

Assemble Table Legs

E x12

A 5x5

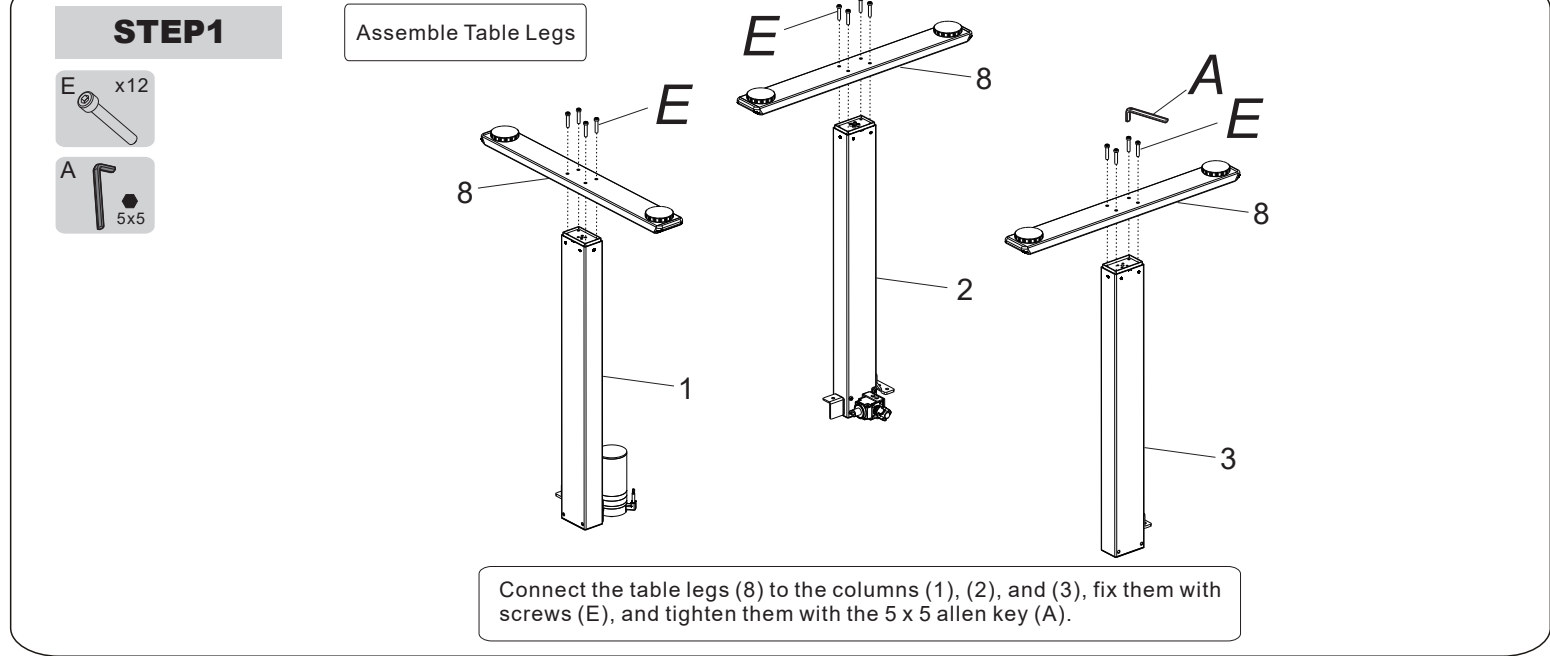


Connect the table legs (8) to the columns (1), (2), and (3), fix them with screws (E), and tighten them with the 5 x 5 allen key (A).

STEP2

Install Supporting Beam

F x7

A 4x4 5x5




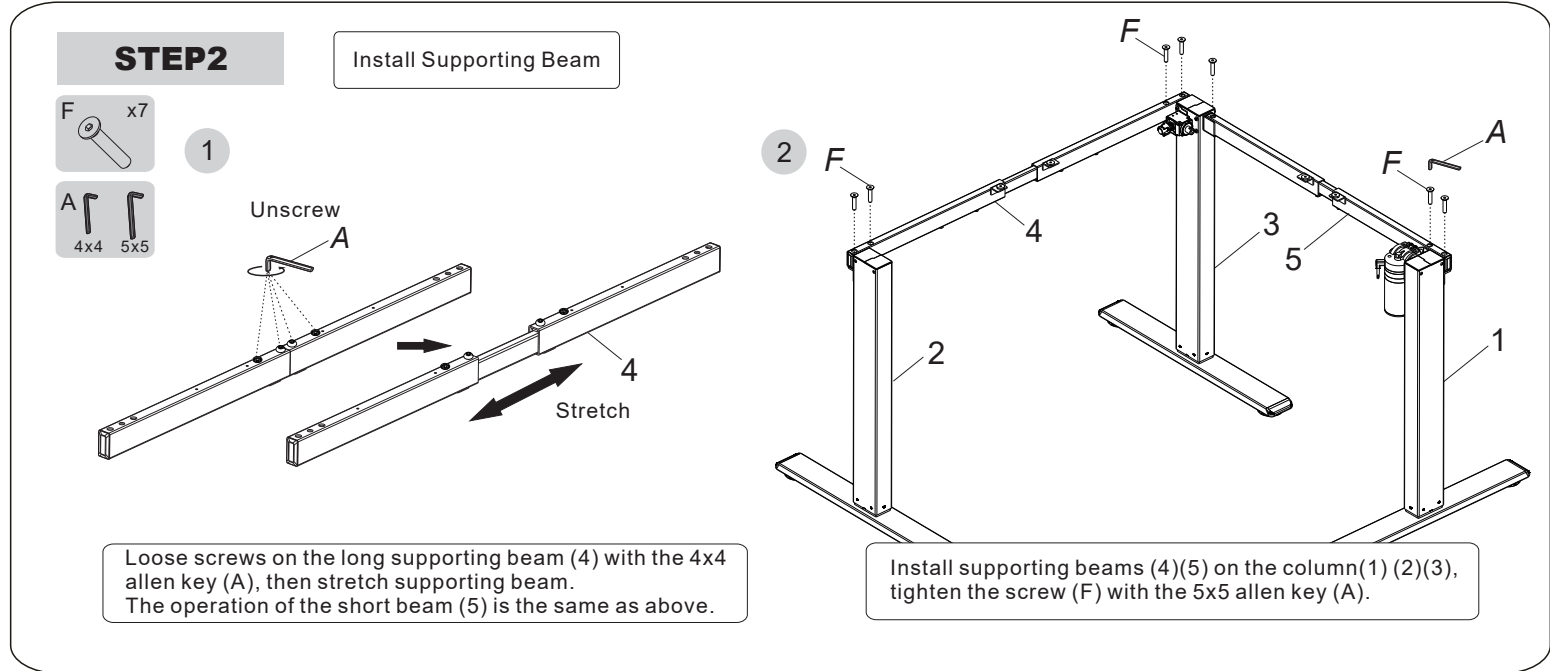


Loose screws on the long supporting beam (4) with the 4x4 allen key (A), then stretch supporting beam. The operation of the short beam (5) is the same as above.

Install supporting beams (4)(5) on the column(1) (2)(3), tighten the screw (F) with the 5x5 allen key (A).

### STEP3

  Install Transmission Rod

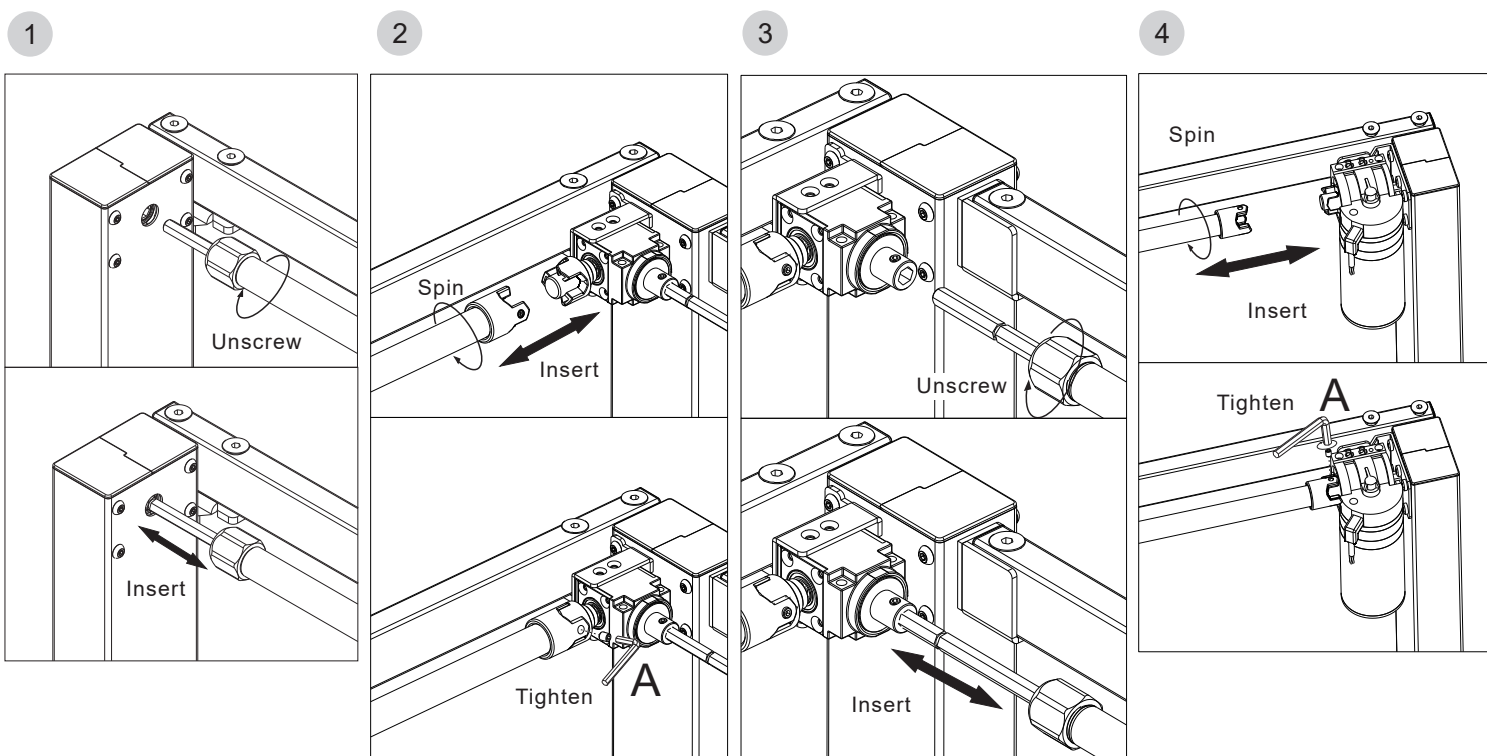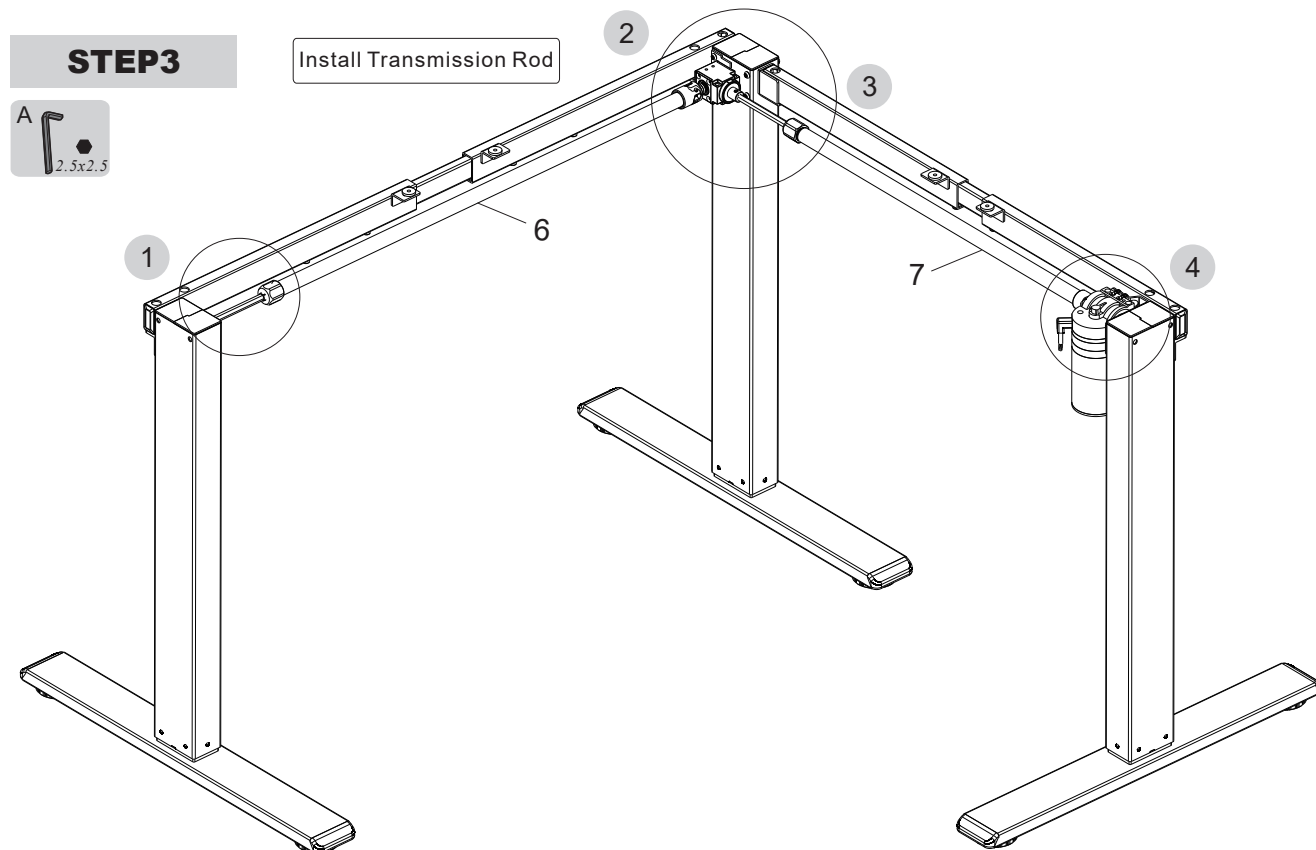


The rotation angle should not exceed one third of a turn.

Insert the long and short transmission rods (6) (7) into the left, middle and right columns (1) (2) (3) respectively, and use the 2.5 x 2.5 allen key (A) to screw the long and short transmission rods (6) (7).

### STEP4

Install Supporting Plates

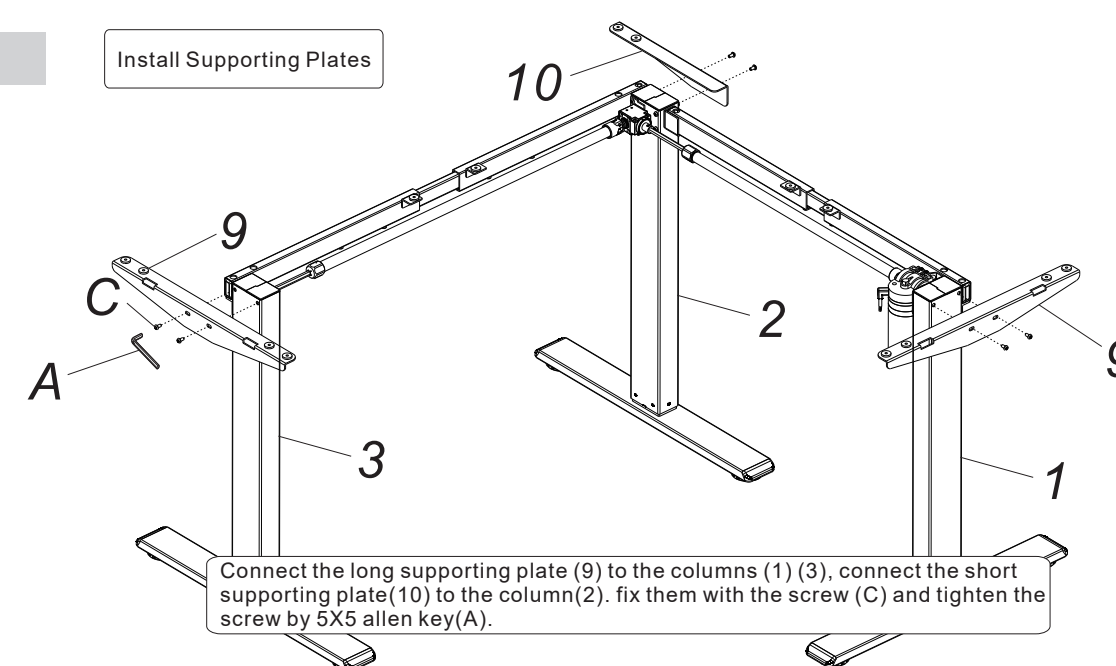


Connect the long supporting plate (9) to the columns (1) (3), connect the short supporting plate (10) to the column (2). fix them with the screw (C) and tighten the screw by 5X5 allen key (A).

### STEP5-A

Install Tabletop, Control Box and Handset



Not provided

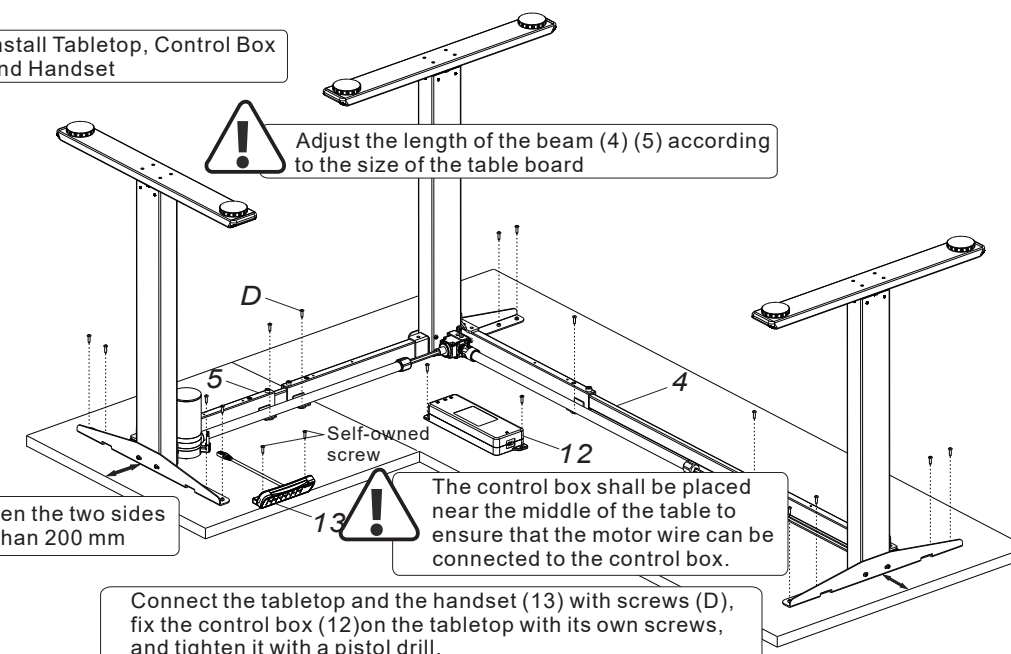

Adjust the length of the beam (4) (5) according to the size of the table board


The distance between the two sides shall not be longer than 200 mm

The control box shall be placed near the middle of the table to ensure that the motor wire can be connected to the control box.

Connect the tabletop and the handset (13) with screws (D), fix the control box (12) on the tabletop with its own screws, and tighten it with a pistol drill.



### STEP5-B

Attach connector plates (a) to return top (b) by tightening wooden screws (c)

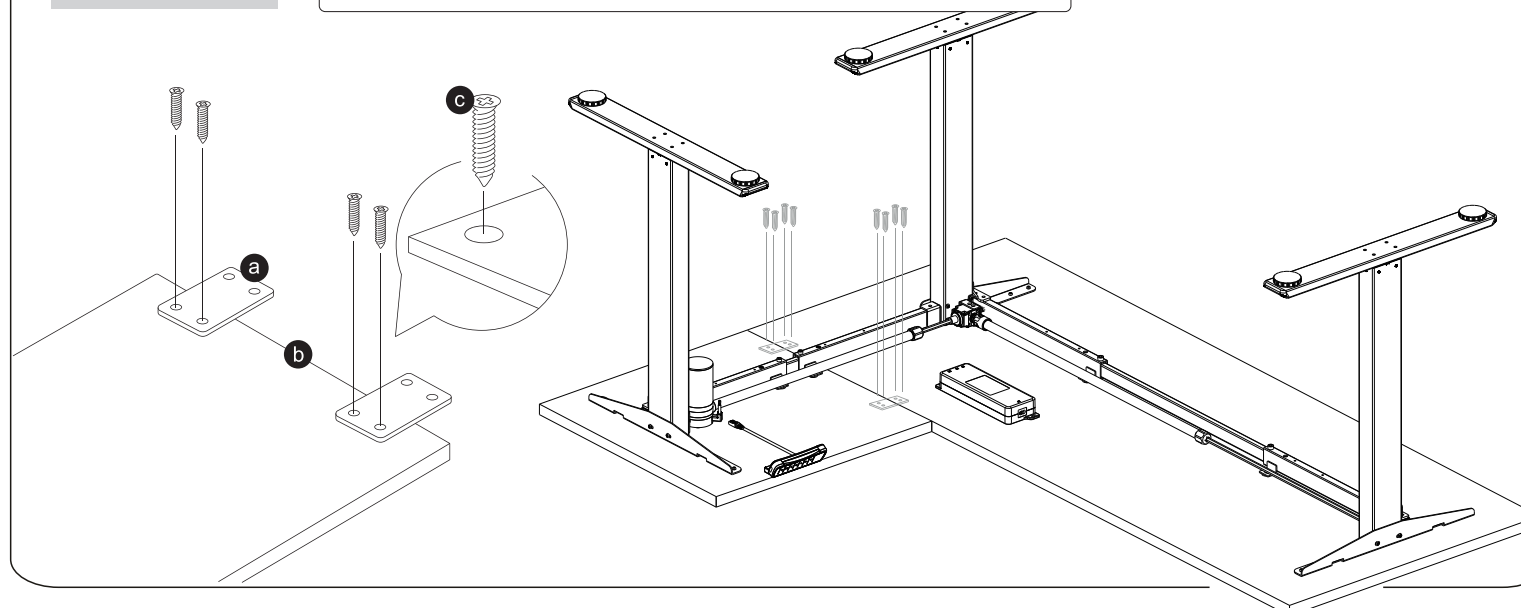

## STEP6



 
Tighten the Beam Screw and the Drive Rod Nut

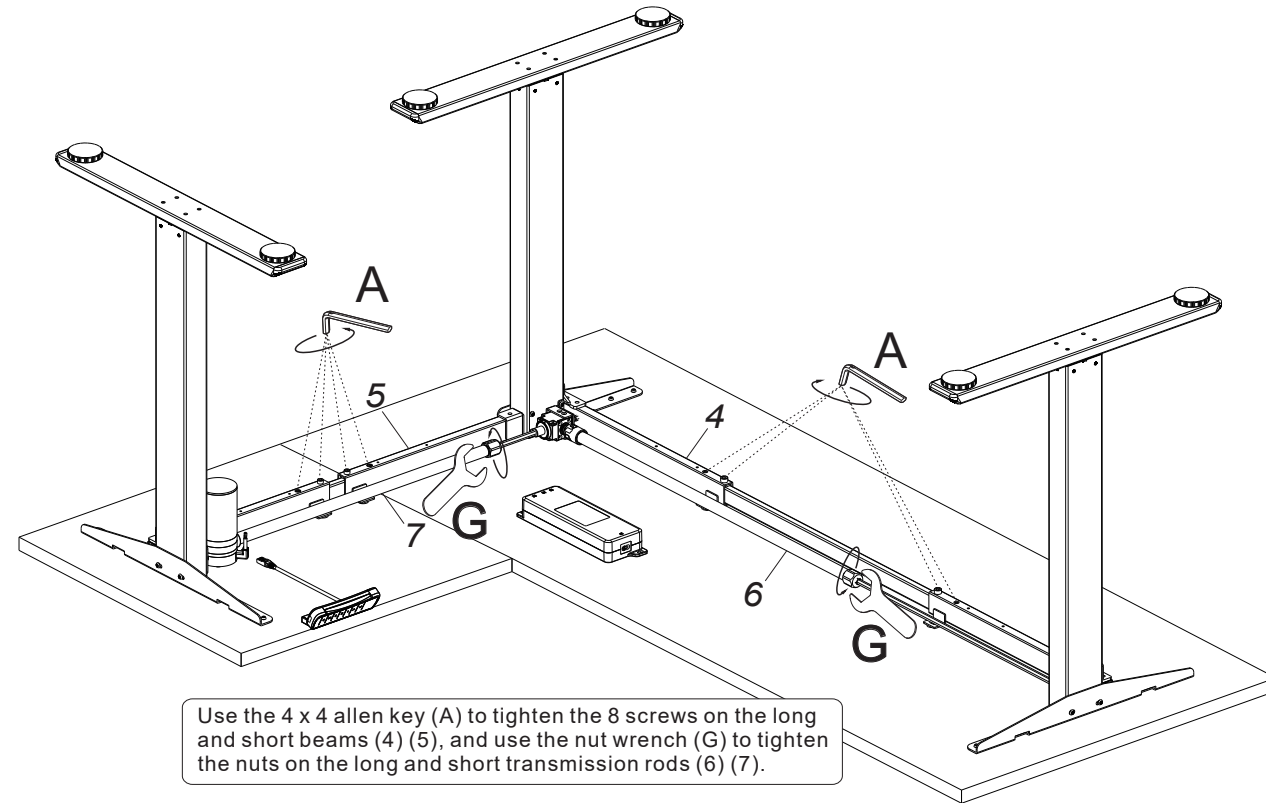

Use the 4 x 4 allen key (A) to tighten the 8 screws on the long and short beams (4) (5), and use the nut wrench (G) to tighten the nuts on the long and short transmission rods (6) (7).

## STEP7

  
Install Baffle

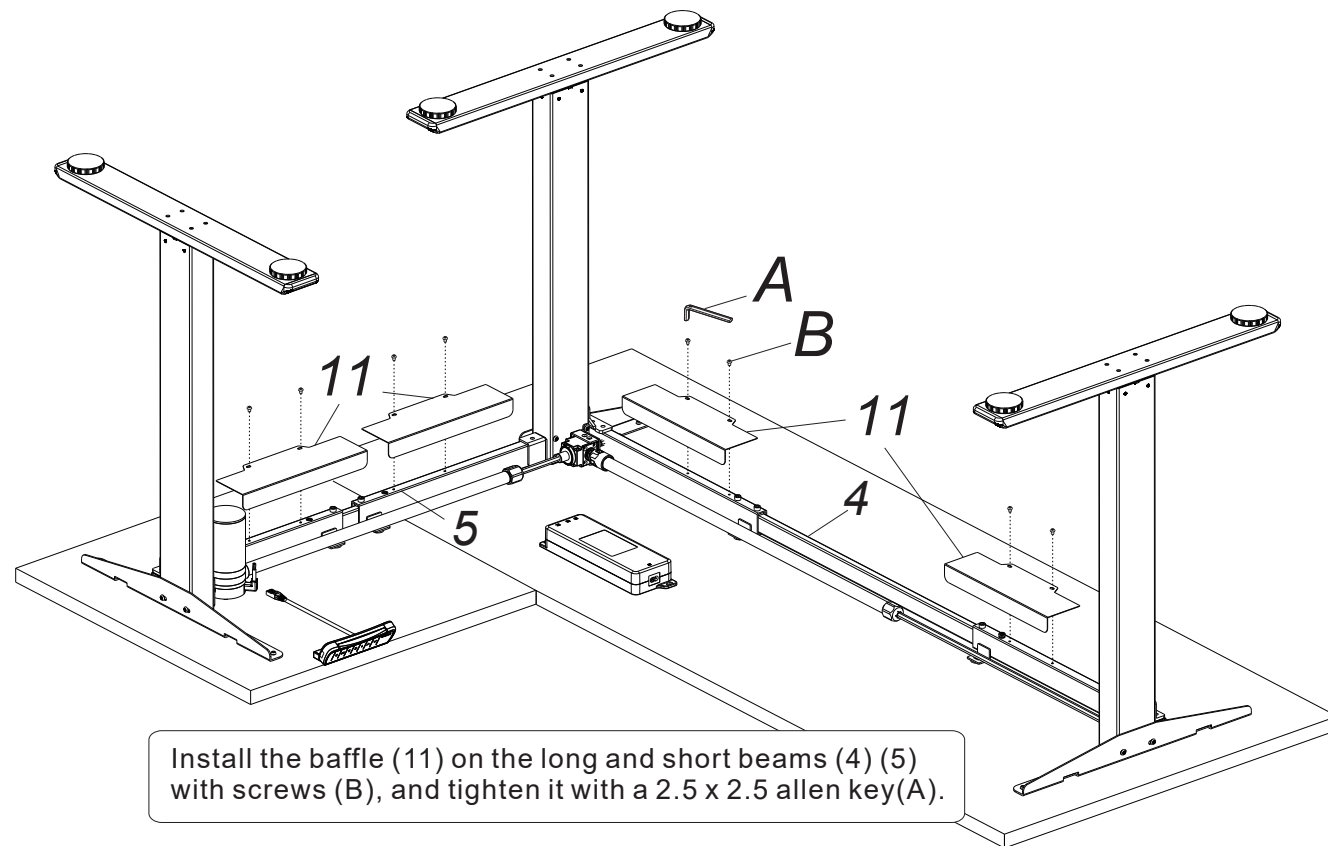


Install the baffle (11) on the long and short beams (4) (5) with screws (B), and tighten it with a 2.5 x 2.5 allen key (A).

## STEP8





Connect all Cable on to the Control Box

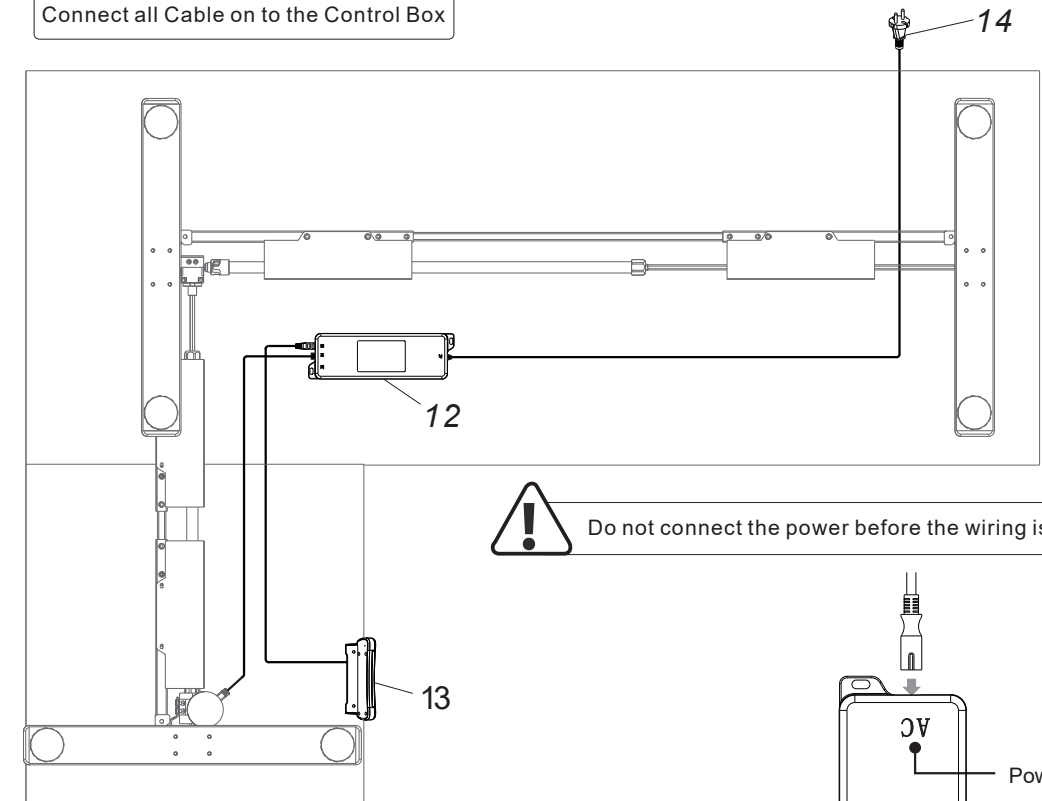

 Do not connect the power before the wiring is completed.



You can use the cable tie (15) to sort out the cables on the table to keep the cables tidy.

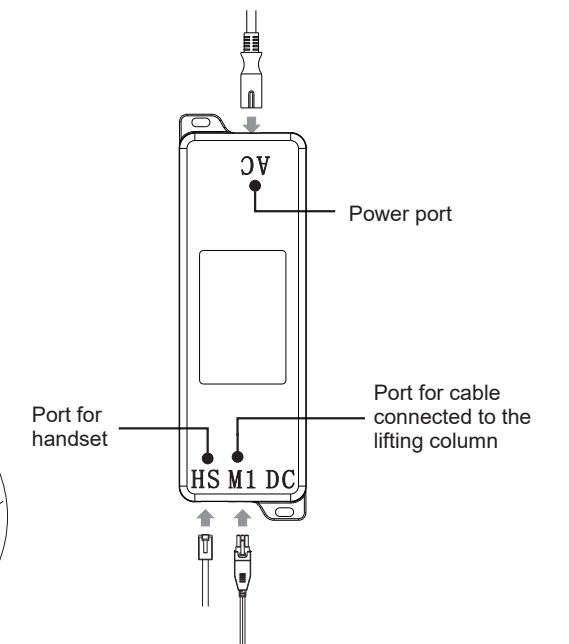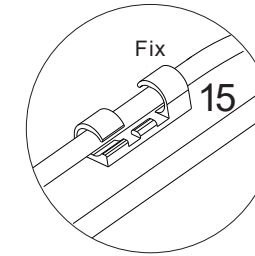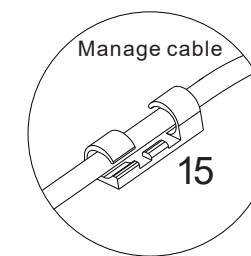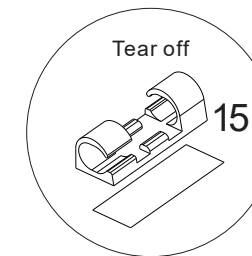

## Common fault treatment

The following tips will help you detected and eliminate the common fault and error. If the error you meet is not on the list, please contact our customer service.

Error	Method
No response while pressing	Check if all the cables well connected;
Rising in a low speed	Check if overloaded, max loading: 100kg;
The desktop moving towards the opposite direction as ordered	Reset;
The desk moving downwards without any operation	Check if overloaded, max loading: 100kg;
Automatically Self-Reset	Check if overloaded, max loading: 100kg;
Overload Operation	Restart after suspend for 18mins while connecting with power;
Can't reach the min or max height	Reposition;



## Attention

1. Power supply: AC100V- 240V,50/60Hz
2. Service Environment: 0-40℃
3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.
4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.
5. Check carefully to ensure correct and complete assembly before using.
6. Be familiar with all functions and program settings of the product before first use.
7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on manufacturers.
8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.
9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
11. Cleaning and user maintenance shall not be made by children without supervision.
12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
13. Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.
14. Keep the original package of the equipment if necessary in case of the future use in transportation.