Litewall Workstation 6 Person


Size: 1600mm

www.jasonl.com.au

Need help!

Call us on **1300 527 665**



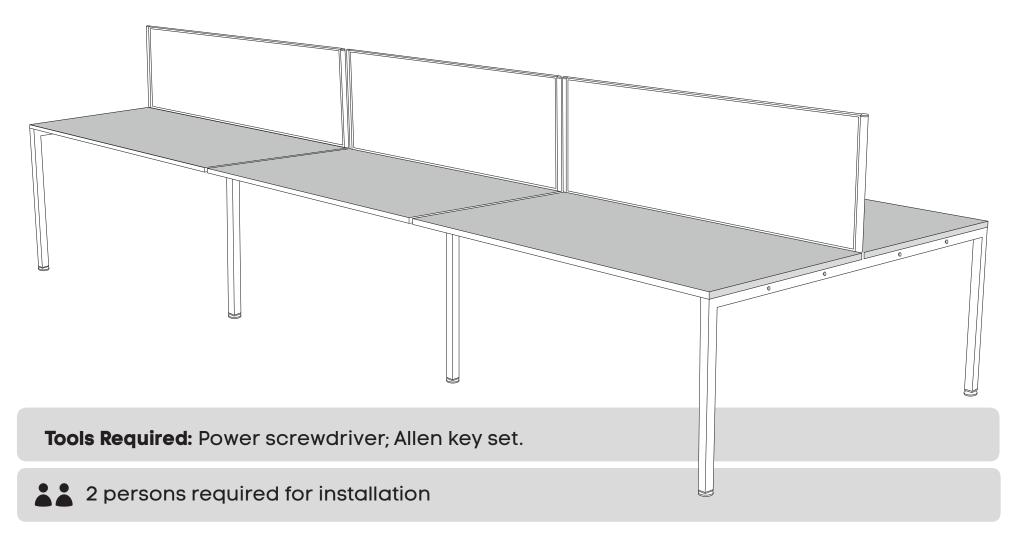

Litewall Workstation 6 Person


Size: 1600mm

www.jasonl.com.au

Need help!

Call us on **1300 527 665**



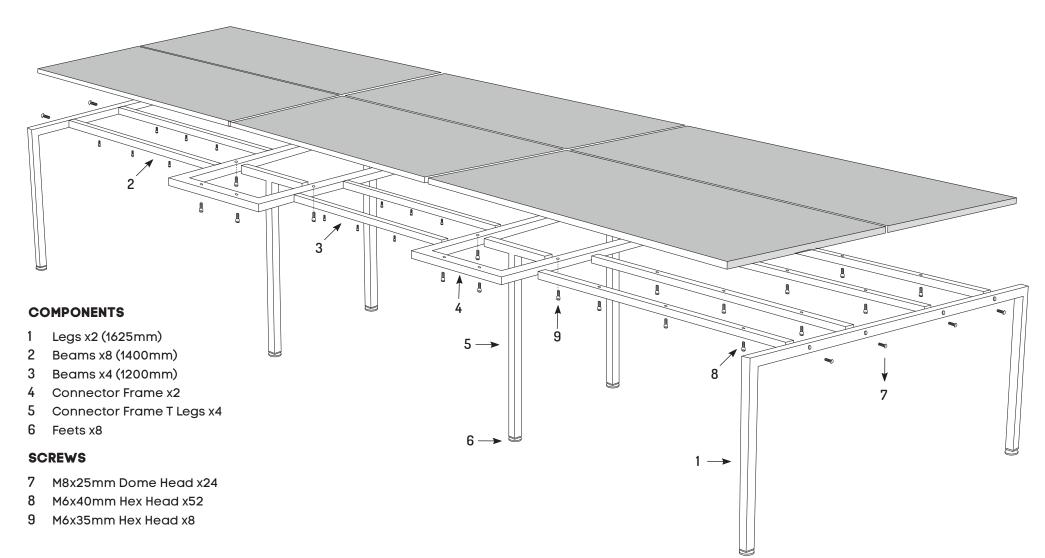

ASSEMBLY INSTRUCTIONS Litewall Workstation 6 Person


1

www.jasonl.com.au


Need help! Call us on 1300 527 665




Size: 1600mm

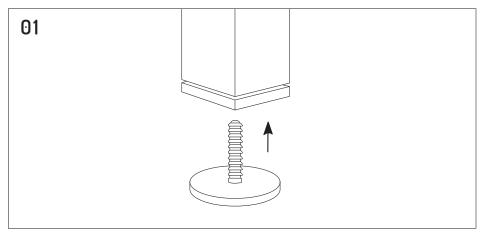


Screw the feet to each leg and T leg.

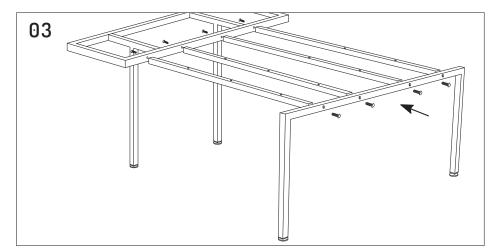

Attach 4x 1400mm beams to 1625mm leg using M8x25mm dome head screw. Attach connector frame from diagram 2 to 4 beams using M8x25mm dome head screws.

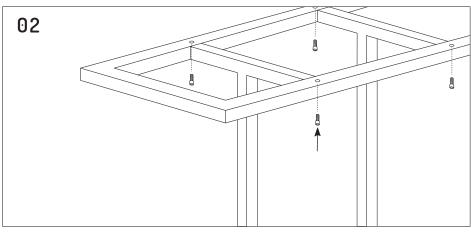

Assemble connector frames. Attach the 2 T legs to the double connector frame using M6x35mm hex scews x4.

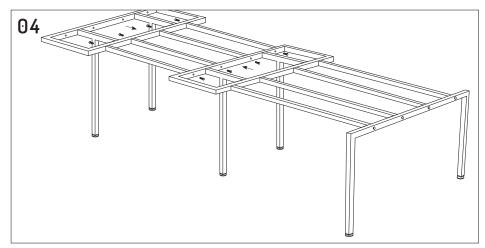

Add both connector frames together appropriate beams (4x1400mm).

ASSEMBLY INSTRUCTIONS Litewall Workstation 6 Person

Size: 1600mm

www.jasonl.com.au

Need help!

Call us on **1300 527 665**



