


Nest L Meeting Booth

4 PERSON POD

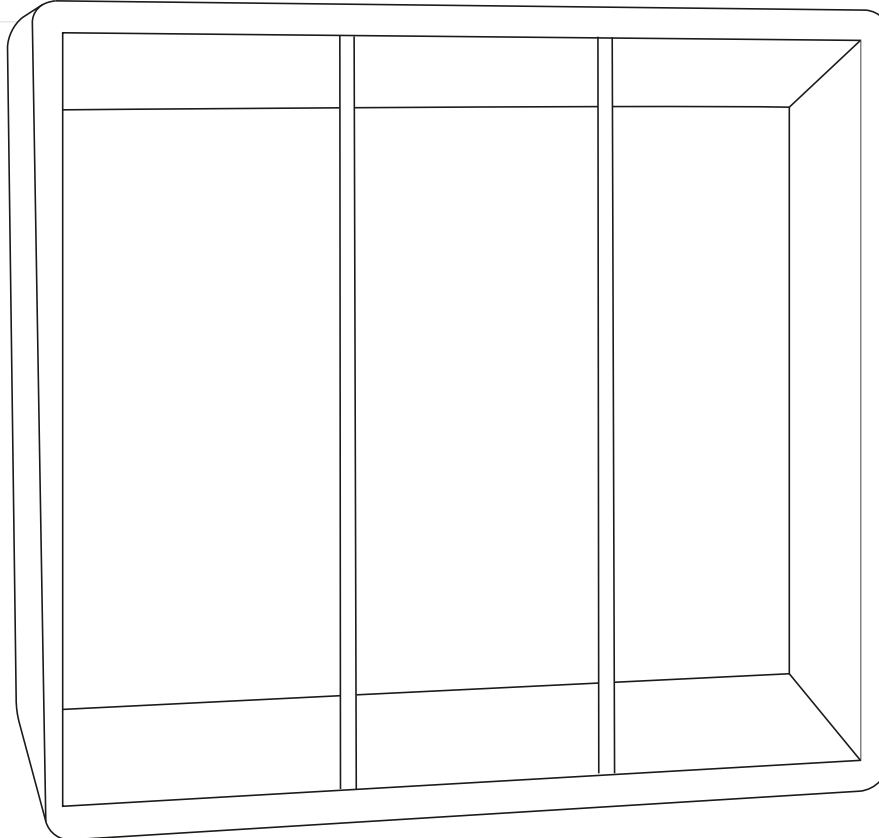


Need help!

Call us on **1300 527 665**




Nest L Meeting Booth

4 PERSON POD

Parts list

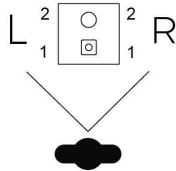

All location remarks refer to the point that shown above. The number increase as getting further away.

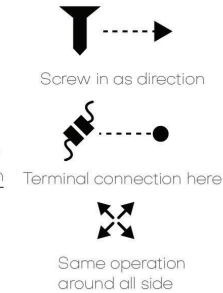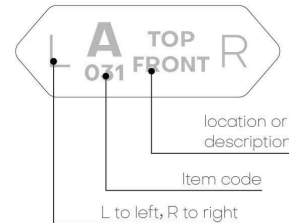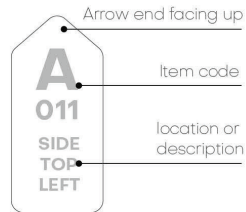

Coding rules

A-000	Aluminum
B-000	Glass
C-000	Side board
D-000	Interior
Y-000	Accessory
Z-000	Standard tool

Z-000 Standard tool


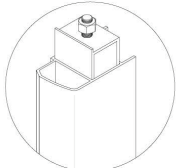


Code	Descr.	Qty.	Preview
Z-001	Open-end spanner	1	
Z-002	H4 hex key	1	
Z-003	H3 hex key	1	
Z-004	H2.5 hex key (for door closer)	1	
Z-005	H4 hex key+cross head	1	

Nest L Meeting Booth




4 PERSON POD

Parts list





A-000 Aluminum

Code	Descr.	Qty.	Preview	
A-011	Side top left	1		
A-012	Side Bottom left	1		
A-013	Side top right	1		
A-014	Side Bottom right	1		
A-021	Front middle left	1		
A-022	Back middle left	1		
A-023	Front middle right	1		
A-024	Back middle right	1		
A-031	Top front	1		
A-032	Bottom front	1		
A-033	Top back	1		
A-034	Bottom back	1		
A-011	Corner block	8		
A-201	Jamb	1		

B-000 Glass

Code	Descr.	Qty.	Preview
B-101	Door	1	
B-011,012	Front left 1, 2	2	
B-021-023	Back left 1-3	3	

B-000 Side board

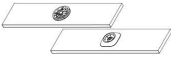



Code	Descr.	Qty.	Preview
C-011-014	Left 1-4	4	
C-021-024	Right 1-4	4	
C-031-034	Top 1-4	4	
C-041-044	Bottom 1-4	4	

Nest L Meeting Booth




4 PERSON POD













Parts list

D-000 Interior

Code	Descr.	Qty.	Preview
D-011, 012	Left 1, 2	2	
D-021, 022	Right 1, 2	2	
D-031, 032	Top 1, 2	2	
D-041	Carpet	1	

Y-000 Accessory

Code	Descr.	Qty.	Preview
Y-011	Power cord	1	
Y-012	Power socket	1	
Y-013	Dimmer controller	1	

Code	Descr.	Qty.	Preview
Y-014	PIR sensor	1	
Y-015	Ceiling lamp	1	
Y-016	Lever handle Lock	1	
Y-021	Door closer arm	1	
Y-031	M5*16 screw	26+2	
Y-032	M6*12 screw (Y-021 further end)	1	
Y-033	M6*10 screw (Y-021 close end)	1	
Y-034	M4 door screw	2	
Y-035	Set screws (in the lock)	1	
Y-036	ST4,2*25 screw	8+1	
Y-041	Glass sealing strip (Inner)	20m	
Y-042	Glass sealing strip (Between)	2	





Need help!

Call us on **1300 527 665**

Nest L Meeting Booth

4 PERSON POD

Booth installation

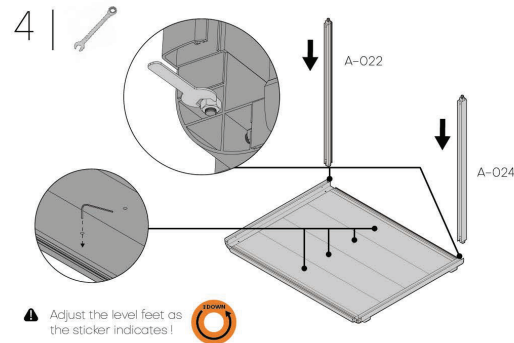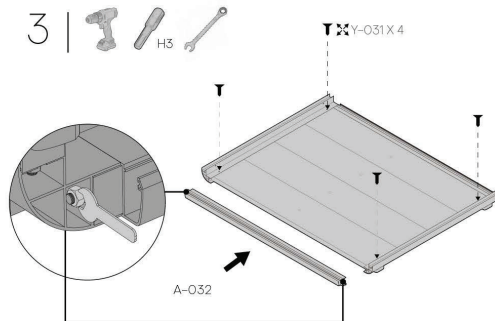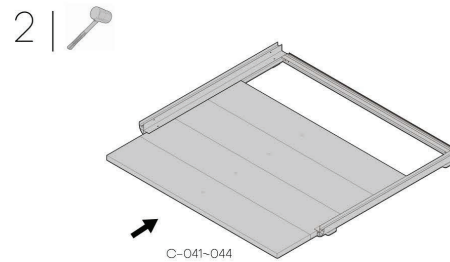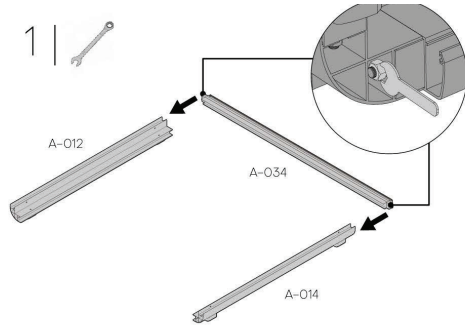





Need help!

Call us on **1300 527 665**

Nest L Meeting Booth

4 PERSON POD

Booth installation

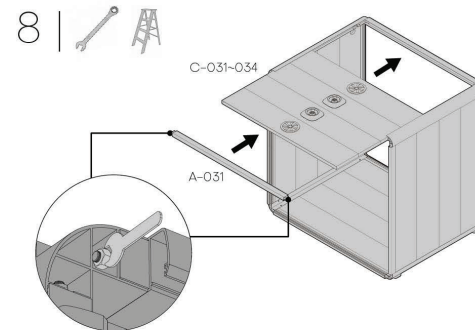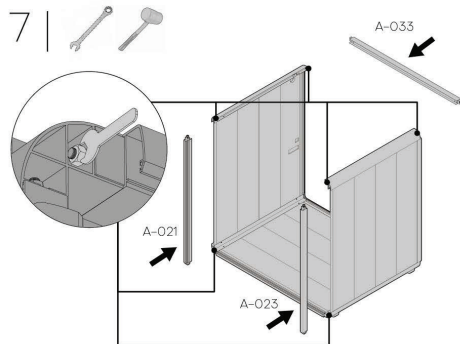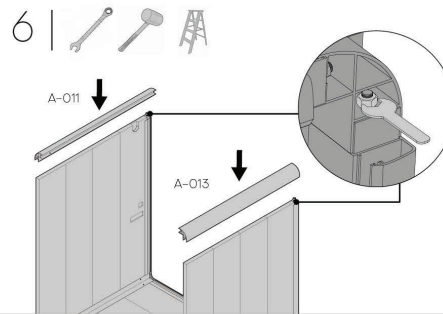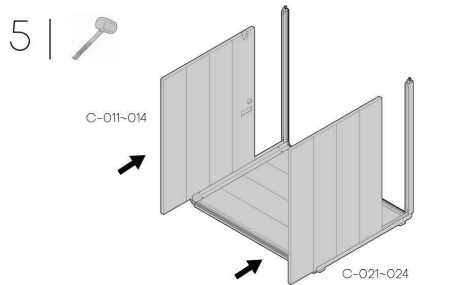


Need help!


Call us on **1300 527 665**

Nest L Meeting Booth

4 PERSON POD



Booth installation

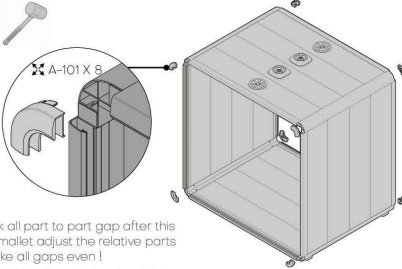
9 | 



A-101 X 8

- ⚠ Check all part to part gap after this step, mallet adjust the relative parts to make all gaps even !
- ⚠ Do not strick the part too hard, this may damage the surface coating.

10 |   H5

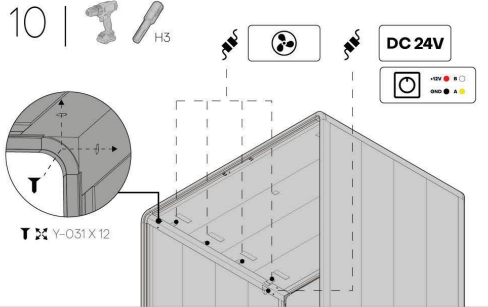


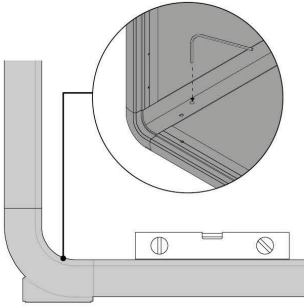
Y-031 X 12

DC 24V


⊕ ⊖

⊕ ⊖


11 | 




- ⚠ Don't skip leveling because it will dramatically affect the final quality!
- ⚠ Adjust the level feet as the sticker indicates when level feet is equipped!



- Put rigid sheet material under feet to adjust when plastic damper feet is equipped!

12 | 

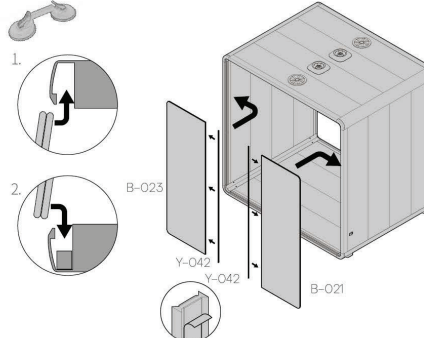



B-023

Y-042

Y-042





B-021

- 
- 

Nest L Meeting Booth

4 PERSON POD

Booth installation

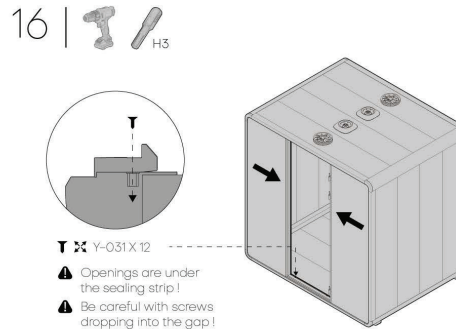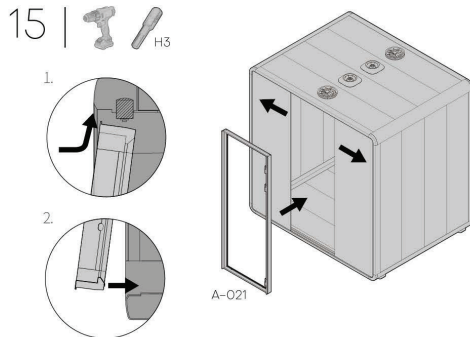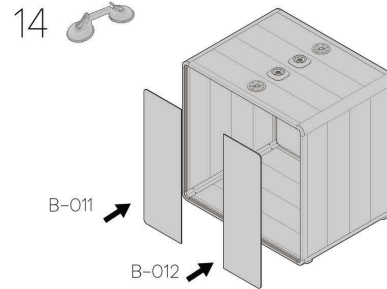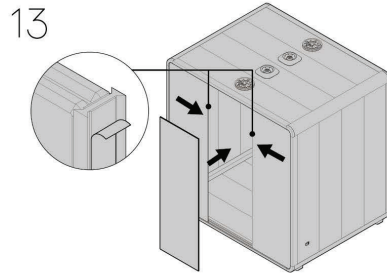





Need help!

Call us on **1300 527 665**

Nest L Meeting Booth

4 PERSON POD

Booth installation

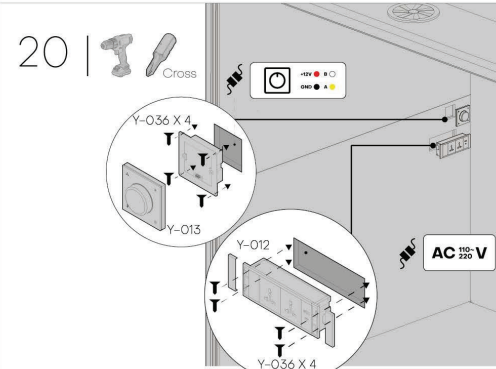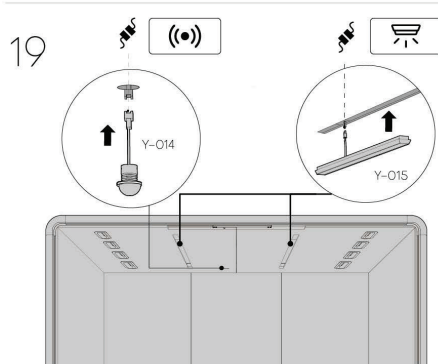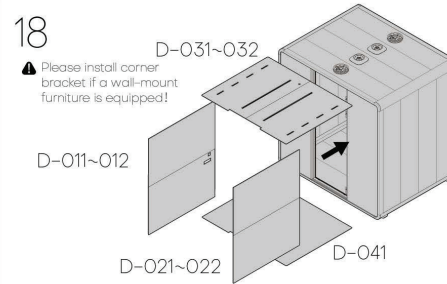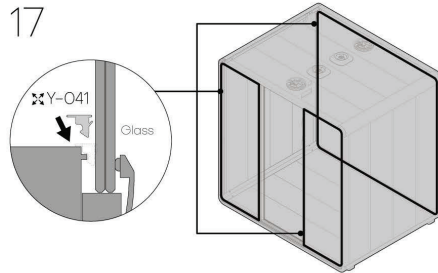





Need help!

Call us on **1300 527 665**

Nest L Meeting Booth

4 PERSON POD

Booth installation

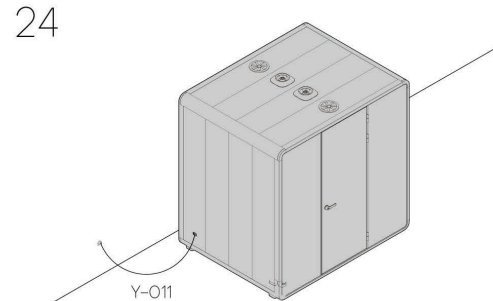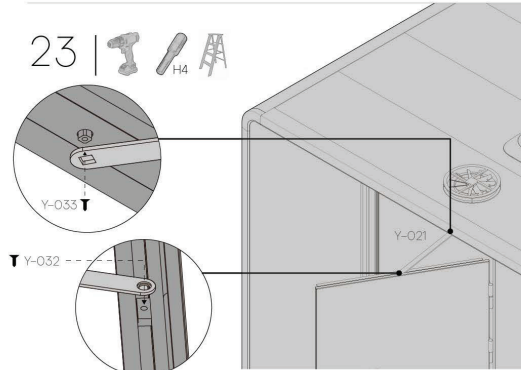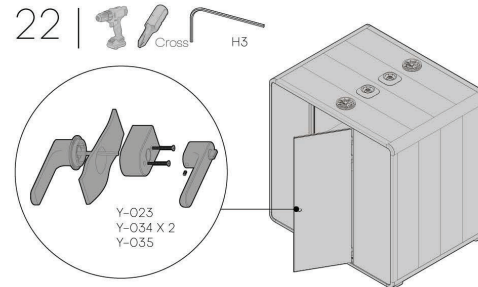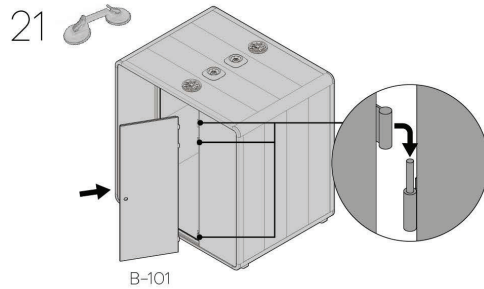




Nest L Meeting Booth

4 PERSON POD


Booth installation

Back pilaster


E-000 Back pilaster parts

Code	Descr.	Qty.	Preview
E-001	Back frame	1	
E-101	Back wall	1	
E-201	Cover piece	4	


13*
(after step 12)

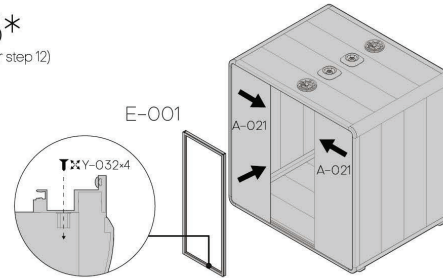

14*

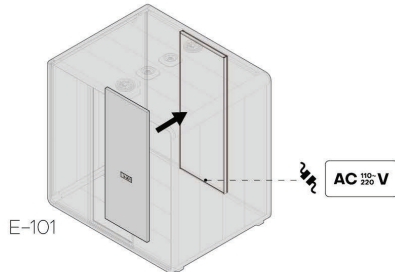

15*

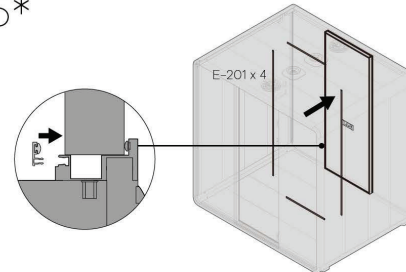

Nest L Meeting Booth


4 PERSON POD

Inte

3.4 Integrated furniture installation

125 WM meeting table

Code	Descr.	Qty.
01	Table top	1
02	Apron	1
03	Front pillar	1
04	Pillar base	1
05	M6*40 screw	9
06	M8*30 screw	1
07	M6*16 screw	5
08	Wireless charger	1

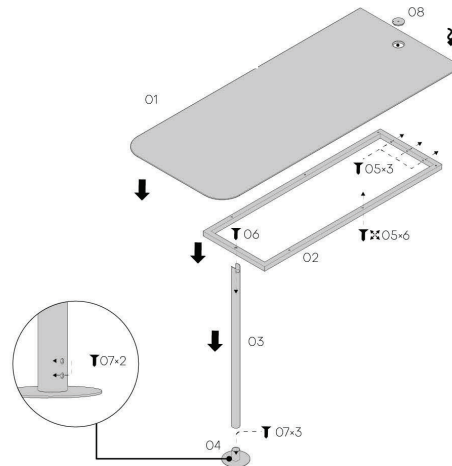

Nest L Meeting Booth

4 PERSON POD

Check list

Please check the installed products according to the following list to ensure their quality and safety:

- All screws have been tightened according to instructions;
- The cabin is leveled to be balanced;
- The gap around the door is even;
- When the door is closed, the rubber seal between the door and the frame is firmly contacted;
- All seal strips are installed in place;
- For cabins with castors, make sure the level feet is touch the ground.
- The socket panel is able to supply power;
- The lighting and ventilation system can be opened, closed and adjusted;
- There is airflow entering from the ventilation grille, and the fan operates well with smooth sound;
- The door handle can be opened and locked.
- All furniture has been installed securely according to instructions.

Nest L Meeting Booth

4 PERSON POD

Trouble shooting

- > **Only part of ventilation grilles have airflow goes in?**
 - Some of the outlets in the booth are for air outtaking Please refer to the positioning of different fans in the product specifications to confirm the intake;
 - If it is confirmed that there is no airflow from the intaking grilles, please check the working status of fans on top, if the fan is not working, please contact the after-sales personnel.
- > **Power socket is not working?**
 - Check whether the external socket switch is lit up, if not, it means that there is no power supply from the outside or the fuse has blown out;
 - If the external outlet switch is lit up, please check the USB socket of the outlet, if the green light is lit up, it means that power is being supplied, if the light is not on, please check the wiring behind the socket;
 - If you have tried all above steps and still cannot solve the problem, please contact the after-sales personnel for assistance.
- > **Power socket is working but not the fan/lamp ?**
 - Check whether all wire terminals are well embraced and if there are any terminal in loosen with wire;
 - Open the Maintenance door on top board and observe if the PLC indicator light is red. If red light shows, disconnect the external power source and connect again;
 - If you have tried all above steps and still cannot solve the problem, please contact the after-sales personnel for assistance.
- > **The door does not close properly?**
 - Confirm if there are any obstructions around the edge of the door;
 - Confirm if there are uneven gaps around the door edges and if the lower left corner of the door engages with the door thread, if so, adjust the level feet till the gap around the door is even;
 - Use the H2.5 allen wrench to adjust the door closer.
- > **Interior wall panel edges not aligned properly?**
 - Put small amounts of material under the bottom side of the panel to level.

Nest L Meeting Booth

4 PERSON POD

Maintenance guide

Maintenance Steps

1. Unplug the power cord;
2. Check if the booth is in leveled statuses;
3. Check if the door gaps is even;
4. Check if there is foreign object in the top fan area, remove the fan cover for cleaning;
5. Remove the furniture from the booth;
6. Use a vacuum cleaner to clean the air duct from the ventilation grille;
7. Clean all parts of the booth including desktop, carpet, inner glass, wall surface, power socket, and control panel;
8. Clean all furniture that was moved outside, then move them back in;
9. Wipe clean the exterior appearance of the cabin;
10. After confirming no water residue around all electrical equipment locations, reconnect the power cord and check if all functions are well operating.

ATTENTION

1. Conduct a comprehensive maintenance at least once a month to avoid accumulation of grime.
2. Before wiping, please ensure that the surface of the wipe tool is free of sharp debris to prevent scratches. Dust-free cloths is recommended to use for wiping glass.
3. Please avoid using corrosive detergent for all fabric surfaces.
4. If using uncommon cleaning product, please test them in an insignificant area of the booth first to ensure it is not damaging surfaces.
5. Since the booth is a closed space, please do not use cleaning products with strong smell to prevent lingering odors causing discomfort.

Nest L Meeting Booth

4 PERSON POD

WARRANTY

Terms & conditions

1. Upon completion of installation, the main frame is covered by a 2-year warranty and electrical devices are covered by a 1-year warranty.
2. For products sold through unauthorized channels, warranty service will not be available.
3. For products outside of the warranty service scope, maintenance services can still be provided. The cost of labor, travel, and materials during the maintenance period will be charged.
4. The following situations will no longer qualify for free service:
 - Improper use, human damage, unauthorized modification or disassembly cause failure and damage.
 - CAUTION stickers on the product are only for maintenance personnel to remove. If the stickers are destroyed without authorization, the warranty service will no longer be available.
 - Failure and damage caused by abnormal voltage, force majeure or natural disasters.
 - Self-installation and use of non-original accessories cause failure and damage.
 - Customized products which involve electrical modification are not covered by this warranty.

* To claim the warranty, the warranty card or purchase receipt must be provided. Without relevant documents or altering the card without authorization, the service will be unavailable.