



Kabelaustritte

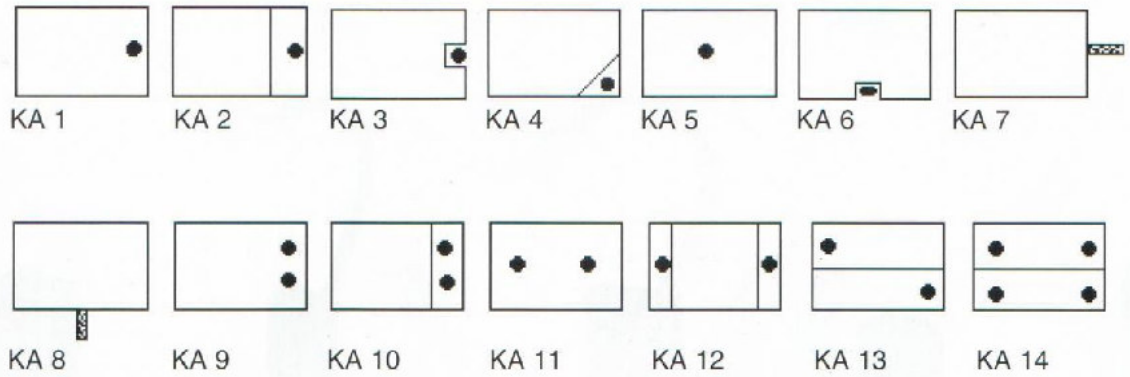

Kabelschuhe

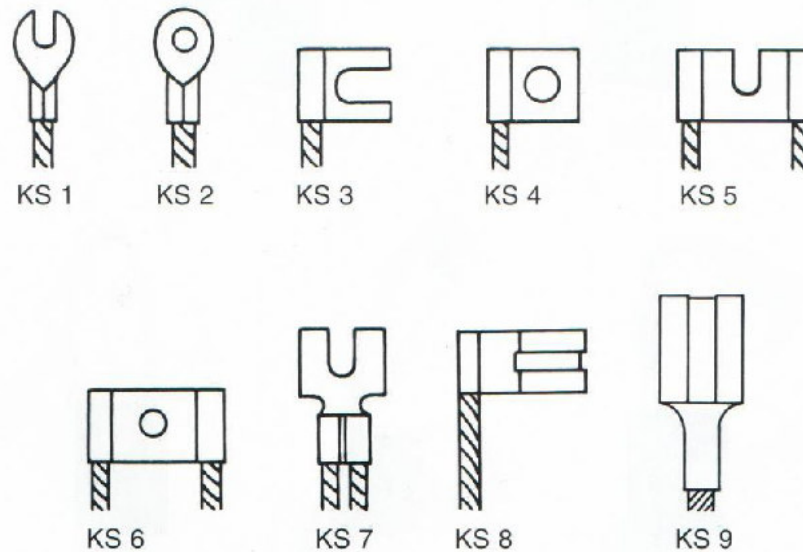



501



503



504



509



510



511



515



516



519



520



521



522



523



524



525



526



527



529



530



531




534



535




537

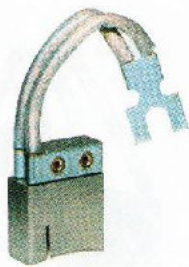

539



540

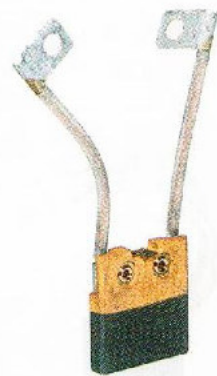

541



542



547



548



549



551



553



554



555



556



557



558




561



562




563

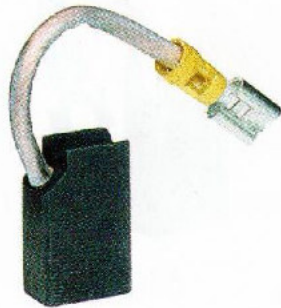

564



565

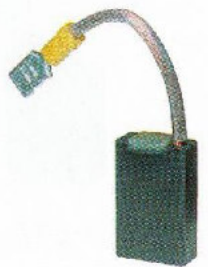

566




567



568



569

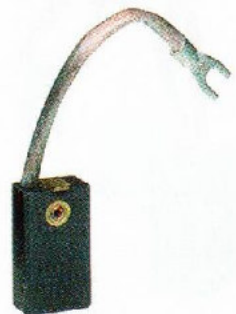

570



571



572



573



574