




F16 Installation manual

List of parts


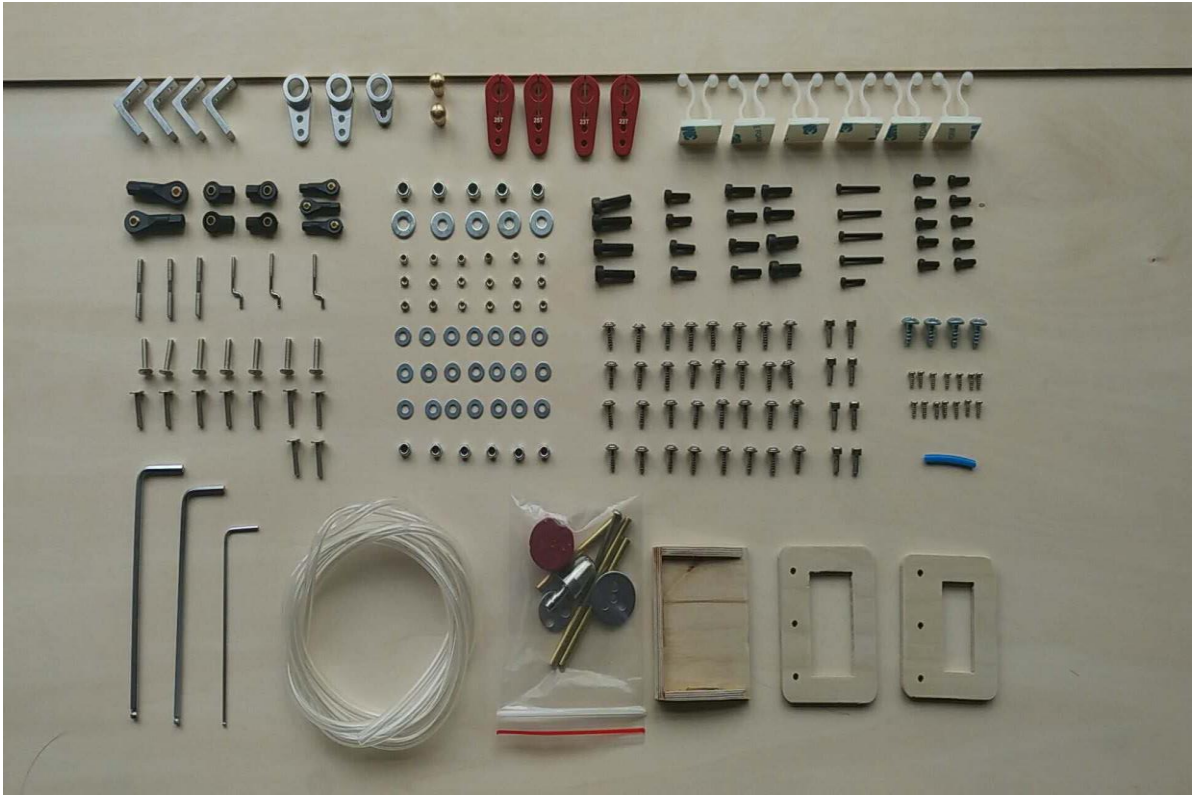


1、Aileron servo installation

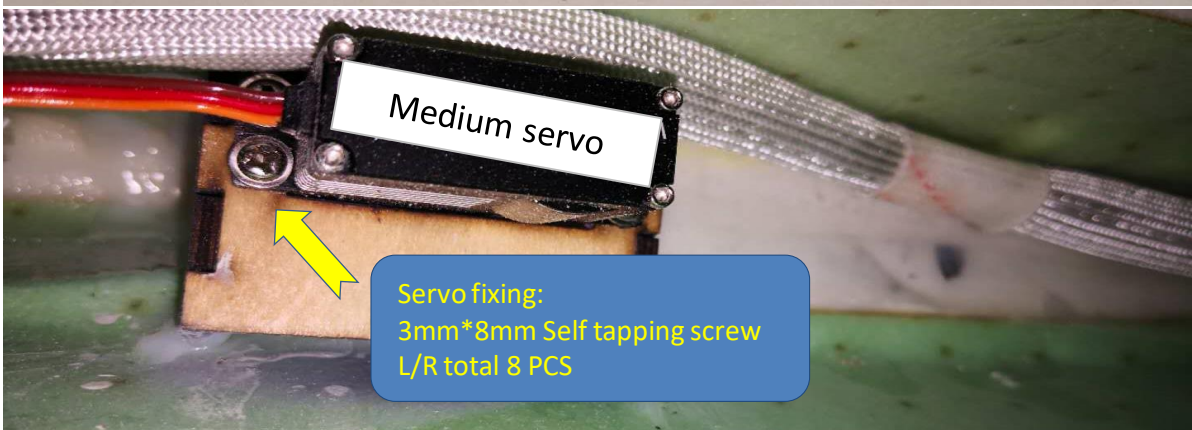


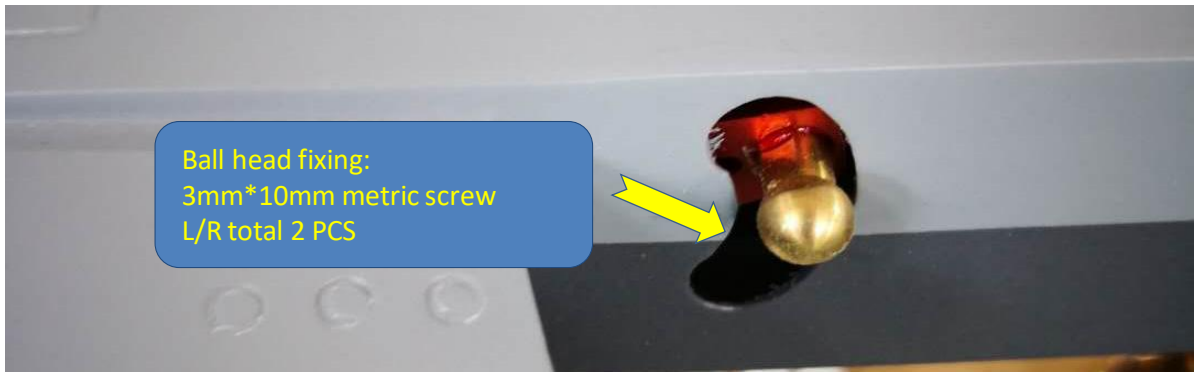


2、Horizontal tail installation

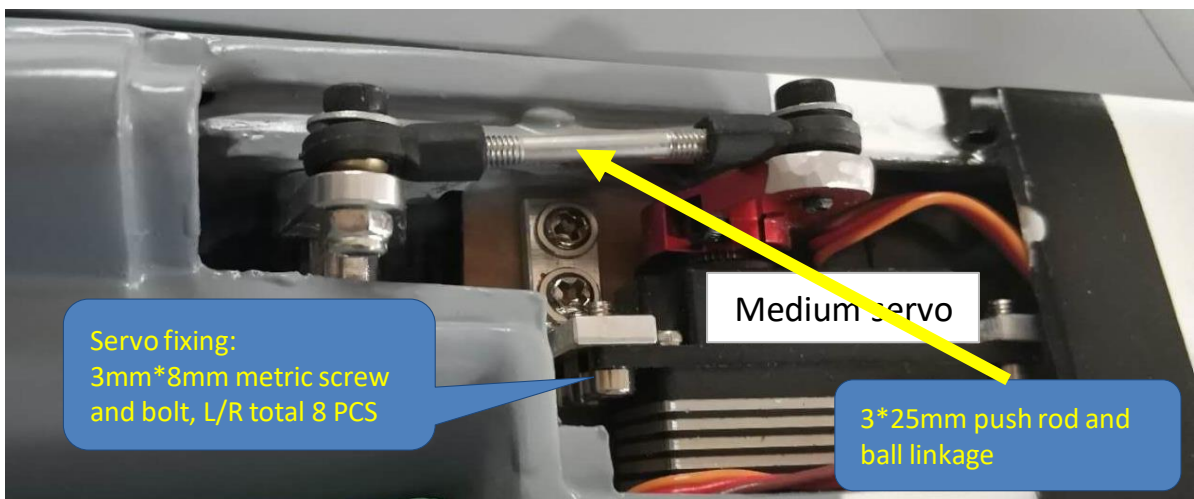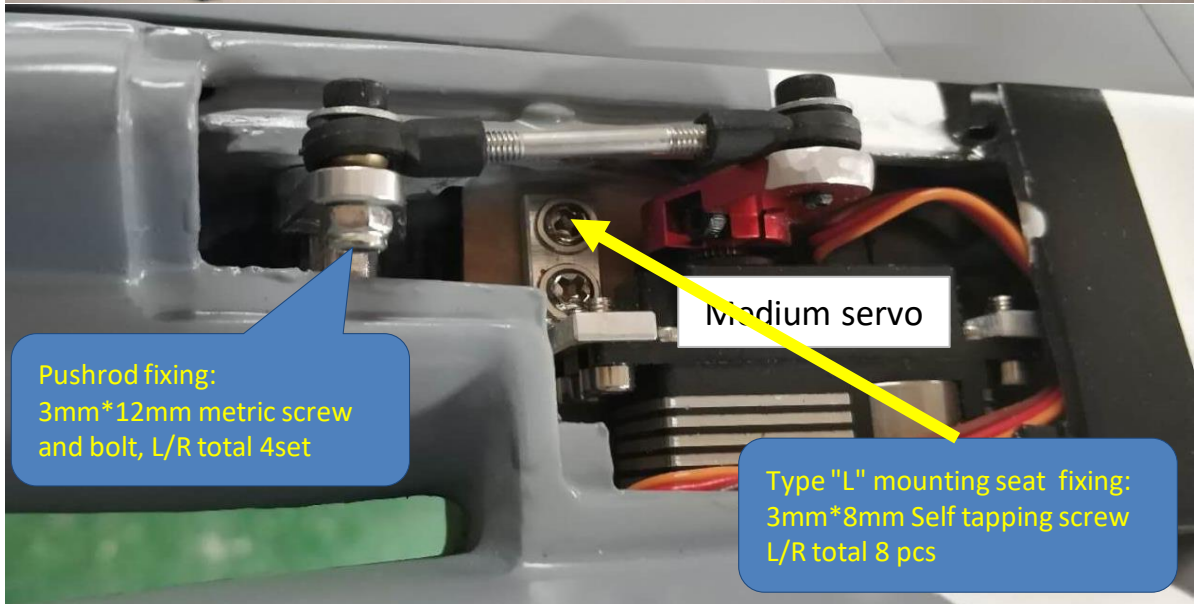


3、 Vertical tail installation

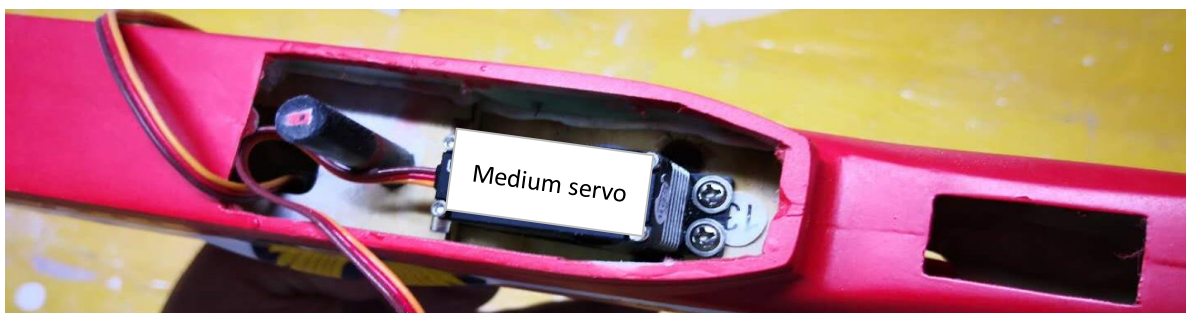


4、 landing gear and door parts

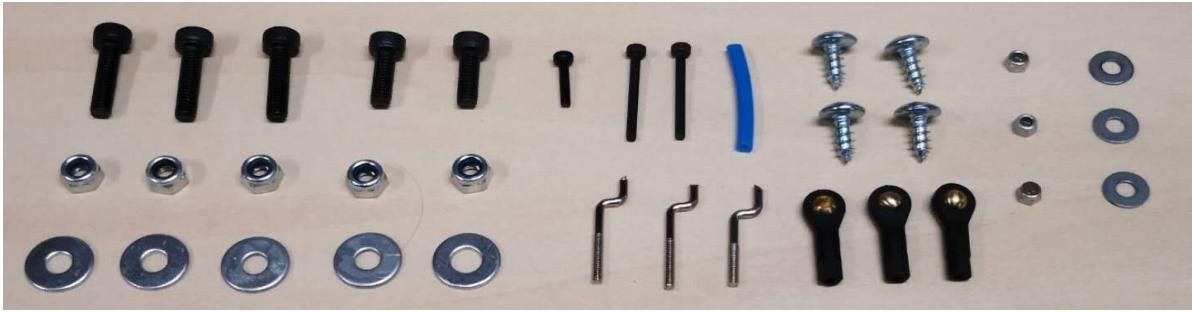


5、 Nose gear and servo installation

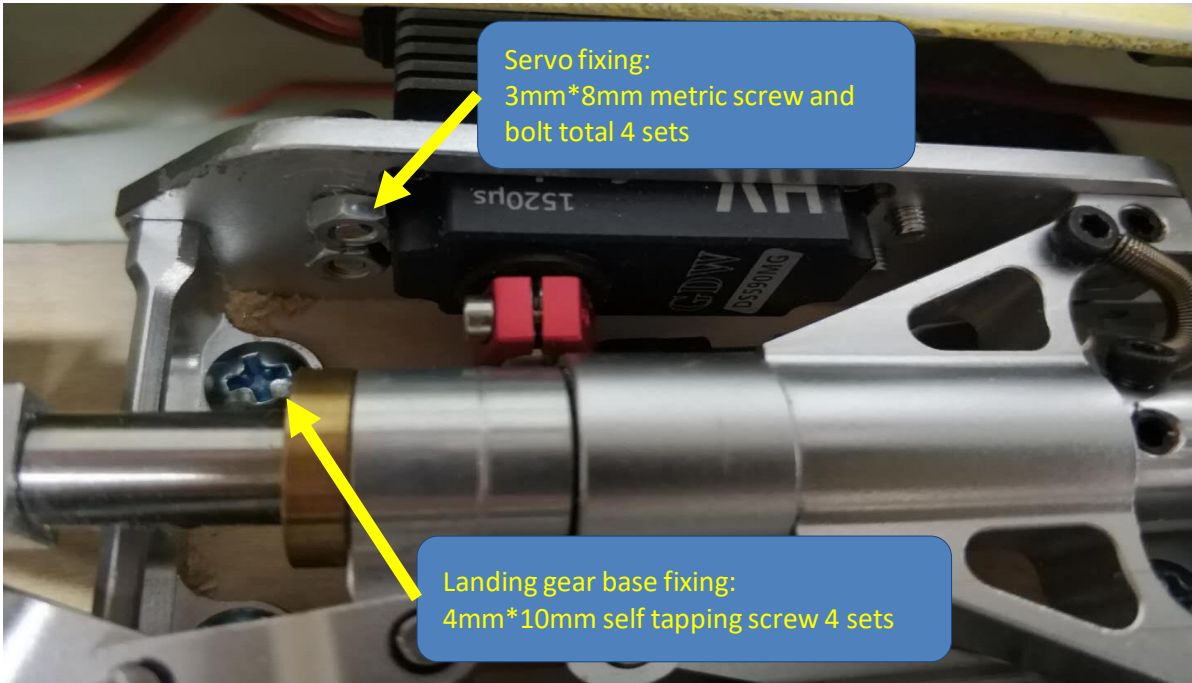

6、 Main gear installation

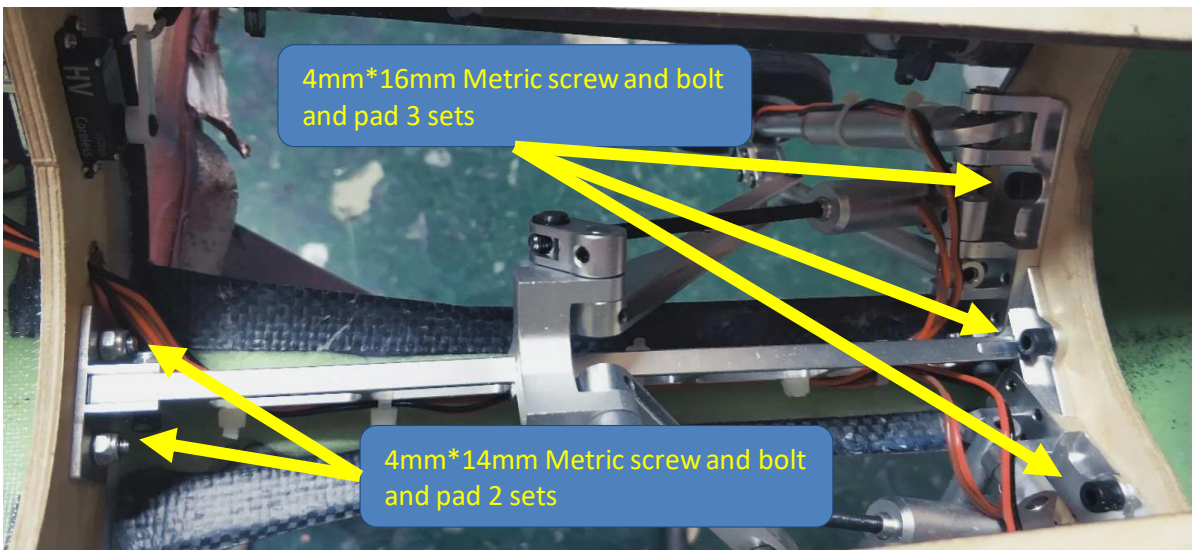

7、 Gear door servos installation

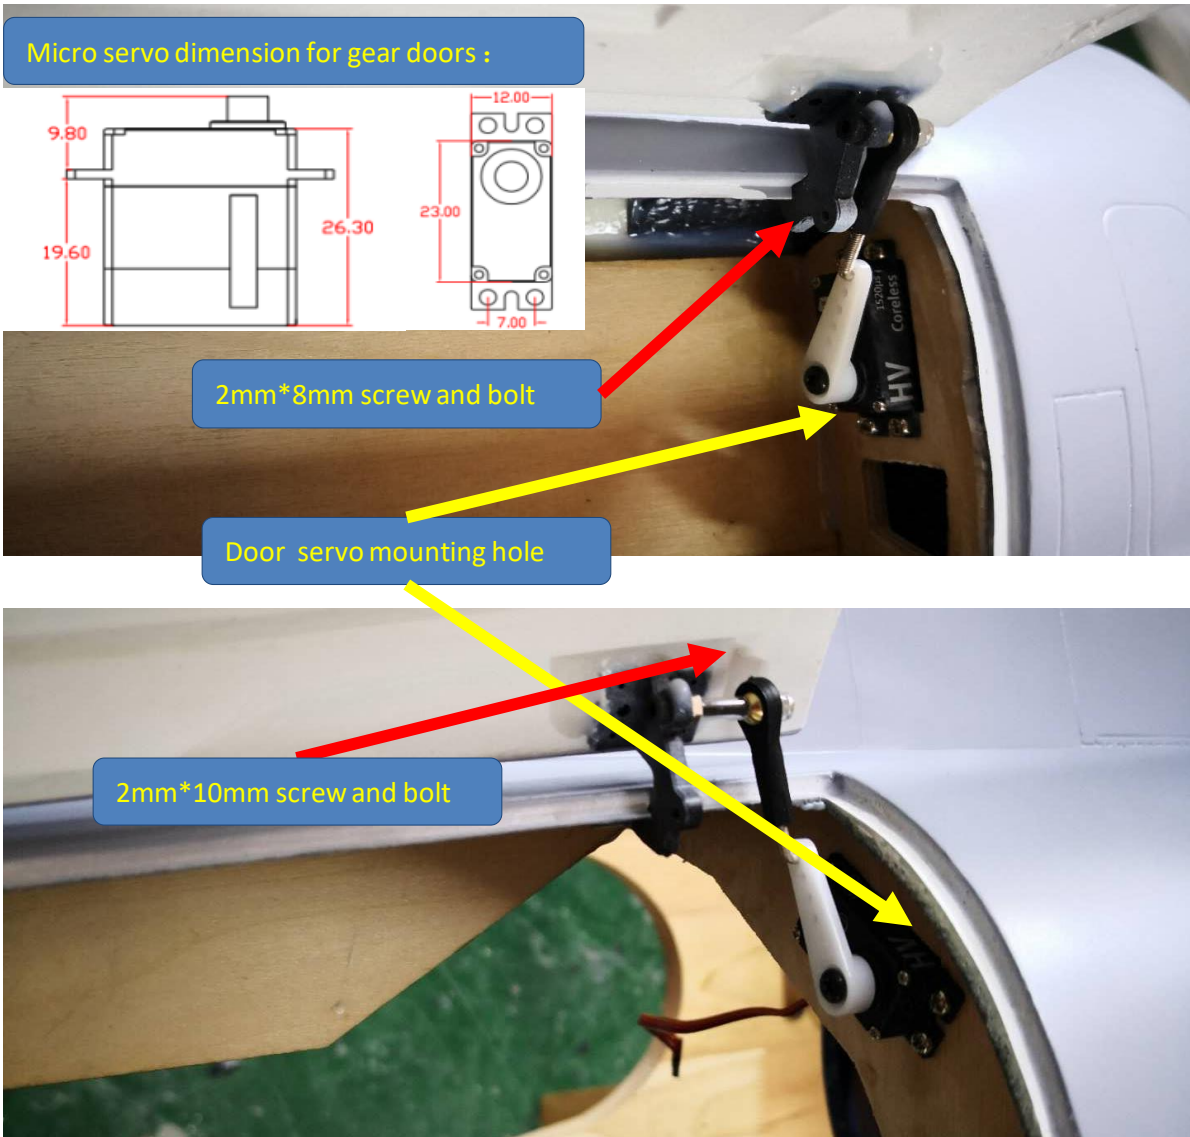

8、CG position

