
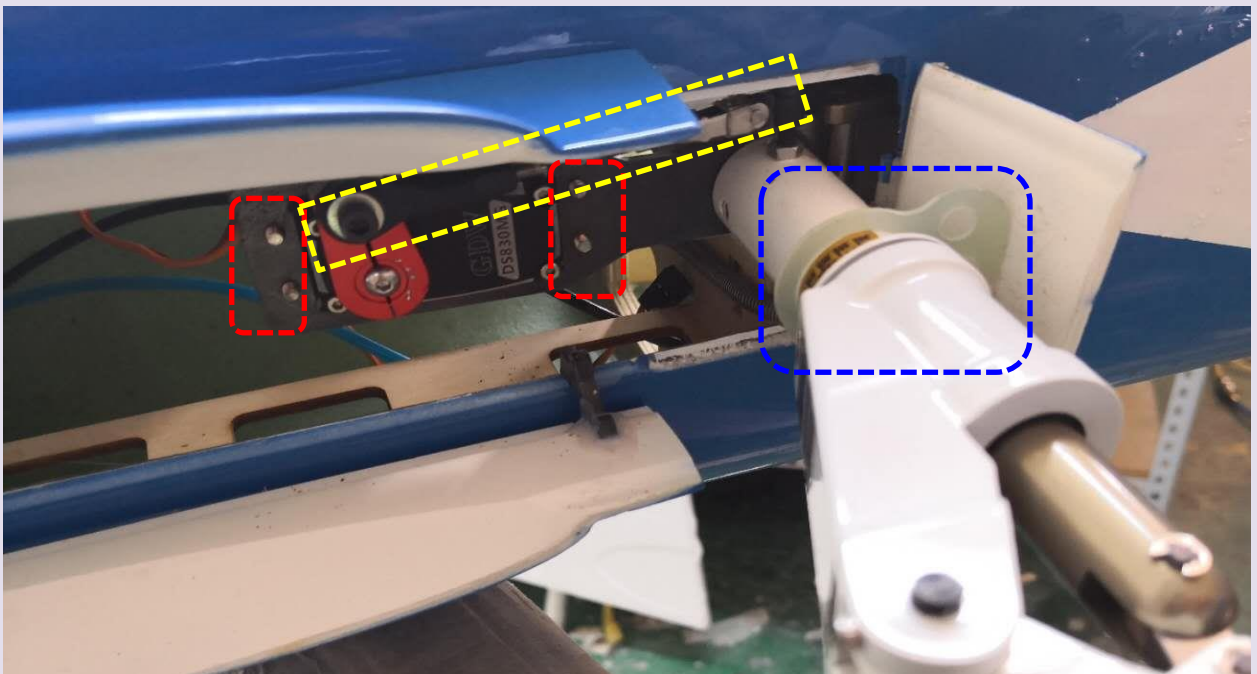
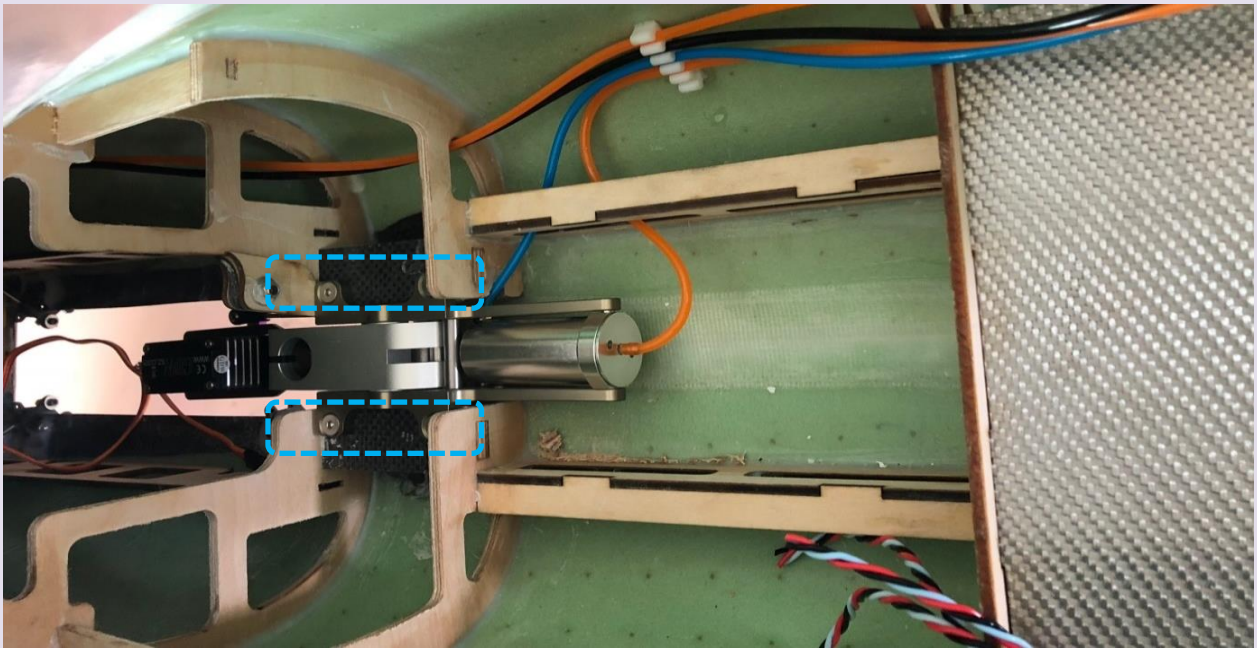




Hawk installation manual

1、 Gear installation




1.Nose gear installation

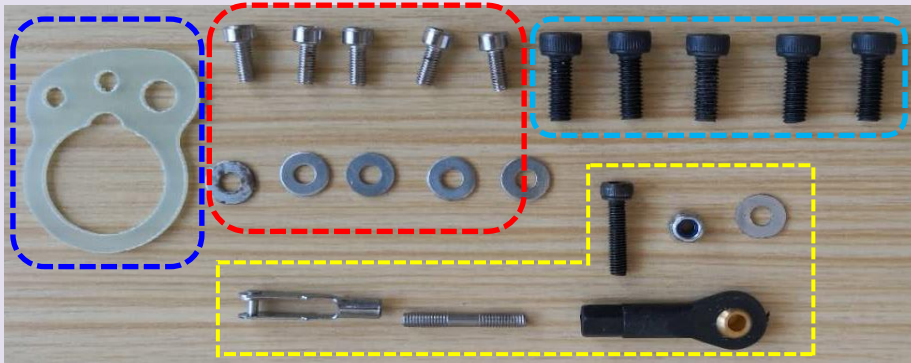



2.Main gear door cylinder installation

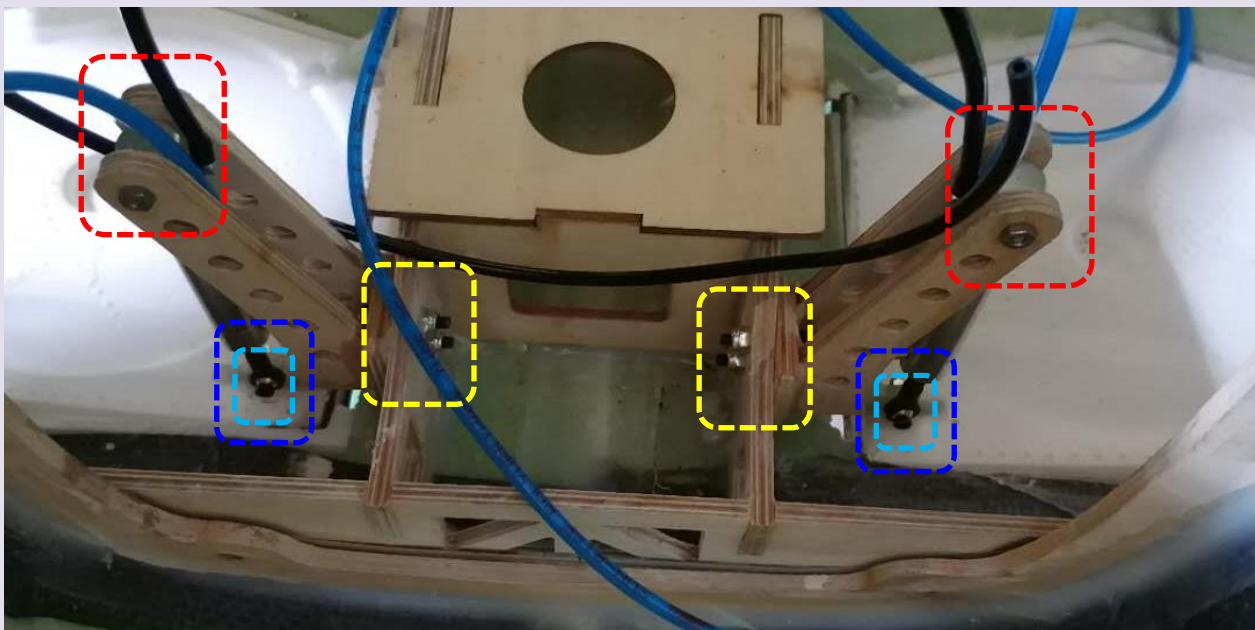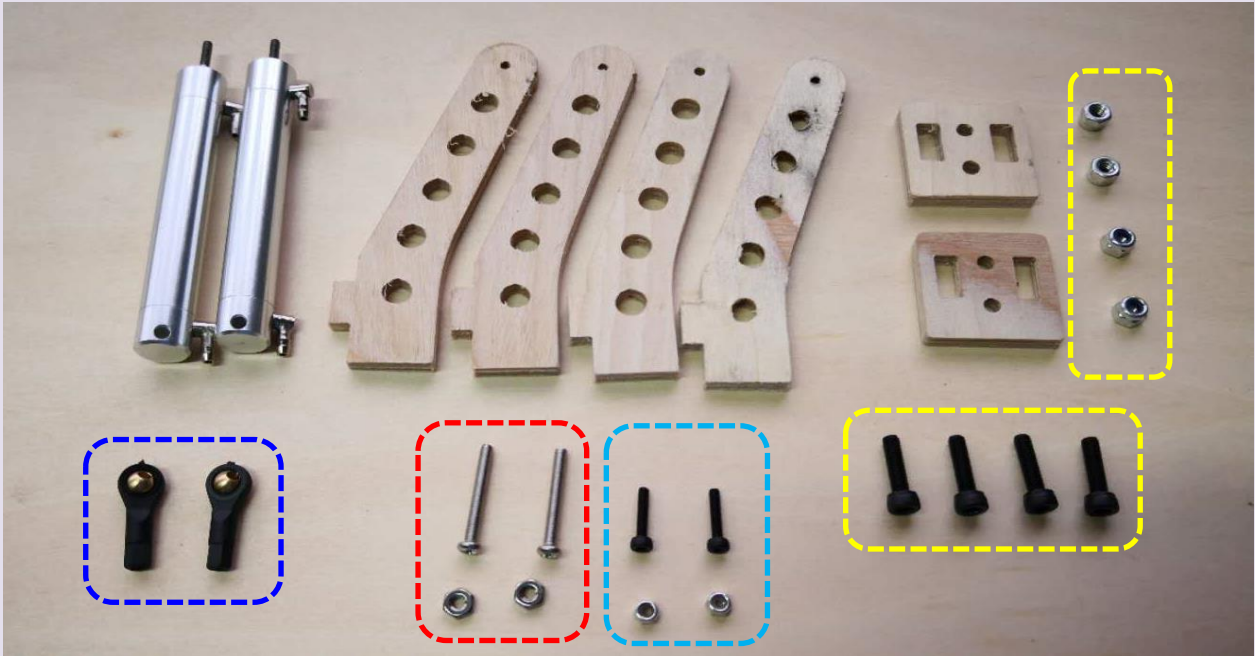


2. Aileron servo installation

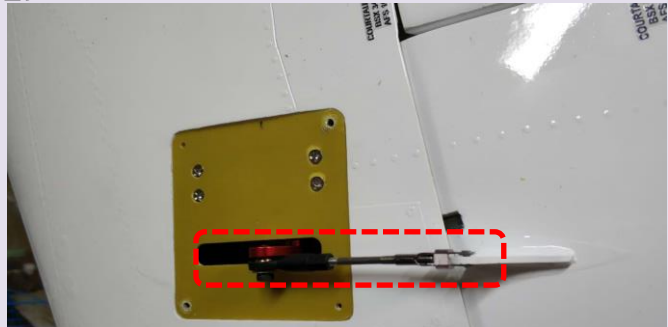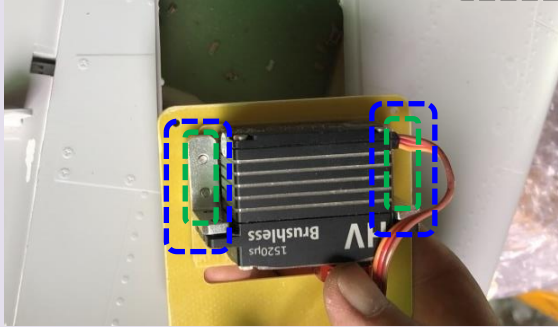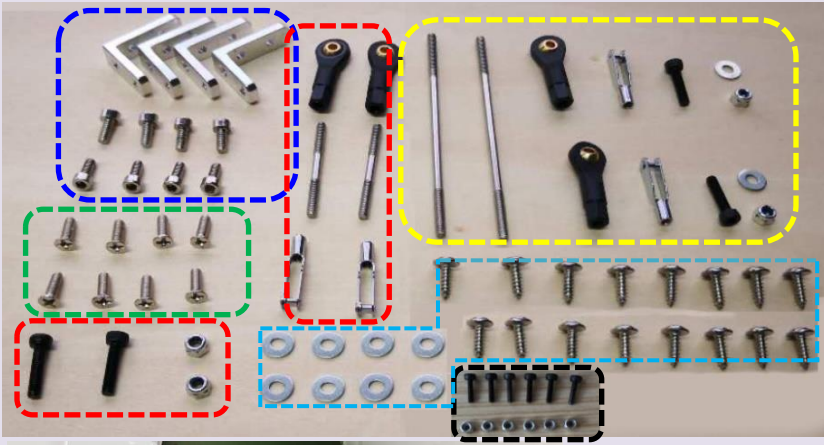



3. Flap servo installation

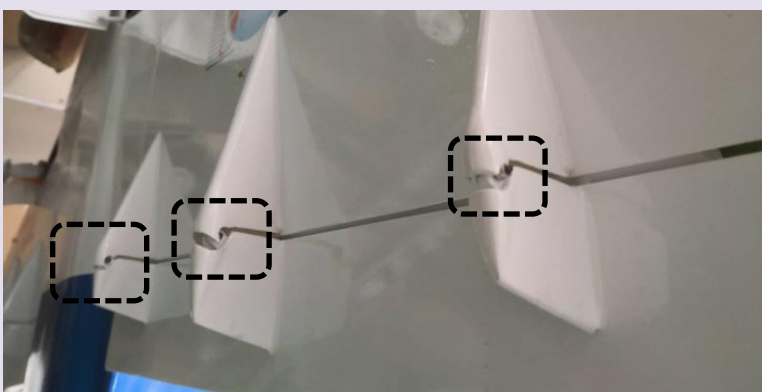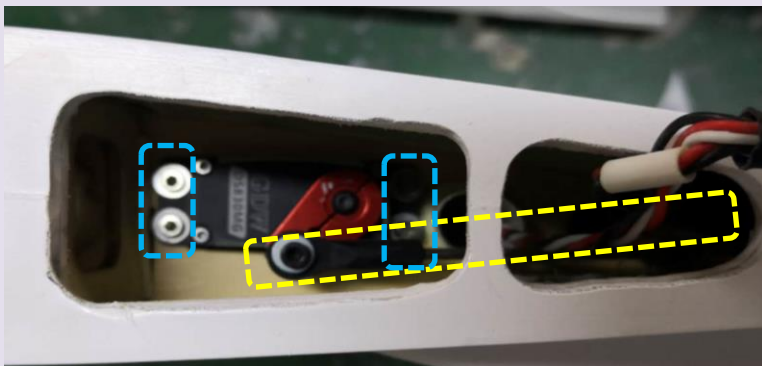






4、 Horizontal tail installation

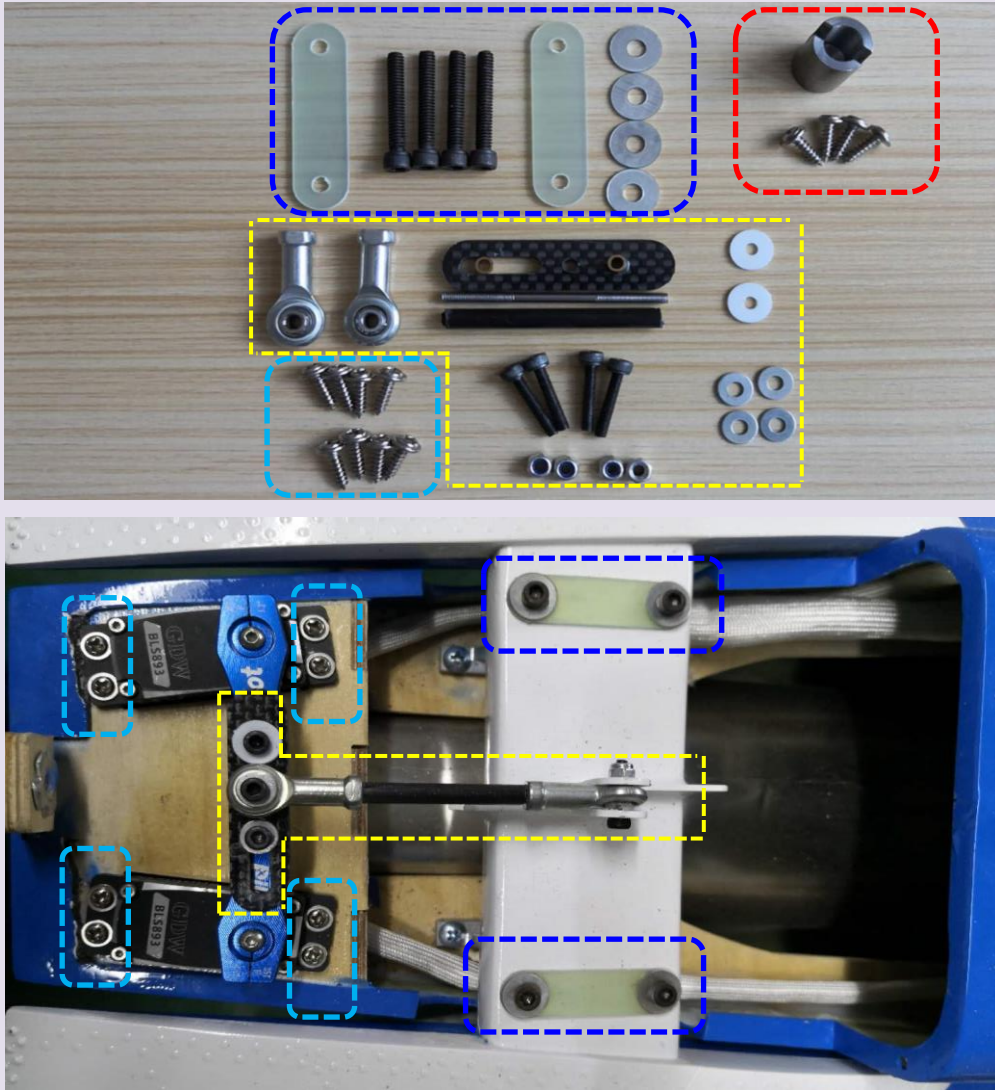


5、 Vertical tail installation

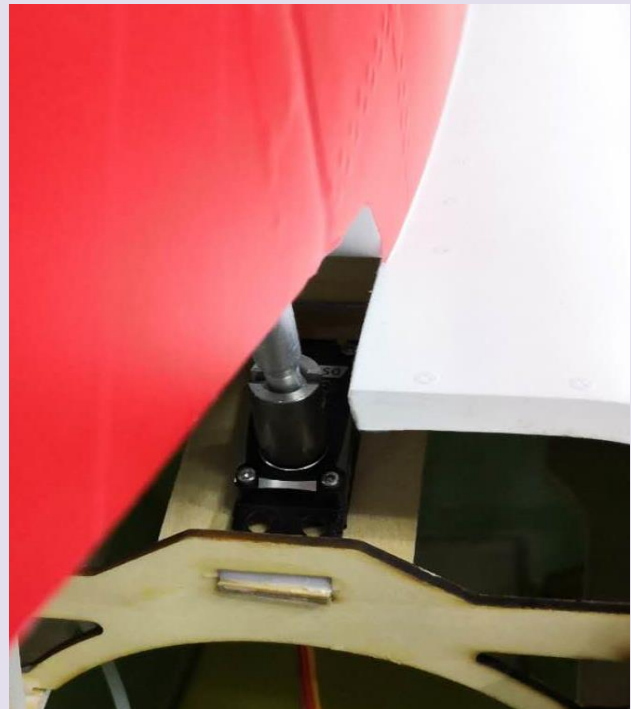
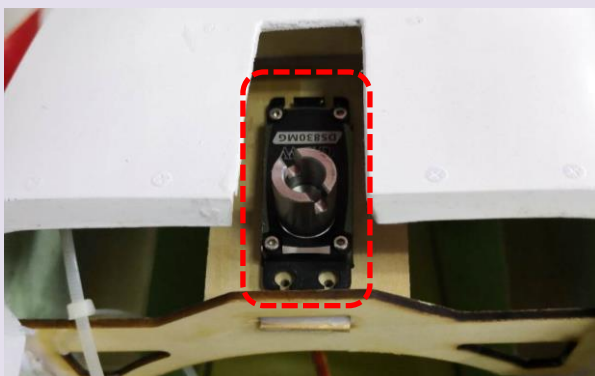


6. Fuselage,wing,engine,tail pipe,drop tank,missiles fixed

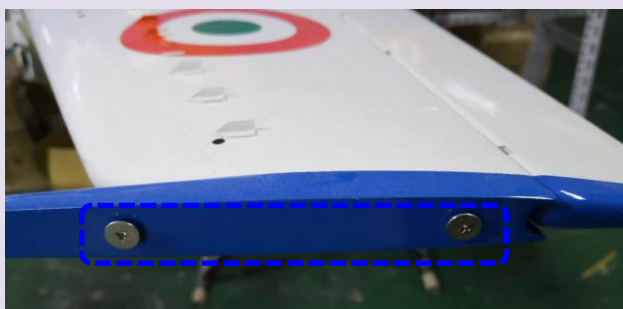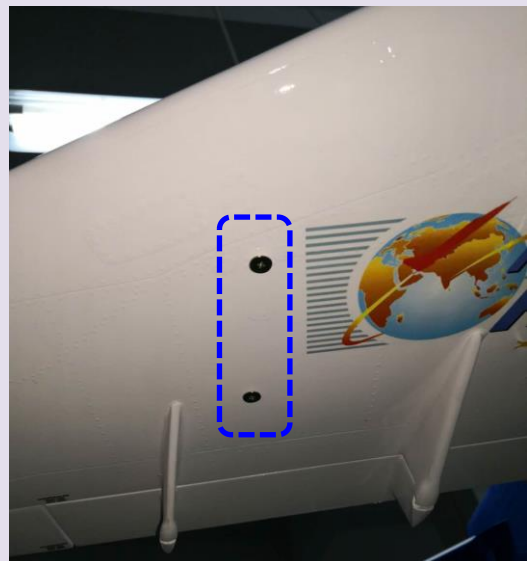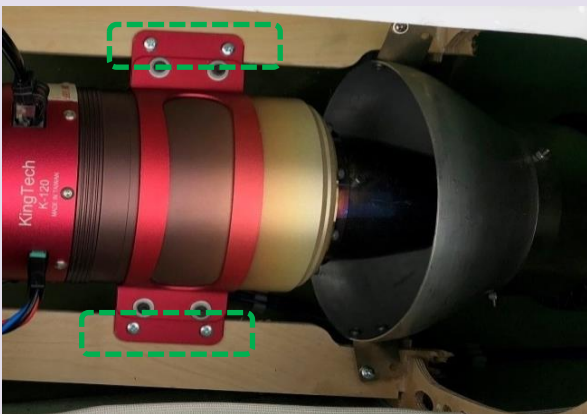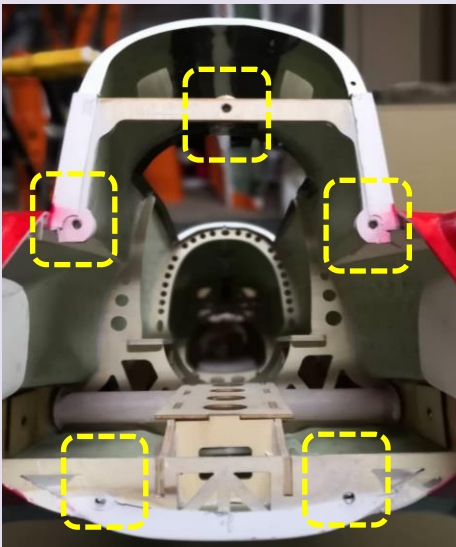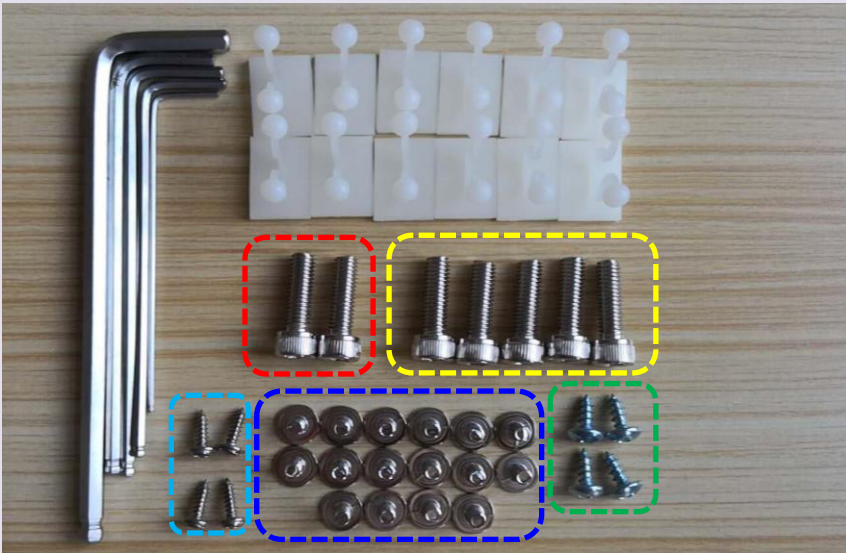

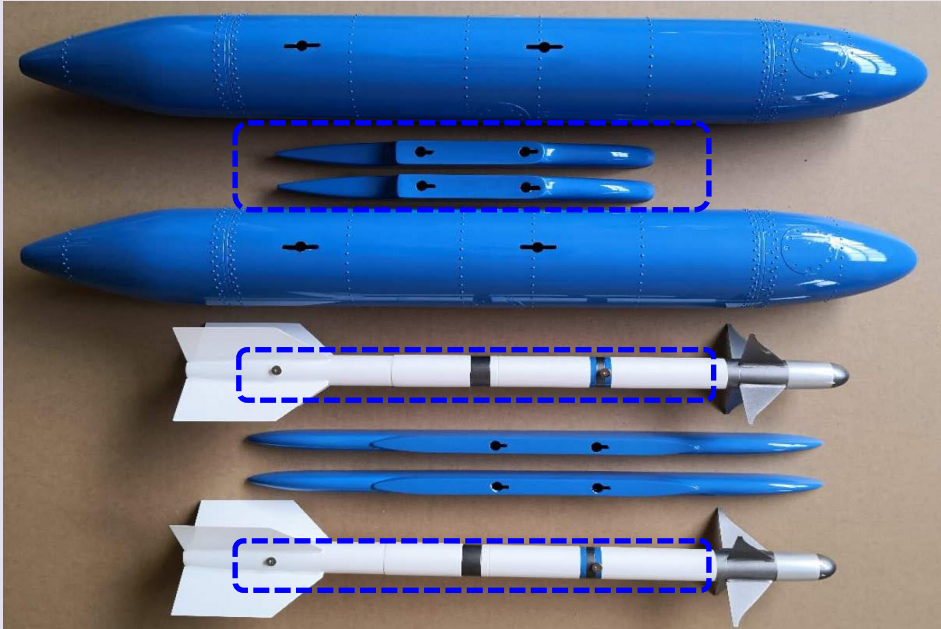


7、Wing knife mounting position

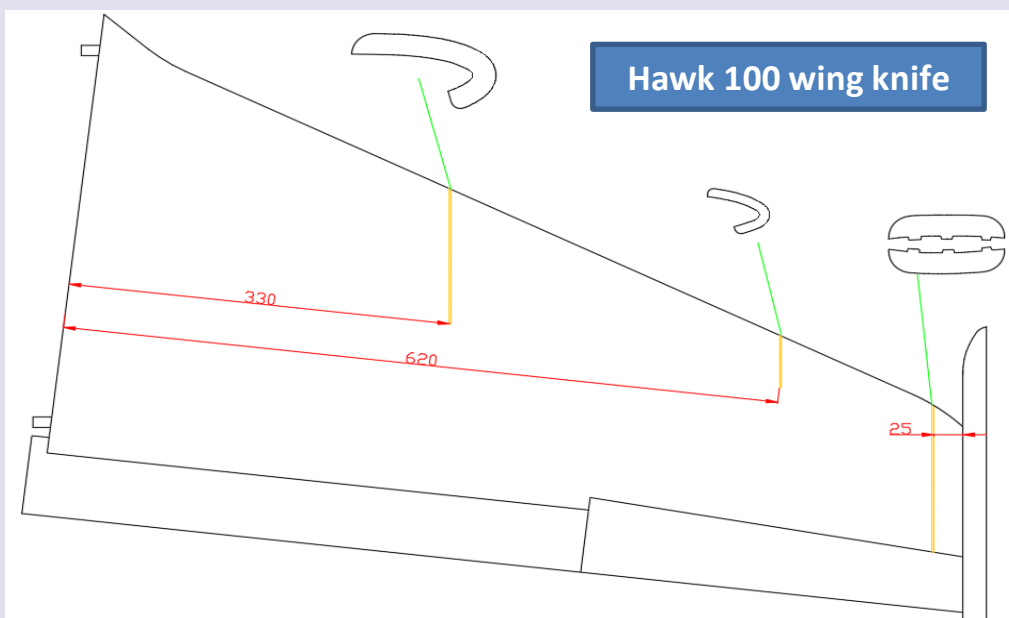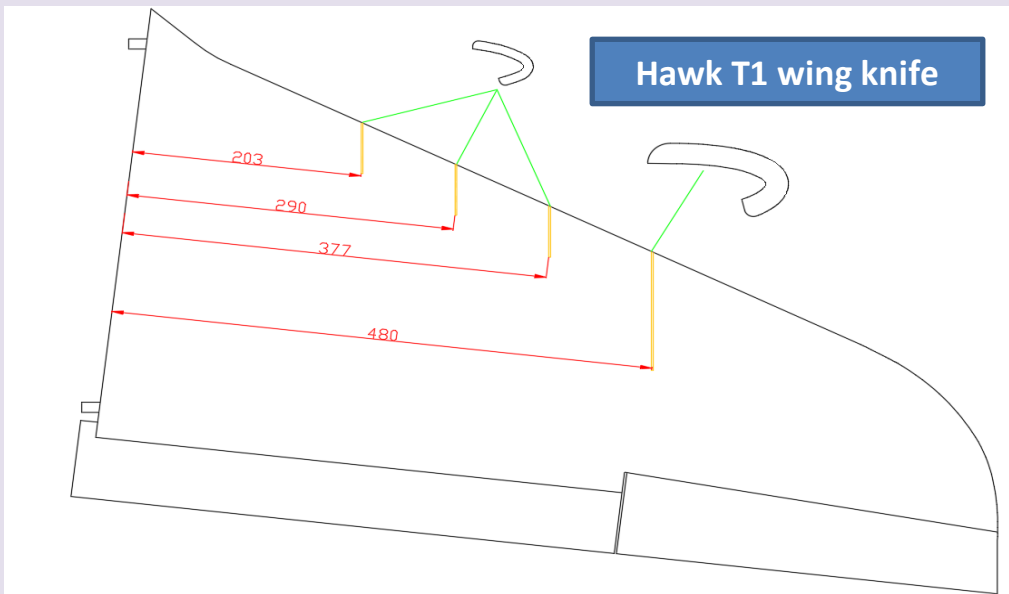

8、 Flight parameters

Center of gravity

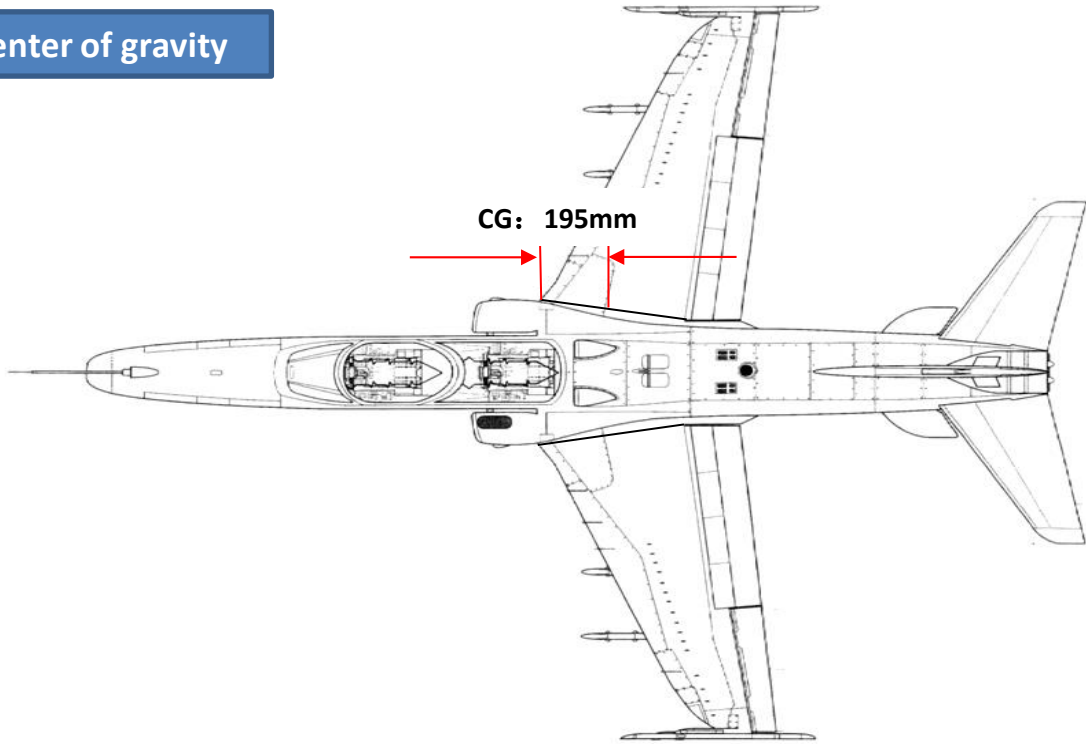

	Data
Aileron	$\pm 30\text{mm}$
Flap	20mm, 40mm
Elevator	$\pm 30\text{mm}$
Rudder	$\pm 30\text{mm}$
CG	195mm

