



GUN LOCK GL-20 INSTRUCTION MANUAL

READ BEFORE USE!

DO NOT USE THIS LOCK ON A LOADED GUN!

Attempts to use on a loaded gun may result in an accidental discharge. A loaded gun must always be regarded as dangerous. If lock becomes damaged in any way, do not attempt to use on your firearm - refer to guarantee information for replacement.

Before attempting to use, carefully read all of the following instructions along with the firearms safety tips.

IMPORTANT: We do not guarantee that this product will lock all firearms. It will block access to many guns when properly attached. Some lever action rifles, firearms without trigger guard surrounding the triggers, guns with extra light or extra wide triggers or guns with trigger shoes or extensions may not be able to be effectively locked with this gun lock.

NO GUN LOCK CAN OFFER COMPLETE PROTECTION AGAINST THE ACCIDENTAL OR INTENTIONAL MISUSE OF FIREARMS.

Keep guns unloaded and out of children's reach.
321LOCKS is not responsible for incidental or consequential damages.

INSTRUCTIONS FOR USE

Instructions for Use

1. To open the lock, set the dial to your combination (factory default code is 000)
2. When dial is set to correct combination, rotate the front of the lock 90 degrees. Pull apart the two sides of the gun lock. Make sure the gun is unloaded and not cocked.
3. Insert the front lock unit through the trigger behind trigger if possible.
4. Insert the rear lock unit with both front and back matching.
5. After determining the best locking position press the two together. Make sure the lock is tight and cannot be moved after it is installed. If it can be press tighter together until immovable.
6. Rotate lock back 90 degrees and scramble code to lock. Confirm the gun lock is locked.



How to Reset Combination

1. Open the lock by pulling apart the two sides of the lock and completely removing from the gun.
2. Push the lever into the down position.
3. With dials set to the current combination, use a pen point or similar narrow object, press the reset button on the left side of the lock toward the center of the lock.
4. Continue to apply pressure to the reset button, and set the dials to your personalized combination.
5. Release the reset button. New combination is now set..

Firearm Safety Tips

1. All firearms should always be assumed to be loaded and should be handled as such.
2. Keep firearms pointed in a safe direction at all times, even when unloaded.
3. Store firearms unloaded under lock and key.
4. Store ammunition separately under lock and key.
5. Never store firearms in a place accessible to children.
6. Teach children basic principles of firearm safety. When encountering a gun:
-DON'T TOUCH IT!
-TELL AN ADULT!

Laws concerning firearm ownership, storage, and handling vary among states and local jurisdictions. Learn and comply with your state and local laws and those of any jurisdiction to which you plan to transport or use firearms.

LIMITATION OF LIABILITY: This warranty is your sole remedy and 321LOCKS shall not be liable for any damages, whether direct, indirect, incidental, special, consequential, exemplary, or otherwise, including lost revenues and lost profits, arising out of any theory of recovery, including statutory, contract or tort. In no event will 321LOCKS entire liability exceed the purchase price of this product. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state and province to province.

