




www.JBWTIME.com

MULTI-FUNCTION 9232-1930

## DISPLAY AND BUTTONS

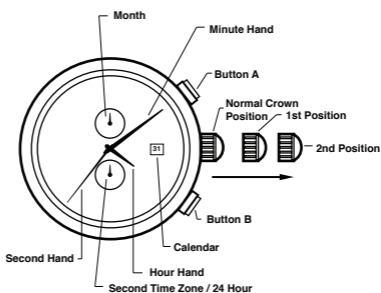

## SETTING THE TIME AND 24-HOUR

1. Pull the crown out to the 2nd position.
2. Turn the crown clockwise to set hour, minute and 24-hour hands to the desired time.
3. Push the crown back to the normal position.

## SET THE SECOND TIME ZONE

1. Set the crown at the normal position.
2. Press Button B step-by-step to advance the hand of the second time zone by one hour per step until the desired time is set.

## SETTING THE DATE

1. Pull the crown out to the 2nd position.
2. Turn the crown clockwise. The date will advance 1 day when the time reaches 00:00 midnight. Continue to turn the crown until the desired date is set.
3. Push the crown back to the normal position.

### Quick Correction of Date:

1. Pull the crown out to the 1st position.
2. Turn the crown clockwise step-by-step to the desired date.
3. Push the crown back to the normal position.

**ATTENTION:** Please do not set if between 21:00 and 00:30 midnight.

## SETTING THE DAY

1. Pull the crown out to the 2nd position.
2. Turn the crown clockwise to advance the day hand until the desired day is set. The day hand will advance one day when 04:00 in the morning is reached.
3. Push the crown back to the normal position.

## SETTING THE MONTH

1. Set the crown at the normal position.
2. Press Button A step-by-step to adjust the month to the desired one.

**ATTENTION:** Please do not use Quick Correction on 31th of each month.

## CAUTION

1. Do not touch internal components other than the batteries.
2. Keep your watch in a cool dry place.
3. Avoid abrasions as scratching may eventually affect the case and bracelet.

## BATTERY INSTRUCTIONS

1. Mixed usage of a different type of battery or use of new and used battery is not recommended.
2. Battery should be inserted with correct polarity.
3. Supply terminals should not be short-circuited.