


JBW

www.JBW.com

MIYOTA 6P24

DISPLAY AND BUTTONS

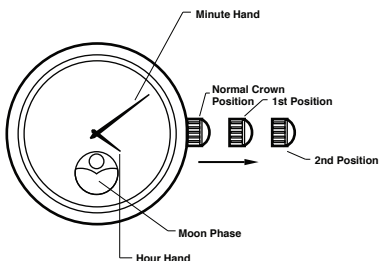





SETTING THE TIME

1. Pull the crown out to the 2nd position.
2. Turn the crown clockwise to set hour, minute to the desired time.
3. Push the crown back to the normal position.

ATTENTION: For watches with a screwdown crown, unscrew to set time and when finished screw back crown fully to avoid water entering the module. Crown covers should only be rotated 90 degrees clock-wise to access the crown.

READING AND SETTING THE AGE OF THE MOON

The age of the moon is determined by the period between each new moon. This period is approximately 29.5 days.

New Moon Moon's age : 0 Spring tide	First quarter moon Moon's age : 7 Neap tide	Full moon Moon's age : 15 Spring tide	Last quarter moon Moon's age : 22 Neap tide
			

** index of moon age

The moon dial represents the age of the moon : The actual shape of the moon during each phase is not represented. Use the moon dial indication as a guide to the age or phase of the moon.

SETTING AGE OF THE MOON

Check the newspaper or other source that lists the current age of the moon.

Referring to above **index, set the moon dial to the age(0,7,15 or 22) closest to that index position.

More accurate settings can be made at the time of the new moon (0) or full moon (15).

SETTING MOONPHASE

1. Pull the crown out to the 1st Click Position.
2. Turn the crown clock-wise to set the moon dial.
3. After the moon dial has been set, push the crown back to Normal Position.

CAUTION

1. Do not touch internal components other than the batteries.
2. Keep your watch in a cool dry place.
3. Avoid abrasions as scratching may eventually affect the case and bracelet.

BATTERY INSTRUCTIONS

1. Mixed usage of a different type of battery or use of new and used battery is not recommended.
2. Battery should be inserted with correct polarity.
3. Supply terminals should not be short-circuited.