


MULTI-FUNCTION 9231/1890

DISPLAY AND BUTTONS

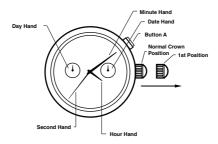

SETTING THE TIME

- . Pull the crown out to the 2nd position.
 - 2. Turn the crown clockwise to set the hour, minute to the desired time.
- *Note: Please make sure you have correctly set AM/PM before adjusting time.

3. Push the crown back to the normal position.

QUICK CORRECTION OF DATE

- 1. Pull the crown to 1st position.
- 2. Press the button A step-by-step advance the date until the desired date is set.

SETTING THE DATE

- 1. Pull the crown to 2nd position.
- 2. Turn the crown clockwise. Continue to turn the crown until the desired date is set.
- 3. Push the crown back to 1st position.

SETTING THE DAY

- 1. Pull the crown to 2nd position.
- 2. Turn the crown clockwise to advance the day hand until the desired day is set. The day hand will advance one day when 04:30 in the morning is reached.
- 3. Push the crown back to 1st position.

CAUTION

- 1. Do not touch internal components other than the batteries.
- 2. Keep your watch in a cool dry place.
- 3. Avoid abrasions as scratching may eventually affect the case and bracelet.

BATTERY INSTRUCTIONS

- 1. Mixed usage of a different type of battery or use of new and used battery is not recommended. 2. Battery should be inserted with correct polarity.
- 3. Supply terminals should not be short-circuited.