




www.JBWTIME.com

MULTI-FUNCTION 9238-1970

DISPLAY AND BUTTONS

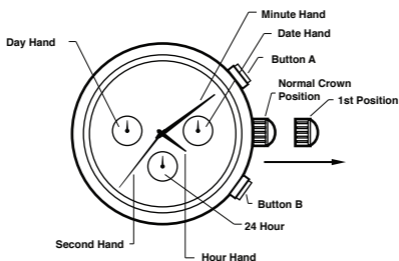

SETTING THE TIME, DAY, AND 24 HR

1. Pull the crown out to the 1st position.
2. Turn the crown clockwise to advance the day hand until the desired day is set.
3. Turn the crown clockwise to set the hour, minute, and 24-hour hands to the desired time.

*Note: Please make sure you have correctly set AM/PM before adjusting time.

4. Push the crown back to the normal position.

ATTENTION: For watches with a screwdown crown, unscrew to set time and when finished screw back crown fully to avoid water entering the module. Crown covers should only be rotated 90 degrees clock-wise to access the crown.

SETTING THE DATE

1. Push Button A to desired date.

SETTING THE 24 HR TIME ZONE

1. Push Button B to desired second time zone.

CAUTION

1. Do not touch internal components other than the batteries.
2. Keep your watch in a cool dry place.
3. Avoid abrasions as scratching may eventually affect the case and bracelet.

BATTERY INSTRUCTIONS

1. Mixed usage of a different type of battery or use of new and used battery is not recommended.
2. Battery should be inserted with correct polarity.
3. Supply terminals should not be short-circuited.