




www.JBW.com

MIYOTA - 6S11

DISPLAY AND BUTTONS

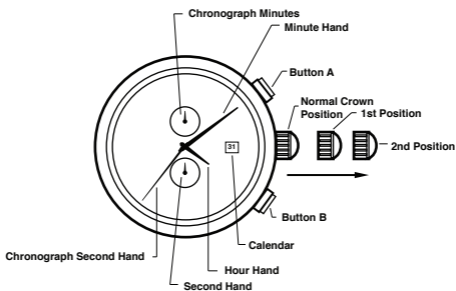

SETTING THE TIME

1. Pull the crown out to the 2nd position.
2. Turn the crown clockwise to set hour and minute hands.
3. Push the crown back to the normal position.

SETTING THE DATE

1. Pull the crown out to the 1st position.
2. Turn the crown clockwise to set the date.
*If the date is set between the hours of around 9PM and 1AM, the date may not change on the following day.
3. Push the crown back to the normal position.

USING THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/4 second united up to a maximum of 59min 59 sec.

1. Press button "A" to start the chronograph.
2. The chronograph can be started and stopped each time button "A" is pressed.
3. Press button "B" to reset the chronograph and chronograph minute and second hands return to their zero positions.

CHRONOGRAPH RESET

This procedure should be performed when the chronograph second hand does not return to the zero position.

1. Pull the crown out to the 2nd position.
2. Press the button "A" once to set the chronograph second hand to the zero position.
* The chronograph hand can be advanced rapidly by continuously pressing button "A"
3. Once the hands are set at zero position, reset the time and return the crown to its normal position.

CAUTION

1. Do not touch internal components other than the batteries.
2. Keep your watch in a cool dry place.
3. Avoid abrasions as scratching may eventually affect the case and bracelet.

BATTERY INSTRUCTIONS

1. Mixed usage of a different type of battery or use of new and used battery is not recommended.
2. Battery should be inserted with correct polarity.
3. Supply terminals should not be short-circuited.