




www.JBWTIME.com

## CHRONOGRAPH JS15

### DISPLAY AND BUTTONS

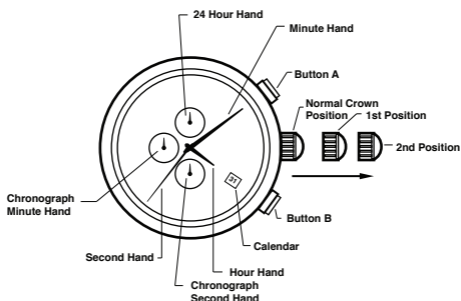

### SETTING THE TIME AND 24-HOUR

1. Pull the crown out to the 2nd position.
2. Turn the crown clockwise to set hour, minute and 24-hour hands to the desired time.
3. Push the crown back to the normal position.

### SET THE SECOND TIME ZONE

1. Set the crown at the normal position.
2. Press Button B step-by-step to advance the hand of the second time zone by one hour per step until the desired time is set.

### SETTING THE DATE

1. Pull the crown out to the 1st position.
2. Turn the crown clockwise. The date will advance 1 day when the time reaches 00:00 midnight. Continue to turn the crown until the desired date is set.
3. Push the crown back to the normal position.

#### Quick Correction of Date:

1. Pull the crown out to the 1st position.
2. Turn the crown clockwise step-by-step to the desired date.
3. Push the crown back to the normal position.

**ATTENTION:** Please do not set if between 21:00 and 00:30 midnight.

### CHRONOGRAPH FUNCTION

1. To start the chronograph press Button A.
  2. To stop the chronograph press Button A again.
  3. To reset the chronograph press Button B.
- \*Note: Chronograph runs a maximum of 1 hour.

### CHRONOGRAPH ALIGNMENT

1. Pull crown out to 2nd position and press Button A until chronograph second hand is at 12 o'clock.
2. Push crown back to normal position.

### CAUTION

1. Do not touch internal components other than the batteries.
2. Keep your watch in a cool dry place.
3. Avoid abrasions as scratching may eventually affect the case and bracelet.

### BATTERY INSTRUCTIONS

1. Mixed usage of a different type of battery or use of new and used battery is not recommended.
2. Battery should be inserted with correct polarity.
3. Supply terminals should not be short-circuited.