


JBW

www.JBW.com

RONDA 3540.D
CHRONOGRAPH

DISPLAY AND BUTTONS

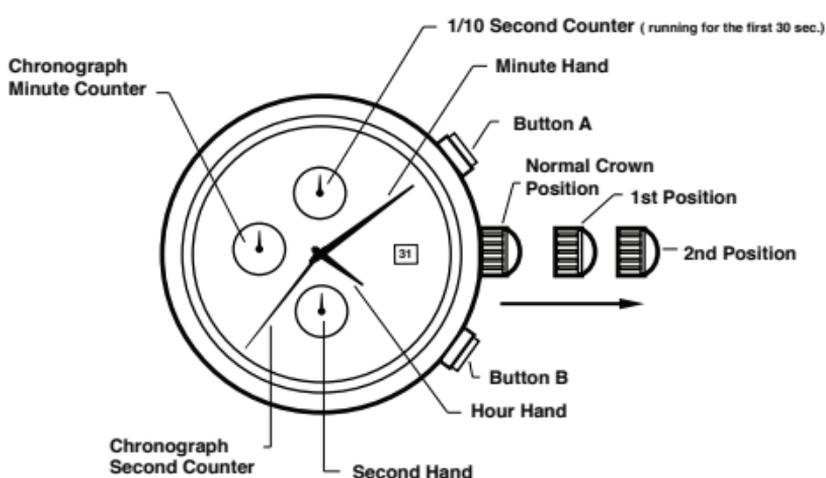

SETTING THE TIME

1. Pull the crown out to the 2nd position.
2. Turn the crown clockwise to set hours and minutes to desired time.
3. Push the crown back to the normal position.

ATTENTION: For watches with a screwdown crown, unscrew to set time and when finished screw back crown fully to avoid water entering the module. Crown covers should only be rotated 90 degrees clock-wise to access the crown.

SETTING THE DATE

1. Pull the crown out to the 1st position.
 2. Turn the crown counter clockwise to set the date.
 3. Push the crown back to the normal position.
- *Note: Do not adjust date between 9:00 PM and 1:00 AM. Date may not change correctly the following day.

CHRONOGRAPH FUNCTION

1. To start the chronograph press Button A.
 2. To stop the chronograph press Button A again.
 3. To reset the chronograph press Button B.
- *Note: Chronograph runs a maximum of 1 hour.

CHRONOGRAPH ALIGNMENT

1. Pull crown out to 2nd position and press Button A and Button B at the same time for 2 seconds.
2. Second counter hand rotates a circle minute, then corrective mode is activated.
3. Press Button A to adjust.
4. Push crown back to normal position.

CAUTION

1. Do not touch internal components other than the batteries.
2. Keep your watch in a cool dry place.
3. Avoid abrasions as scratching may eventually affect the case and bracelet.

BATTERY INSTRUCTIONS

1. Mixed usage of a different type of battery or use of new and used battery is not recommended.
2. Battery should be inserted with correct polarity.
3. Supply terminals should not be short-circuited.