


# INSTRUCTIONS STANDARD 1911

**WARNINGS:** Use **ONLY** on Standard 1911 Pistols with **BUSHING**. Before proceeding with installation make sure the pistol is unloaded and follow the operating and safety instructions provided by the pistol manufacturer. Remove the Factory Guide Rod according to the pistol manufacturers instructions. **ALWAYS** wear eye protection during installation or removal of this item.

## DPM System's 1911 Components List

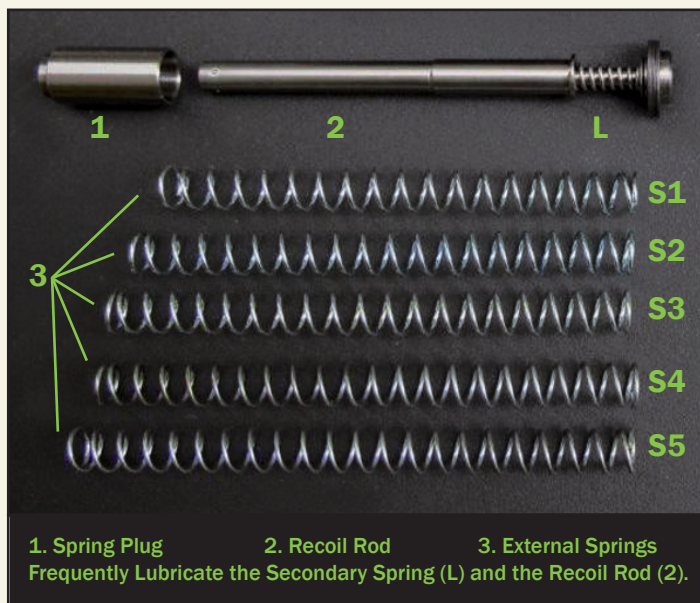

PLEASE READ CAREFULLY THE INSTALLATION INSTRUCTIONS

# INSTALLATION INSTRUCTIONS

1. Remove the Factory Guide Rod According to the Pistol Manufacturers Instructions.
2. Insert the DPM Recoil Rod in the Pistol Slide.
3. Assemble the Slide on the Frame.
4. Place One External Spring on the DPM Recoil Rod.
5. Place the DPM Spring Plug and Use the Bushing Tool to Turn and Lock the Bushing According the Pistol Manufacturers Instructions.
6. Rack the gun a few times to check for any unseen interferences and to ensure that the DPM Recoil Reduction System operates unrestricted.

**Table of Spring Forces Combination  
The Springs are Numbered by Length**

Springs	Slide on Closed Battery Position		Force full Rearward Slide Position	
	(lbs)	(Kg)	(lbs)	(Kg)
S-1	6.20	2.8	25	11.5
S-2	6.80	3.1	25	11.5
S-3	7.50	3.4	25	11.5
S-4	8.20	3.7	25	11.5
S-5	8.80	4.0	25	11.5

**Suggestion for All Calibres.  
Start with the Spring S-4  
Use the Spring S-5 with Heavy +P Loads**

DPM Systems Technologies, its Affiliates, Distributors or Resellers are not Responsible for Damage or Injuries Sustained During the Improper or Proper Use of this Product.

For any Questions about the Installation or Operating instructions:

[service@dpmstystems.com](mailto:service@dpmstystems.com)  
[www.dpmstystems.com/1911](http://www.dpmstystems.com/1911)