


INSTALLATION INSTRUCTIONS CZ TS AND TS ORANGE 9mm WITH USER ADJUSTABILITY


1. Remove the factory spring plug and carefully insert the DPM Spring plug with one spacer. Insert one External spring on the Recoil Rod and place it into the slide (Fig. 1).




2. Continue pushing the Recoil Rod from the back side (Fig. 2).

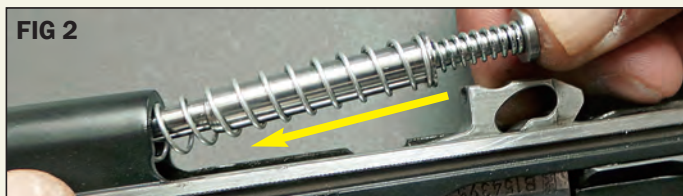

3. Finally push the Recoil Rod, until the front side passes through the slide hole and press down to lock the back side of the rod on the barrel link (Fig. 3).

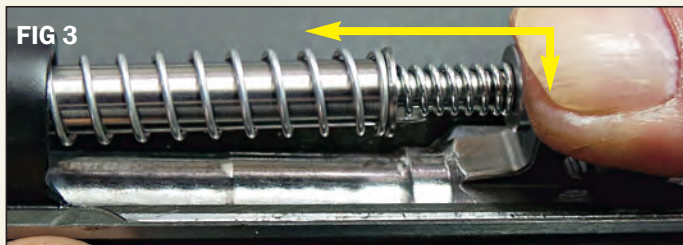

4. To remove the Recoil Rod, push it back and up, to be ready for the next step (Fig. 4).

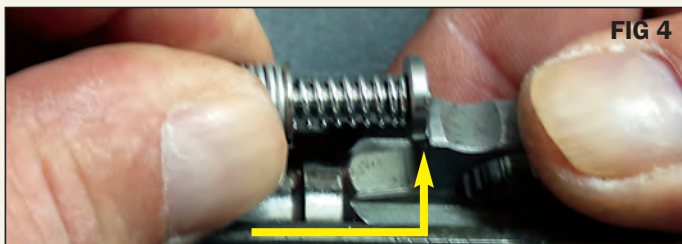


5. Push simultaneously back and forth to compress the Recoil Rod and pull it up to release it from the barrel link (Fig. 5).



ADJUSTABILITY INSTRUCTIONS

You can adjust the total force by changing the spacers

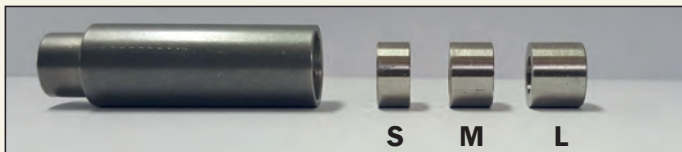


SPACER FORCE (slide full open position)

S=Short spacer 8kg-15lbs

M=Med spacer 9.5kg-19lbs

L=Long spacer 11kg-23lbs


ATTENTION: Use **ONLY** one spacer inside the DPM Spring Plug (Fig.6)

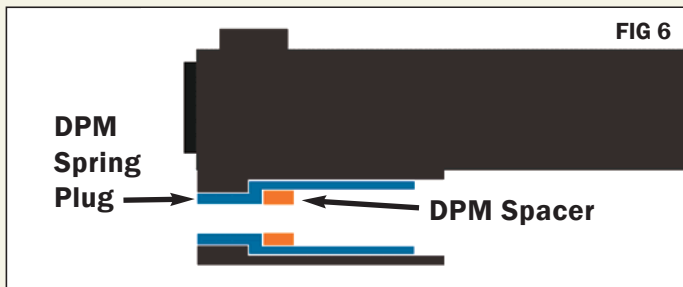

The DPM recoil system includes four external springs. The two long springs have wire diameter 0.9mm (soft slide function). The two short springs have wire diameter 1.0 mm (hard slide function) (Fig. 7).

SPRING FORCE (Slide on the battery)

S1	21.5 coils	2.6kg-5.73lbs
S2	23.5 coils	3.0kg-6.61lbs
S3	25.5 coils	3.3kg-7.3lbs
S4	27 coils	3.8kg-8.4lbs

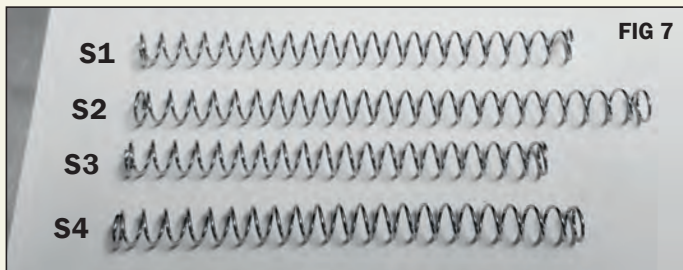

Contact us

www.dpmsystems.com | info@dpmsystems.com

DPM FAMILY FOR ALL THE CZ PISTOLS

