

TIPS FOR USING YOUR WEATHERPOD®

Using Your Pod for the First Time. A Little Practice Helps.

- Remove the Pod tent from its carry bag. Hold the tent with both hands extended at arms length.
- Release one hand and let the tent untwist until it pops open.
- Unzip one or more panels then unfold side panels. Pull out panels to pop tent fully open.
- Sit the tent in a vertical position (standing it up).
- Grab the tent by both front sides. Shake vigorously for 3 seconds.

Congrats! You've mastered opening your WeatherPod®. Now you're ready to enjoy it!







Folding Your Pod is as Easy as 1-2-3.

- 1. Place the Pod on its back so it's laying on the ground with the front facing up. Fold one side flat, then the other. Both panels should lay completely flat. Make sure the wires are also flat (not twisted). Step on wires to flatten.
- 2. Tuck in roof and floor panels. Stand the Pod up so the back of the Pod is facing you. Curling your Pod correctly is key to folding. Firmly curl the Pod forward halfway down. Continue curling the Pod (roll it under) until the top wire is facing toward your shins.
- **3.** Once the Pod is fully curled under, grab the right side of the Pod and push it toward the middle. Grab the left side and push it on top to shape the Pod into a flat circle. Place it in its carry case.

It may take one ot two tries to get the hang of it. Our Folding Videos can help as well! Watch now.









We love to hear from our customers!

Like us on Facebook for giveaways, contests or to share your story!









Care Instructions:

A soft brush and warm soapy water can be used to clean your WeatherPod®. Dry thoroughly before storing in its carry case.

A wet Under the Weather® Pod can be temporarily stored in the case. If storing for more than a few hours, open the Under the Weather® Pod and let it dry completely before placing it back in its carry case.

Folding improperly can permanently damage the wires. Be sure to visit UTWPods.com to watch folding videos and other tips and tricks for taking care of your Pod.

Use extreme caution using your Under the Weather® Pod on asphalt or concrete surfaces.

Friction from dragging may cause tears and permanent damage on the Under the Weather® Pod flooring.

Health & Safety Measures:

While our Pods can provide a temporary barrier and some peace of mind, during uncertain times we do advise taking additional steps to sanitize your Pod, inside and out, after each use and avoid risk of viral infections.

- While you're out and about in your Pod, continue to practice social distancing.
- Keep Pod zipped whenever possible. Wear face covers and gloves.
- Clean and disinfect all Pod surfaces, inside and out, immediately after each use.
- Apply disinfectants that contain alcohol, bleach or hydrogen peroxide. See CDC.gov guidelines for details.
- Avoid touching your face and wash your hands, or use sanitizer, immediately.

Warnings:

- Do not leave children unattended in the Under the Weather® Pod.
- Do not use matches, candles, heaters or allow open flames of any kind in or near the Under the Weather® Pod.
- Do not smoke in or near the Under the Weather® Pod.

Genuine Under the Weather® Pods are sold only on our website, Amazon and the following retail locations: DICK's Sporting Goods, Field & Stream, SCHEELS and Walmart. Under the Weather® Pods purchased from unauthorized resellers are not covered under our return or warranty policies. To ensure your purchase is from an authorized Amazon seller, look for either "Sold by Under the Weather" and Fulfilled by Amazon" or "Ships from and sold by Amazon.com" below the Add to Cart and Buy Now buttons.