
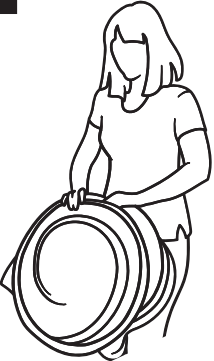
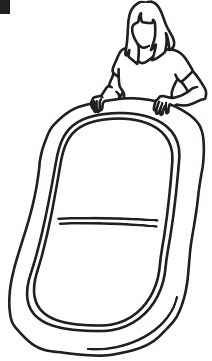
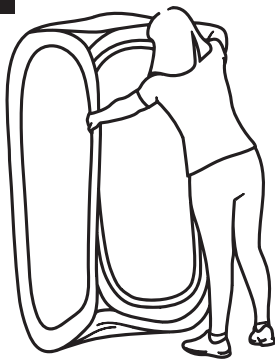
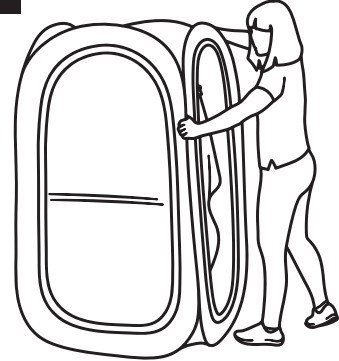


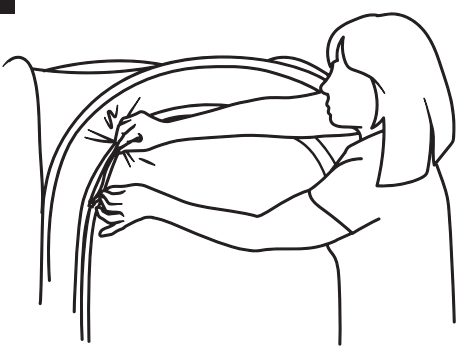

Using Your Weather Pod for the First Time.

<p>1</p>  <p>Remove the Pod from its case. Hold the Pod with both hands extended at arm's length.</p>	<p>2</p>  <p>Release one hand and let the Pod untwist so it pops open and flat.</p>	<p>3</p>  <p>Swing the two flat panels open. Grab the wire frame in the middle and pull it towards you to pop the tent open.</p>	<p>4</p>  <p>Grab the standing Pod by both front sides and shake vigorously for 3 seconds.</p>	<p>5</p>  <p>Unzip one or more panels to air out the Pod. NOTE: When using the zippers, pinch the clear plastic on each side together, especially around corners, to make zipping and unzipping easier and smoother.</p>
--	--	--	---	---

Now you can enjoy your Pod. **See reverse for folding instructions.** →

We love to hear from our customers! Like us on Facebook for giveaways, contests or to share your story.



CARE INSTRUCTIONS:

Use a soft brush and warm soapy water to clean your Weather Pod. Dry thoroughly before storing in its case.

A wet Pod can be temporarily stored in its case. If storing for more than a few hours, open the Pod and let it dry completely before returning it to its case.

Improper folding can permanently damage the wires. Scan QR code on reverse for folding videos and other Pod tips, or visit ShopWeatherPod.com.

Friction from dragging your Weather Pod on asphalt or concrete surfaces may cause tears and permanent damage that are not covered under the warranty. We recommend using a layer of padding between the Pod floor and rough surfaces.


WARNINGS

- Do not leave children or pets unattended in a Weather Pod.
- Do not use matches, candles, heaters or allow open flames of any kind in or near the Weather Pod.
- Do not smoke in or near the Weather Pod.



Quick Tips for Folding Your Weather Pod.

1

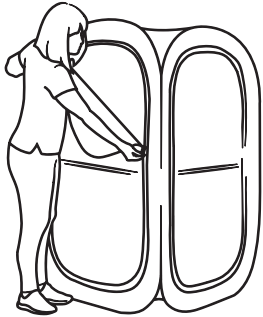

Unzip one corner of BOTH side panels. Zip the front panel fully closed.

NOTE: Pinch the plastic around the corner zippers for easier zipping and unzipping.


2



Lay the Pod on the ground with its front facing up.

Grab the top wire frame of one of the side panels. Push the wire frame in and down toward the opposite corner to make two flat panels.


3

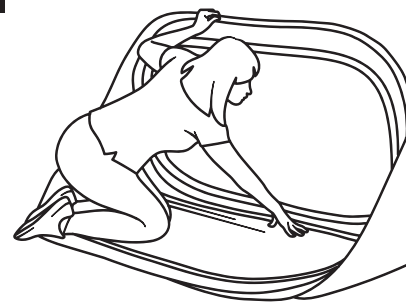

Make sure the wires lay flat (not twisted).

Flip any twisted wire before folding the other panel down so the Pod is completely flat.


4

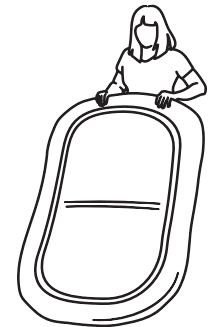

Tuck in the roof and floor.


Stand the Pod up so its back faces you and grab the top with both hands.

5

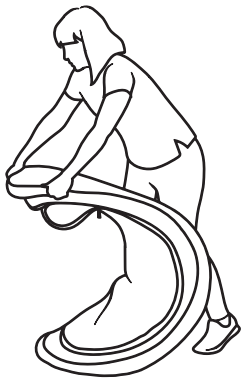

Curling your Pod correctly is key. Firmly curl the top of the Pod forward and halfway down.

6

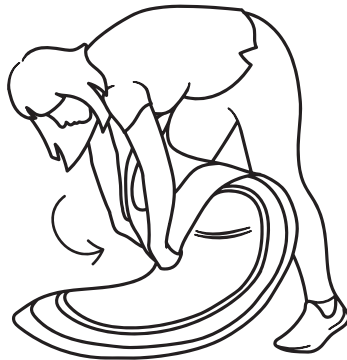


Curl your wrists firmly to roll fold the Pod. Continue curling the top inward until the top wire is facing toward your shins.

7



Once the Pod is fully curled under, grab the side of the Pod with one hand and push it down toward the center to create a "figure 8".

8

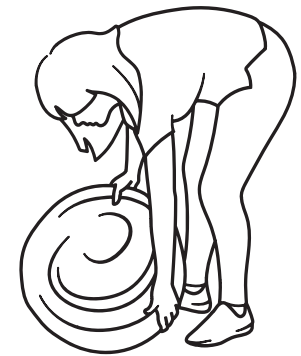

Grab the other side and push it down to flatten the Pod into a compact circle. Place the folded Pod into its case.

Genuine WeatherPod® tents are sold only on our website, Amazon and the following retail locations: Academy Sports, DICK'S Sporting Goods, Dunham's Sports, Field & Stream, SCHEELS, and Walmart. WeatherPod® tents purchased from unauthorized resellers are not covered under our return or warranty policies. To ensure your purchase is from an authorized Amazon seller, look for either "Sold by Under the Weather® and Fulfilled by Amazon" or "Ships from and sold by Amazon.com" below the Add to Cart and Buy Now buttons.

Need More Help? Scan the QR Code
to watch Folding Videos, or visit
ShopWeatherPod.com

