




## Crystal Quest® Rover Reverse Osmosis Filtration System INSTALLATION & OPERATION GUIDE

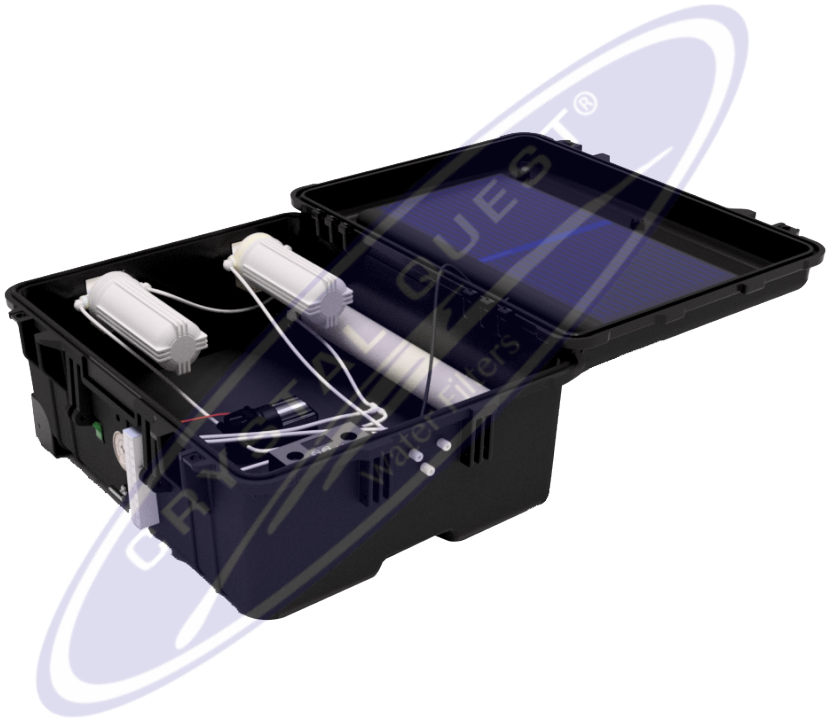

ONLINE WARRANTY INFORMATION  
[CrystalQuest.com/warranty.html](http://CrystalQuest.com/warranty.html)

Copyright 2021  
Crystal Quest®  
All rights reserved  
MADE IN THE USA





## INTRODUCTION

Your ROVER reverse osmosis system is a durable piece of equipment which, with proper care, will last for many years.

This User's Manual outlines installation, operating, maintenance, and troubleshooting details vital to the sustained performance of your system. The test results which are included with this User's Manual indicate your system's permeate (product) and rejection test results.

If your system is altered at the site of operation or if the feed water conditions change, please contact your local dealer or distributor to determine the proper recovery for your application.

**NOTE:** In order to maintain warranty, an operating log must be maintained. Copies must be sent to your local dealer or distributor for review.

**NOTE:** Prior to operating or servicing the Rover reverse osmosis system, this User's Manual must be read and fully understood. Keep it and other associated information for future reference and for new operators or qualified personnel near the system.

## SAFETY

The Safety section of this User's Manual outlines the various safety headings used throughout this manual's text and are enhanced and defined below:

**NOTE:** Indicates statements that provide further information and clarification.

**CAUTION:** Indicates statements that are used to identify conditions or practices that could result in equipment or other property damage.

**WARNING:** Indicates statements that are used to identify conditions or practices that could result in injury or loss of life.

**FAILURE TO FOLLOW WARNINGS COULD RESULT IN SERIOUS INJURY OR EVEN DEATH.**



## LABELING

Do not under any circumstance; remove any Caution, Warning, or other descriptive labels from the system.

## SYSTEM SPECIFICATIONS

|                      |                      |
|----------------------|----------------------|
| Model                | Rover                |
| Gallons Per Day      | 200                  |
| Dimensions (approx.) | 35" x 22.5" x 13.75" |
| Weight (approx.)     | 55 lbs.              |
| Element Size (in.)   | 2521 TFC HF1         |
| Elements (qty.)      | 1                    |
| Pressure             | 150 psi              |
| Motor & pump         | Diaphragm            |
| Voltage              | 12/24 DC             |
| Hertz                | 60                   |
| Feed Connection      | 3/8"                 |
| Product Connection   | 3/8"                 |
| Waste Connection     | 3/8"                 |
| Minimum Feed (gpm)   | 0                    |
| Recovery*            | 33%-50%              |

\* Recovery ratio may vary between 33% - 50% and up to 75% if system projections have been provided.



## FEED WATER & OPERATION SPECIFICATIONS

Nothing has a greater effect on a reverse osmosis system than the feed water quality.

**NOTE:** It is very important to meet the minimum feed water requirements. Failure to do so will cause the membranes to foul and void the warranty.

| FEED WATER SPECIFICATION |            |           |                       |
|--------------------------|------------|-----------|-----------------------|
| Free Chlorine            | <0 ppm     | Manganese | <0.05 ppm             |
| Total Dissolved Solids   | <0 ppm     | Organics  | <1 ppm                |
| Turbidity (SDI)          | <5         | Silica    | <1 ppm                |
| pH                       | 3-11       | Iron      | <2 ppm in Concentrate |
| Temperature              | 40°F-105°F | Hardness  | <15gpg                |

The manufacturer has provided you with the suggested operation specifications. These specifications should be met to have the reverse osmosis system perform optimally. All operation specifications are based on the test conditions listed below

## REJECTION, RECOVERY, & FLOW RATE

Thunder reverse osmosis systems are designed to produce purified water at the capacities indicated by the suffix in the system's name under the conditions listed above. For example, the Thunder 300 produces 300 gallons per day of purified water @ 77°F.

The amount of total dissolved solids (TDS) rejected by the membrane is expressed as a percentage. For example, a 99% rejection rate means that 99% of total dissolved solids do not pass through the membrane. To calculate the % rejection, use the following formula:

$$\% \text{ Rejection} = [( \text{Feed TDS} - \text{Product TDS} ) / \text{Feed TDS}] \times 100$$

**NOTE:** All TDS figures must be expressed in the same units, usually parts per million (ppm) or milligrams per liter (mg/l).

Thunder commercial reverse osmosis systems are designed to reject up to 98.5% NaCl, unless computer projections have been provided and state a different rejection percentage.

The amount of purified water recovered for use is expressed as a percentage. To calculate % recovery, use the following formula:

$$\% \text{ Recovery} = ( \text{Product Water Flow Rate} / \text{Feed Water Flow Rate} ) \times 100$$

**NOTE:** All flow rates must be expressed in the same units, usually gallons per minute (gpm).



## SYSTEM REQUIREMENTS & OPERATION GUIDELINES

### Plumbing

The membranes and pressure pumps used on Rover systems require a continuous flow of water, which does not exceed 105°F.

The piping for the feed line is 3/8" This is connected to the filter housing.

The piping used for the concentrate line is 3/8" tube and should be run to an open drain in a free and unrestricted manner (no back pressure)

The piping used for the permeate line is 3/8" tube and can be run to the holding tank or directly to the point-of-use application with 3/8" tubing, or another FDA approved material This is so the material being used does not dissolve into the permeate water. Be certain that all of the components of the feed water are soluble at the concentrations attained in the system. A system operating at 50% recovery, concentrates all impurities by two times the amount.

**CAUTION:** Any restrictions or blockage in the drain line can cause back pressure, which will increase the system's operating pressure. This can result in damage to the system's membranes and components.

### Electrical

The motors used on Rover systems are pump and motor combinations. Please ensure that the electrical circuit supplying the system is compatible with the requirements of the specific Rover model you are installing.

**NOTE:** We recommend that a licensed electrician wire your system in accordance with local and national electrical codes (NEC).

**WARNING:** To reduce the risk of electrical shock, the incoming power supply must include a protective earth ground.

### Pre-Filtration

These Rover systems are supplied with a 2.5" x 10" 10 Micron sediment filter. The 2.5" x 10" 5 Micron carbon block filter removes particles over 5 microns. Change the cartridge's at least every 12 to 18 months or whenever needed.

Ask your local dealer or distributor about Water Softeners and/or Filtration systems.

**NOTE:** The system must be operated on filtered water only. Do not attempt to clean used filter cartridges.



## PUMP

The pumps used on Rover systems are pump and motor combinations. They are Diaphragm pumps. Follow these guidelines to ensure proper operation of the pump:

- Operating the pump without sufficient feed water will damage the pump.
- ALWAYS feed the pump with filtered water. The pump is susceptible to damage from sediment and debris.
- If any damage occurs to your system's pump a re-build kit may be available. Contact your local dealer or distributor and inform them of your system's model and pump size

## MOUNTING

Membrane Elements for the Rover reverse osmosis systems come pre-loaded with Thin Film Composite (TFC) High Flow Low Energy membranes, unless otherwise specified. General membrane element performance characteristics are listed below:

|                     |         |                    |         |
|---------------------|---------|--------------------|---------|
| Operating Pressure  | 150 psi | Maximum Pressure   | 400 psi |
| Nominal % Rejection | 98.5%   | Chlorine Tolerance | <1 ppm  |
| Maximum Temperature | 110°F   | Turbidity          | 1 NTU   |
| Silt Density Index  | <5 SDI  | pH Range           | 3-11    |



## INSTALLATION

Rover reverse osmosis systems must be placed on an even floor, so that the system will not vibrate or move. If this occurs, place the system on a rubber mat to reduce the vibrations and movement.

Carefully inspect your system before start-up. Check that all plumbing and electrical connections are not loose or have not come undone during shipment. A User's Manual, Test Results, and Filter Housing Wrench will accompany your Rover reverse osmosis system.

### Initial Start-Up

1. Fully open concentrate valve (Counter Clockwise)
2. Fully close recycle valve (Clockwise) (If Applicable)
3. Turn RO system on and adjust bypass valve, concentrate (waste) valve #8 and recycle valve (If Applicable) to designed flow and pressure.
4. Inspect for leaks and after one hour shut down system. Re-direct permeate back to tank or POU and then turn system back on.
5. Record readings daily for a week and after a week record readings once a week.

### Start-Up

1. Locate the 3/8" bulkhead fitting with the inlet label.
2. Attach the inlet tubing to the 3/8" bulkhead fitting labeled inlet. Always maintain a smooth and sufficient flow of feed water during operation.
3. Locate the 3/8" fitting labeled permeate outlet.
4. Attach the permeate tubing to the permeate outlet. Make sure that the permeate water can flow freely and that there is no back pressure. Back pressure can cause damage to the membrane elements.

**CAUTION:** The plumbing in the permeate line can contaminate the high quality water produced by the system; ensure that the components are compatible with the application. The pH of the reverse osmosis permeate water will normally be 1-2 points lower than the feed water pH. A low pH can be very aggressive to some plumbing materials such as copper piping.

5. Locate the concentrate outlet on the drain side of the concentrate control valve.
6. Attach the drain line to the concentrate outlet. Water must be allowed to run freely, without any restrictions or blockage in the drain line. Make sure that no back pressure exists on the



## INSTALLATION CONTINUED

8. Rover systems can be controlled with a liquid level switch in a storage tank. The liquid level switch turns the system on when the water level in the tank drops, and off when the tank is full. If your reverse osmosis system is equipped with an electrical control box, the level control is connected to the level control connections in the control box. The level control connections are dry contacts and never apply power to these connections. Liquid level switches can be obtained by your local dealer or distributor. If a liquid level switch is to be used, install it at this time.

9. Disconnect the permeate line to the storage tank or point-of-use application and direct it to the drain. Flush the system for approximately 15 minutes with the feed water by fully opening the concentrate valve counter-clockwise. This will assist in removing any impurities or preservative within the system. At this time check for any wetted parts which may have been damaged during shipment. After 15 minutes shut down the feed water.

10. Turn on the power to the system.

11. Follow any specified system projections supplied.

12. Make sure that no back pressure exists on the permeate line.

13. Locate the concentrate control valve and the concentrate pressure gauge.

14. Turn the concentrate control valve until the designated recovery is acquired. The concentrate pressure will increase as the concentrate control valve is closed. The exact operating pressure may vary depending on the temperature and TDS of your feed water. It may be necessary to readjust the system if there is a major change in feed water temperature and/or TDS.

15. Turn the pump bypass valve until the correct pump pressure is achieved.

**WARNING:** Never exceed the maximum pressure rating of your pressure vessels.

## OPERATION & MAINTENANCE

The reverse osmosis process causes the concentration of impurities. The impurities may precipitate (come out of solution) when their concentration reaches saturation levels.

**NOTE:** Precipitation can scale or foul membranes and must be prevented.

Check your feed water chemistry and pre-treat the water and/or reduce the system's recovery as required. If necessary, consult with your local dealer or distributor.





## MEMBRANE REMOVAL & REPLACEMENT

Changing membranes in pressure vessels is an easy process if you have the proper information and tools at hand. Please refer to the following instructions when removing and replacing membrane elements:

1. Remove the end caps from the top of the membrane housings. This is done by removing the clamps of the stainless steel housing or unscrewing the bolts of the housing, which holds on the clamp.
2. Remove the membrane bag containing the membrane element from the shipping box.
3. Cut the bag open as close as possible to the seal at the end of the bag, so the bag may be re used if necessary.
4. Remove the membrane element from the bag and remove the black core tube protectors from each end of the membrane.
5. Remove parts from the parts container (if included) and inspect. Make sure that all parts are clean and free from dirt. Examine the brine seal, and permeate tube for nicks or cuts. Replace the O-rings or brine seal if damaged.
6. Flow directions should be observed for installation of each element in each housing.

As time progresses, the efficiency of the membrane will be reduced. In general, the salt rejection does not change significantly until two or three years after installation when operated on properly pretreated feed water. The permeate flow rate will begin to decline slightly after one year of operation, but can be extended with diligent flushing and cleaning of the system. A high pH and/or precipitation of hardness can cause premature loss in rejection of membrane elements in the system.



## MEMBRANE REMOVAL & REPLACEMENT CONTINUED

### To replace the membrane elements:

1. Remove all of the membrane element(s) from the membrane element housings from the top of the housing. Heavy-duty pliers and channel lock pliers may be necessary to pull the old membrane element out of the membrane element housing.
2. Install the brine seal side of the membrane elements first. When the housings have a direction of flow from bottom to top, the brine seal should be located on the end of the membrane element at the bottom of the housing.
3. Lubricate the brine seal with a food grade lubricant.
4. At a slight angle insert membrane while slightly rotating element being careful not to tear or flip the brine seal. Re-lube the brine seal if necessary.
5. With a smooth and constant motion, push the membrane element into the housing so that the brine seal enters the housing without coming out of the brine seal groove. A slow twisting motion should be used to insert the membrane element, to ensure that the brine seal stays in place.
6. Re-install the end caps by gently twisting the end cap while pushing it onto the housing. Ensure that you do not pinch or fatigue any O-rings while pushing the end plug on. Push the end plug on until the outer diameter of the plug is flush with the outer diameter of the membrane housing.
7. Insert nylon snap ring until fully seated. Snap ring must be able to be spun in place if fully seated. If you are using a stainless steel housing, install the clamps halves, and tighten bolts until the clamp halves meet.
8. Reconnect any fittings that may have been disconnected when the membrane element housings were disassembled.
9. To Start-Up the system, refer to Start-Up.

**CAUTION:** New or factory cleaned membranes are shipped in a preservative solution. New or cleaned membranes must be flushed for at least 1 hour to remove the preservative from the membrane. Discard all of the permeate and concentrate, which is produced during the flush.



## MEMBRANE CLEANING

Periodic cleaning of the membrane(s) can improve system performance. In normal operation, mineral scale, biological matter, colloidal particles, and organic substances can foul the membranes.

**WARNING:** Cleaning chemicals are dangerous and can cause injury and damage to the environment. Read and comply with all safety and disposal precautions listed on the Safety Data Sheets (SDS's). It is the user's responsibility to comply with all applicable federal, state, and local regulations.

### Organic Foulant Cleaning

The following cleaning procedures are designed specifically for membranes that have been fouled with organic matter. Review the general cleaning instructions for information that is common to all types of cleaning such as suggested equipment, pH and temperature limits, and recommended flow rates.

### Safety Precautions

1. When using any chemical indicated here in subsequent sections, follow accepted safety practices. Consult the chemical manufacturer for detailed information about safety, handling and disposal.
2. When preparing cleaning solutions, ensure that all chemicals are dissolved and well mixed before circulating the solutions through the membrane elements.
3. It is recommended the membrane elements be flushed with good-quality chlorine-free water after cleaning. Permeate water is recommended; but a de-chlorinated potable supply or pre-filtered feed water may be used, provided that there are no corrosion problems in the piping system. Operate initially at reduced flow and pressure, to flush the bulk of the cleaning solution from the elements before resuming normal operating pressures and flows. Despite this precaution, cleaning chemicals will be present on the permeate side following cleaning. Therefore, permeate must be diverted to drain for at least 10 minutes or until the water is clear when starting up after cleaning.
4. During recirculation of cleaning solutions, the temperatures must not exceed 50°C at pH 2-10, 35°C at pH 1 -11, and 30°C at pH 1 -12.
5. For membrane elements greater than six inches in diameter, the flow direction during cleaning must be the same as during normal operation to prevent element telescoping, because the housing thrust ring is installed only on the reject end of the housing. This is also recommended for smaller elements.



## MEMBRANE CLEANING CONTINUED

### Cleaning Procedures

There are seven steps in cleaning membrane elements with organics.

1. Make up the cleaning solution listed from Table 1.

| Table 1: Organic Cleaning Solution  |
|-------------------------------------|
| Preferred 0.1% (wt) Soda Ash        |
| pH 12, 30°C maximum                 |
| Preferred 0.1% (wt) NaOH 0.025% (wt |
| pH 12, 30°C maximum                 |

Notes: (wt) Denotes weight percent of active ingredient. Cleaning chemical symbols in order used: NaOH is sodium hydroxide.

### Cleaning the Organics from Membrane Elements

2. Low-flow pumping. Pump mixed, preheated cleaning solution to the vessel at conditions of low flow rate (about half of that shown in Table 2) and low pressure to displace the process water. Use only enough pressure to compensate for the pressure drop from feed to concentrate. The pressure should be low enough that essentially no permeate is produced. A low pressure minimizes re-deposition of dirt on the membrane. Dump the concentrate, as necessary, to prevent dilution of the cleaning solution minimizes re-deposition of dirt on the membrane. Dump the concentrate, as necessary, to prevent dilution of the cleaning solution.

3. Re-circulate. After the process water is displaced, cleaning solution will be present in the concentrate stream that can be recycled to the cleaning solution tank. Recycle the cleaning solution for 15 minutes or until there is no visible color change. If a color change occurs, dispose of the cleaning solution and prepare a new solution as described in step 2.

| Table 2: Recommended Feed Flow Rate Per Housing During High Flow Rate Re-Circulation |
|--|
| Dependent on number of elements in pressure vessel                                   |
| 4-Inch full-fit elements should be cleaned at 12-14 gpm (2.7-3.2 m <sup>3</sup> /hr) |

4. Soak. Turn the pump off and allow the elements to soak. Soak the elements for 1 -15 hours (soaking overnight will give best results). To maintain temperature during an extended soak period, use a slow recirculation rate (about 10 percent of that shown in Table 2). Soak time will vary depending on the severity of the fouling. For lightly fouled systems, a soak time of 1-2 hours is sufficient.

5. High-flow pumping. Feed the cleaning solution at the rates shown in Table 2 for 45 minutes. The high flow rate flushes out the foulants removed from the membrane surface by the cleaning. If the elements are heavily fouled, using a flow rate that is 50 percent higher than shown in Table 2 may aid cleaning. At higher flow rates, excessive pressure drop may be a problem. The maximum recommended pressure drops are 15 psi per element or 50 psi per multi-element vessel, whichever value is more limiting.



## MEMBRANE CLEANING CONTINUED

6. Flush out. Pre-filtered raw water can be used for flushing out the cleaning solution, unless there will be corrosion problems (e.g., stagnant seawater will corrode stainless steel piping). To prevent precipitation, the minimum flush out temperature is 20°C. The system should be flushed for 1 hour.

7. The system should be restarted. Elements and the system need to stabilize before taking any data. The stabilization period will vary depending on the severity of the fouling. To regain optimum performance, it may take several cleaning and soak cycles.

**NOTE:** Recommendations made here are specifically designed for the membrane elements inserted in the Rover reverse osmosis and nanofiltration elements. These recommendations, such as cleaning procedures and chemicals employed, may not be compatible with other brands of membrane elements. It is your responsibility to ensure the suitability of these recommendations and procedures if they are applied to membrane elements other than those which come with your system.

**NOTE:** No freedom from any patent owned by Seller or others is to be inferred. Because use conditions and applicable laws may differ from one location to another and may change with time, Customer is responsible for determining whether products and the information in this document are appropriate for Customer's use and for ensuring that Customer's workplace and disposal practices are in compliance with applicable laws and other governmental enactments. Seller assumes no obligation or liability for the information in this document.

NO WARRANTIES ARE GIVEN; ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED.

### Additional Information

By experience, the cleaning solution of Na4EDTA with caustic has been found to be slightly less effective than a standard caustic solution or a solution of caustic and Na-DSS. For any solution, contact time is critical. Several overnight soaks may be necessary to restore the system performance. After the elements are clean it is very beneficial to clean one additional time in order to clean off the last remaining biofilm layer on the surface of the membrane. Any remaining biofilm will tend to attract and trap dirt, so an extra cleaning will increase the time between cleanings. For industrial systems where the permeate or product water is not used for drinking, a non-oxidizing biocide can be used prior to step 1 of the cleaning procedure to kill any bacteria or biofilm in the system. Please refer to separate instructions on methods for sanitizing membrane systems (i.e., "Sanitization with DBNPA - Tech Facts"). If the only choice for a sanitizing agent is an oxidant, such as hydrogen peroxide, the system must be cleaned before sanitization.



## INORGANIC FOULANT CLEANING

The following cleaning procedures are designed specifically for membranes that have been fouled with organic matter. Review the general cleaning instructions for information that is common to all types of cleaning such as suggested equipment, pH and temperature limits, and recommended flow rates.

### Safety Precautions

1. When using any chemical indicated here in subsequent sections, follow accepted safety practices. Consult the chemical manufacturer for detailed information about safety, handling and disposal.

2. When preparing cleaning solutions, ensure that all chemicals are dissolved and well mixed before circulating the solutions through the membrane elements.

3. It is recommended the membrane elements be flushed with good-quality chlorine-free water after cleaning. Permeate water is recommended; but a de-chlorinated potable supply or pre-filtered feed water may be used, provided that there are no corrosion problems in the piping system.

Operate initially at reduced flow and pressure, to flush the bulk of the cleaning solution from the elements before resuming normal operating pressures and flows. Despite this precaution, cleaning chemicals will be present on the permeate side following cleaning. Therefore, permeate must be diverted to drain for at least 10 minutes or until the water is clear when starting up after cleaning.

4. During recirculation of cleaning solutions, the temperatures must not exceed 50°C at pH 2-10, 35°C at pH 1-1.1, and 30°C at pH 1-1.2.

5. For membrane elements greater than six inches in diameter, the flow direction during cleaning must be the same as during normal operation to prevent element telescoping, because the housing thrust ring is installed only on the reject end of the housing. This is also recommended for smaller elements.

## INORGANIC FOULANT CLEANING PROCEDURES

There are seven steps in cleaning membrane elements with Inorganics.

1. Make up the cleaning solution listed from Table 1.

|   |
|---|
| <b>Table 1: Inorganic Cleaning Solution</b> |
| <b>Preferred 2.0% (wt) Citric Acid</b>      |
| <b>pH 2, 45°C maximum</b>                   |
| <b>Alternate: Muriatic Acid</b>             |

Notes: (wt) denotes weight percent of active ingredient. Cleaning chemical symbols in order used: HCl is hydrochloric acid (Muriatic Acid).



## INORGANIC FOULANT CLEANING PROCEDURES CONTINUED

|  |
|--|
| Cleaning the Inorganics from Membrane Elements |
| Alternative 1.0%                               |
| Alternative 0.5% HsPCU                         |

Notes: (wt) denotes weight percent of active ingredient. Cleaning chemical symbols in order used: HCl is hydrochloric acid (Muriatic Acid).

2. Low-flow pumping. Pump mixed, preheated cleaning solution to the vessel at conditions of low flow rate (about half of that shown in Table 2) and low pressure to displace the process water. Use only enough pressure to compensate for the pressure drop from feed to concentrate. The pressure should be low enough that essentially no permeate is produced (approx. 60 psi). A low pressure minimizes redeposition of dirt on the membrane. Dump the concentrate, as necessary, to prevent dilution of the cleaning solution.

|            |         |       |
|------------|---------|-------|
| 2.5 Inches | 20 - 60 | 3 - 5 |
| 4 Inches   | 20 - 60 | 8-10  |

Notes: Dependent on number of elements in pressure vessel. • 4-Inch full-fit elements should be cleaned at 12-14 gpm (2.7-3.2 m<sup>3</sup>/hr).

3. Re-circulate. After the process water is displaced, cleaning solution will be present in the concentrate stream that can be recycled to the cleaning solution tank. Recycle the cleaning solution for 10 minutes or until there is no visible color change. If at anytime during the circulation process there is a change in pH or a color change, dispose of the solution and prepare a new solution as described in step 2. A pH of 2 must be maintained for the cleaning to be effective.

4. Soak. Turn the pump off and allow the elements to soak. Soak the elements for 1-15 hours (soaking overnight will give best results). To maintain temperature during an extended soak period, use a slow recirculation rate (about 10 percent of that shown in Table 2). Soak time will vary depending on the severity of the scaling. For lightly scaled systems, a soak time of 1-2 hours is sufficient.

5. High-flow pumping. Feed the cleaning solution at the rates shown in Table 2 for 10 minutes. The high flow rate flushes out the foulants removed from the membrane surface by the cleaning. If the elements are heavily fouled, using a flow rate that is 50 percent higher than shown in Table 2 may aid cleaning. At higher flow rates, excessive pressure drop may be a problem. The maximum recommended pressure drops are 15 psi per element or 50 psi per multi-element vessel, whichever value is more limiting.



## INORGANIC FOULANT CLEANING PROCEDURES CONTINUED

6. Flush out. Pre-filtered raw water can be used for flushing out the cleaning solution, unless there will be corrosion problems (e.g., stagnant seawater will corrode stainless steel piping). To prevent precipitation, the minimum flush out temperature is 20°C. The system should be flushed for one hour.

7. The system should be restarted. Elements and the system need to stabilize before taking any data. The stabilization period will vary depending on the severity of the fouling. To regain optimum performance, it may take several cleaning and soak cycles.

## FLUSHING THE SYSTEM

The system should be flushed weekly to remove sediment from the surface of the membranes. To manually flush the system follow the preceding steps:

1. The system must be running during the flushing procedure.
2. Fully open the concentrate valve
3. Allow the system to run for 10 to 20 minutes.
4. After 10 to 20 minutes, close the concentrate valve to its previous position, raising the operating pressure to 150 psi. Ensure the proper concentrate flow rate is going to the drain.
5. The system is now ready to operate.

## DRAINING THE SYSTEM FOR SHIPMENT

Prior to shipping or storing your system, the system should be cleaned with an appropriate cleaner, flushed with water, and protected from biological attack with an appropriate solution for membrane elements. The membrane housing(s) and plumbing lines of the system must be completely drained. Any water remaining in the plumbing of a system may freeze, causing serious damage. The party shipping or storing the system is responsible for any damage resulting from freezing.

### To drain the system:

1. Disconnect the inlet, concentrate, pre-filter, and permeate plumbing.
2. Drain all water from the pre-filter cartridge housings by unscrewing the housings, removing the pre-filter cartridges, and drain the water from the housings.
3. Disconnect the tubing from the connector on the permeate and concentrate inlets and outlets.
4. Fully open the concentrate valve.
5. Drain the flow meters by disconnecting the tubing from the bottom fitting of each meter.
6. Allow the system to drain for a minimum of eight hours or until the opened ports quit dripping.
7. After draining is complete, reconnect all of the plumbing.





## TROUBLESHOOTING

If the system production declines or the system stops working, check the mechanical components for any visual problems. Listed below are the items to check for any visual problems. Listed below are the items to check for two of the most commonly encountered problem conditions: Low system pressure and abnormal permeate flow. Also refer to the following reverse osmosis troubleshooting matrix.

### Low System Pressure

Low system pressure occurs when sufficient feed water pressure and flow are not obtained. This causes the high-pressure reverse osmosis pump to cavitate or form bubbles. Failure to provide the proper feed will result in lower system pressure that may result in low production and poor rejection. Check the following components:

1. **Pump:** Isolate the pump and determine how much pressure can be achieved. This can be determined by checking the pump discharge pressure gauge at this point. If the system is not equipped with this gauge, disconnect the hose that runs from the pump to the pressure vessel. Install a pressure gauge. The pressure of the pump must reach at least 190 psi when the flow is restricted.
2. **Pre-Filter:** Check the differential in the pre-filter gauges to determine if the filter needs to be replaced. If the system is not equipped with these gauges, examine the pre-filter cartridge to make sure that it is not clogged and does not restrict feed flow to the pump. Replace, if necessary.
3. **Low Feed Water Flow Rate:** Determine that the system is getting a sufficient volume of feed water. Disconnect the feed water hose from the system and place it in a one gallon bucket. Measure the time it takes to fill the bucket to determine the feed flow. (Feed flow is measured in gallons per minute, so divide 1 gallon by the time in minutes to obtain the flow rate). Refer to the System Specifications for the required feed flow.
4. **Electric:** Check to ensure that there are no electrical fuses blown and that all electrical connections are secure. Use a voltmeter to verify that the motor is getting sufficient power.
5. **Pressure Gauge:** Check for foreign matter on the gauge fitting. Remove any visible matter and replace the fitting. Verify that the tube is not pushed too far inside the fitting. This could restrict flow and cause an inaccurate display. If the fitting and tube are fine and the pressure gauge is still malfunctioning, the gauge should be replaced.
6. **Concentrate Control Valve:** The concentrate control valve may have a tear in the diaphragm.

Remove the valve, inspect the diaphragm, and replace if necessary.

### Abnormal Permeate Flow

Permeate flow should be within 15% of the rated production, after correcting the feed water temperatures above or below 77°F. Check your permeate flow meter to determine the permeate flow rate. If the system does not have a permeate flow meter, measure the time it takes to fill a 1 gallon container then calculate the permeate flow rate at gallons per minute or gallons per day.

**NOTE:** To determine the temperature correction factor, locate the Temperature Correction Table in this User's Manual and follow the directions.



## TROUBLESHOOTING CONTINUED

| Symptoms                        |               |                             | Location                   | Possible Causes   | Verification   | Corrective Action   |
|---------------------------------|---------------|-----------------------------|----------------------------|---|--|---|
| Salt Passage                    | Permeate Flow | Pressure Drop               |                            |   |  |   |
| Normal to Increased             | Decreased     | Normal to Increased         | Predominately First Stage  | Metal Oxide Fouling   | Analysis of Metal Ions in Cleaning Solution.   | Improve pretreatment to remove metals. Clean with Acid Cleaners.  |
| Normal to Increased             | Decreased     | Increased                   | Predominately First Stage  | Colloidal Fouling   | SDI Measurement of Feed Water.   | Optimize pretreatment for colloid removal. Clean with high pH anionic cleaners  |
| Increased                       | Decreased     | Increased                   | Predominately First Stage  | Scaling (CaSO <sub>4</sub> , CaSO <sub>3</sub> , BaSO <sub>4</sub> , SiO <sub>2</sub> ) | Analysis of metal ions in cleaning solution by checking LSI of reject. Calculate max solubility of CaSO <sub>4</sub> , BaSO <sub>4</sub> , SiO <sub>2</sub> in reject. | Increase acid addition and antiscalant dosage for CaVOS and CaCO <sub>4</sub> . Reduce recovery. Clean with Acid Cleaners.  |
| Normal to Moderate Increase     | Decreased     | Normal to Moderate Increase | Any Stage                  | Biological Fouling  | Bacteria count in permeate and reject. Slime in pipes and pressure vessels.  | Shock dosage of Sodium Bisulfate. Continuous feed of Sodium Bisulfate at reduced pH. Formaldehyde disinfection. Chlorination and de-chlorination. Replace cartridge filters |
| Decreased or Slightly Increased | Decreased     | Normal                      | Any Stage                  | Organic Fouling   | Destructive Element Testing.   | Activated Carbon or another pretreatment. Clean with high pH cleaner.   |
| Increased                       | Increased     | Decreased                   | Most Severe in First Stage | Chlorine Oxidation  | Chlorine Analysis of feed water. Destructive element test.   | Check Chlorine feed equipment and de-chlorination system.   |
| Increased                       | Increased     | Decreased                   | Most Severe in First Stage | Abrasion of membrane by   | Microscopic solids analysis  | Improve pre-treatment. Check  |



## TROUBLESHOOTING CONTINUED

|           |                     |           |           | Crystalline Material                 | of feed. Destructive element test                   | all filters for media leakage                           |
|-----------|---------------------|-----------|-----------|--------------------------------------|---|---|
| Increased | Normal to Increased | Decreased | At Random | O-Ring Leaks, End or Side Seal Leaks | Probe test. Vacuum test. Colloidal material test    | Replace O-Rings. Repair or replace elements.            |
| Increased | Normal to Low       | Decreased | At Random | Recovery Too High                    | Check Flows and Pressure Against Design Guidelines. | Reduce the recovery rate. Calibrate and/or add sensors. |

## SERVICE ASSISTANCE

### If service assistance is required, take the following steps:


1. Call your distributor.
  - a. Prior to making the call, have the following information available:
    - i. Machine installation date
    - ii. Serial number (found on left-hand side of front panel)
    - iii. Daily Log Sheets
    - iv. Current operating parameters (i.e., flow, operating pressures, pH, etc.)
    - v. Detailed description of problem




**TROUBLESHOOTING CONTINUED**

|                                       |                        |
|---------------------------------------|------------------------|
| Company:                              | Date of Start-Up:      |
| Location:                             | Date of Last Cleaning: |
| Week of:                              | Cleaning Formulation:  |
| System Serial #:                      |                        |
| Date                                  |                        |
| Time                                  |                        |
| Hours of Operation                    |                        |
| Cartridge Filter Inlet Pressure (psi) |                        |
| Differential Pressure (psi)           |                        |
| Permeate Pressure (psi)               |                        |
| Feed Pressure (psi)                   |                        |
| Concentrate Pressure (psi)            |                        |
| Differential Pressure (psi)           |                        |
| Pump Discharge Pressure (psi)         |                        |
| Permeate Flow (GPM)                   |                        |
| Concentrate Flow (GPM)                |                        |
| Feed Flow (GPM)                       |                        |
| Recovery %                            |                        |
| Feed Temperature                      |                        |
| Feed Conductivity (mg/L)              |                        |
| Permeate Conductivity (mg/L)          |                        |
| Rejection %                           |                        |

TECHNICAL DRAWING & DIAGRAM

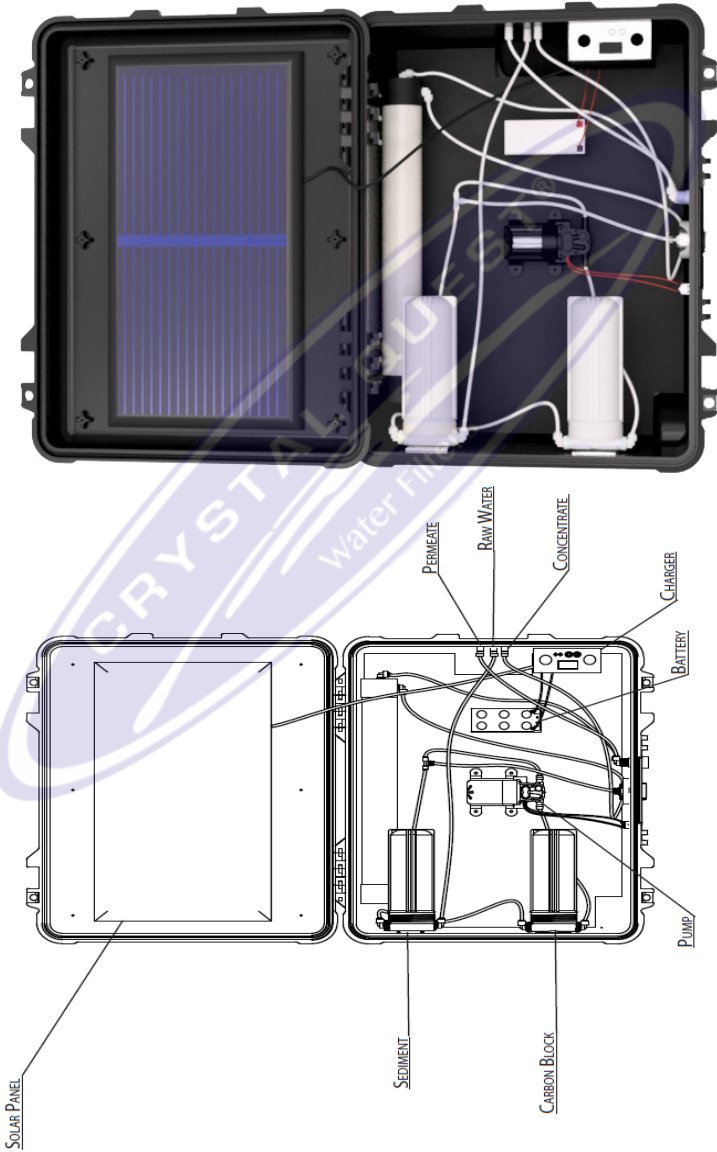

**TECHNICAL DRAWING & DIAGRAM**

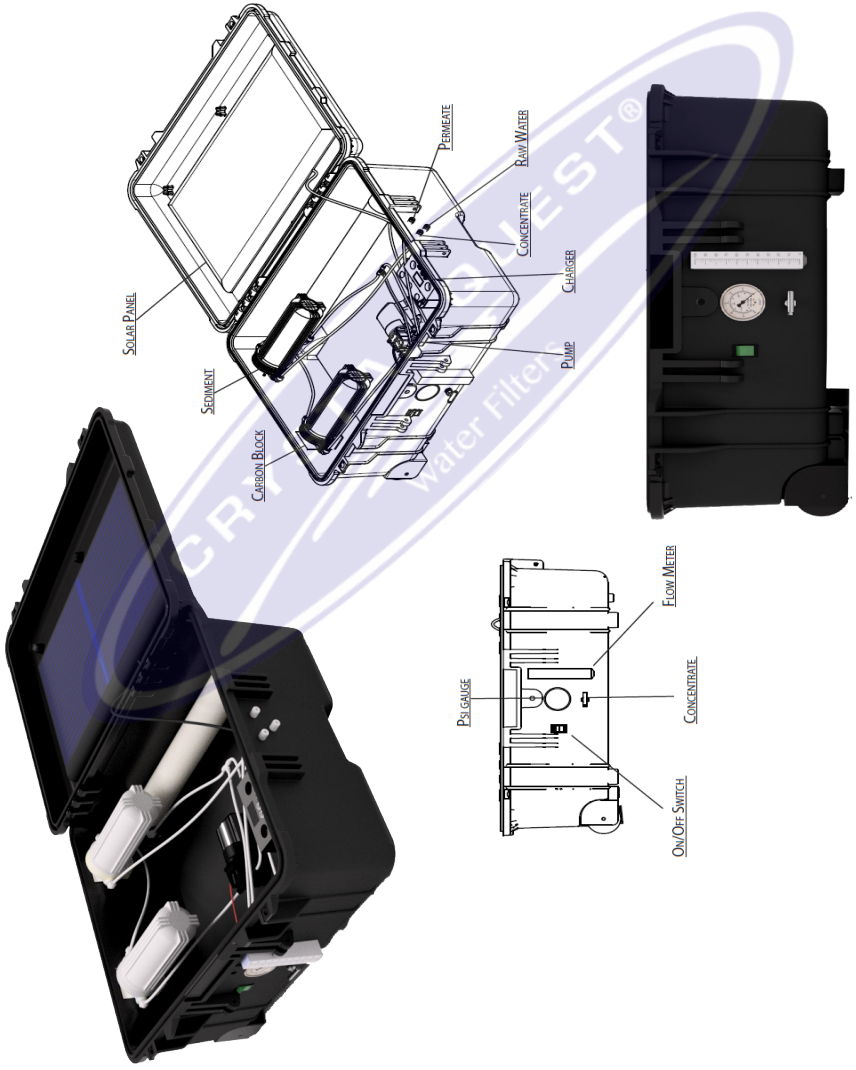



**TEMPERATURE CORRECTION FACTORS FOR MEMBRANE FLUX**

| Tempature | Temperature | CA<br>(Cellulose Ace-<br>tate) | TF<br>(Thin Film<br>Composite) |
|-----------|-------------|--------------------------------|--------------------------------|
| Celsius   | Fahrenheit  |                                |                                |
| 10°       | 50°         | 1.468                          | 1.711                          |
| 11°       | 52°         | 1.429                          | 1.648                          |
| 12°       | 54°         | 1.391                          | 1.588                          |
| 13°       | 55°         | 1.355                          | 1.530                          |
| 14°       | 57°         | 1.320                          | 1.475                          |
| 15°       | 59°         | 1.286                          | 1.422                          |
| 16°       | 61°         | 1.221                          | 1.323                          |
| 17°       | 63°         | 1.190                          | 1.276                          |
| 18°       | 64°         | 1.160                          | 1.232                          |
| 19°       | 66°         | 1.132                          | 1.189                          |
| 20°       | 68°         | 1.104                          | 1.148                          |
| 21°       | 70°         | 1.076                          | 1.109                          |
| 26°       | 79°         | 1.050                          | 1.071                          |
| 24°       | 75°         | 1.025                          | 1.035                          |
| 25°       | 75°         | 1.000                          | 1.000                          |
| 26°       | 79°         | 0.988                          | 0.971                          |
| 27°       | 81°         | 0.976                          | 0.943                          |
| 28°       | 82°         | 0.964                          | 0.915                          |
| 29°       | 84°         | 0.953                          | 0.889                          |



## WARRANTY & GUARANTEE

### Void-ability of Warranty

This Warranty shall be void and unenforceable as to any Seller product which has been damaged by accident, mishandling, abuse or has been repaired, modified, altered, disassembled or otherwise tampered with by anyone other than Seller or an authorized Seller service representative; or, if any replacement parts are not authorized by Seller have been used, or, the product has not been installed, operated and maintained in strict accordance and adherence with the operating documentation and manuals for such product. Any expressed warranty, or similar representation of performance set forth in the operation documentation for a reverse osmosis, nanofiltration, or ultrafiltration membrane incorporated into a Seller product shall be void and unenforceable unless the feed water requirements set forth in the operating documentation for such product are unequivocally and strictly adhered to.

### Limitations and Exclusions

THIS WARRANTY AND REMEDIES DESCRIBED HEREIN AND HEREIN ABOVE ARE EXCLUSIVE AND IN LIEU OF ANY AND ALL OTHER WARRANTY OR REMEDIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL THE SELLER BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL OR OTHER SIMILAR TYPES OF DAMAGES, FOR DAMAGES FOR THE LOSS OF PRODUCTION OR PROFITS, OR INJURY TO PERSON OR PROPERTY. NO PERSON HAS ANY AUTHORITY TO BIND SELLER TO OTHER THAN WHAT IS SET FORTH ABOVE.

THIS WARRANTY GIVES THE BUYER SPECIFIC LEGAL RIGHTS AND THE BUYER MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION. THE PARTIES RECOGNIZE AND AGREE, THAT IN ALL RESPECTS THE LAWS OF THE STATE OF GEORGIA SHALL APPLY TO AND SHALL GOVERN ANY INTERPRETATION OR LEGAL SIGNIFICANCE OF THIS DOCUMENT.

NO WARRANTY OR OTHER LIABILITY OF SELLER TO BUYER UNDER THIS AGREEMENT OR OTHERWISE WILL IN ANY EVENT EXCEED THE COST OF REPLACEMENT OF THE APPLICABLE SELLER PRODUCT, PART, OR ACCESSORY THAT IS SUBJECT TO ANY BREACH OF SELLER'S WARRANTY. SELLER WILL NOT BE LIABLE FOR ANY DAMAGE TO ANY PROPERTY OF BUYER OR TO BUYER'S CUSTOMERS FOR ANY CONSEQUENTIAL, INCIDENTAL, OR ECONOMIC LOSS OR COMMERCIAL DAMAGE WHATSOEVER. REMEDIES HEREIN PROVIDED ARE EXPRESSLY MADE THE SOLE AND EXCLUSIVE REMEDIES FOR BREACH OF ANY WARRANTY OR OTHER OBLIGATION HEREUNDER EXPRESS OR IMPLIED OR FROM THE OPERATION OF LAW.

KEEP THIS MANUAL FOR  
FUTURE REFERENCE AND  
UNIT MAINTENANCE

Product design is subject to change without notice.





## WARRANTY & GUARANTEE

### Warranty Terms

Subject to the terms and conditions set forth hereinafter, Seller warrants to the original purchaser (hereafter the "Buyer") that the products manufactured by Seller are free from defects in material and in workmanship for twelve (12) months from the Warranty Commencement Date (as defined below) only when used strictly in accordance with the applicable operating instructions and within the range of the operating conditions specified by Seller for each such product.

This Warranty does not extend to equipment or components manufactured by others into which a Seller product has been incorporated or to equipment or components which have been incorporated into a Seller product but, if allowable, Seller hereby assigns, without warranty, to the Buyer its interest, if any, under any warranty made by the manufacturer of such equipment or component. This Warranty does not cover disposable items such as fuses, lamps, filters, cartridges, or other such disposable items, which must be replaced periodically under the normal and foreseeable operating conditions of the goods warranted hereby.

### Warranty Commencement Date

The Warranty Commencement Date for each Seller product shall be the later of the date of: (1) receipt by the Buyer, or (2) the date of installation at the Buyer's premises provided that such installation must occur within three (3) months of shipment from the Seller's manufacturing facility in Georgia. In no event shall the Warranty Commencement Date exceed three (3) months from the shipment from the Seller's manufacturing facility. The Buyer shall provide proof of purchase in order to exercise rights granted under this Warranty. If requested by manufacturer, the Buyer must also provide proof of the installation date. Proof of installation shall be returned by Buyer to Seller within thirty (30) days after installation.

### Warranty Service

SELLER'S OBLIGATION UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT (AT SELLER'S SOLE DISCRETION) OF ANY PRODUCT, OR COMPONENT THEREOF, PROVED TO BE DEFECTIVE IN MATERIAL OR WORKMANSHIP WITHIN THE COVERED WARRANTY PERIOD.



## WARRANTY & GUARANTEE

### Warranty Service

SELLER'S OBLIGATION UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT (AT SELLER'S SOLE DISCRETION) OF ANY PRODUCT, OR COMPONENT THEREOF, PROVED TO BE DEFECTIVE IN MATERIAL OR WORKMANSHIP WITHIN THE COVERED WARRANTY PERIOD.

The buyer, at the Buyer's risk and expense, shall be responsible for returning such product or component, only after obtaining a Return Merchandise Authorization (RMA) number from the Seller, arranging for freight prepaid, and in conformance with any special packaging and shipping instructions set forth on the operation documentation or RMA instructions, or as otherwise reasonably required, to the Seller's address set forth below, together with (1) RMA number issued by Seller at Buyer's request; (2) proof of purchase and, if necessary, proof of installation date; (3) a Return Merchandise Authorization Form; (4) a description of the suspected defects; (5) the serial number of the Seller product alleged to be defective; and (6) a description of the type of water and pretreatment equipment which has been utilized in connection with the product, if any. Seller shall, in Seller's reasonable discretion, be the sole judge of whether a returned product or component is defective in material or workmanship. Required or replaced products or components shall be returned surface freight. In genuine emergency situations, the Seller will (at Seller's sole discretion) forward replacement parts to Buyer without waiting for authorized return of the questionable part(s). In such cases, Buyer will issue a purchase order or other payment guarantee prior to shipment. If the returned part is found to have been misused or abused, the defective part is not received by Seller within thirty (30) days; the Buyer will be invoiced for the replacement part(s) provided. This Warranty does not cover or include labor and/or travel to the Buyer's premise or location or any other location. Charges of \$1600 per day plus associated travel expenses will be incurred by the Buyer in providing the Warranty Service at any location other than Seller's main headquarters; that is if the Seller deems that the product is not covered by said Warranty. The Seller reserves the right to precondition such travel to Buyer's premises upon prepayment of Seller's anticipated costs of attending such premises.